


WWSCP
CPU Holder

The CPU Holder attaches to the beam structure to support a CPU.

WHAT'S INCLUDED
1 CPU Holder.

NOTES
Available in single CPU and double CPU format.
Sliding Worksurface (WWWSR) **cannot** be used with Accommodation Kit (WWSKL).

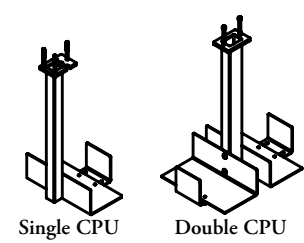

PRODUCT OPTIONS

Style	Finish
S Single CPU D Double CPU	Foundation Mica Accent

SAMPLE ORDER CODE

WWSCP S	74
---------	----

DIMENSIONS
INCHES / MM

Style
S
D

PRICING

Foundation	Mica/Accent
255	264
391	400