


Xpress

THECB

Base Feed

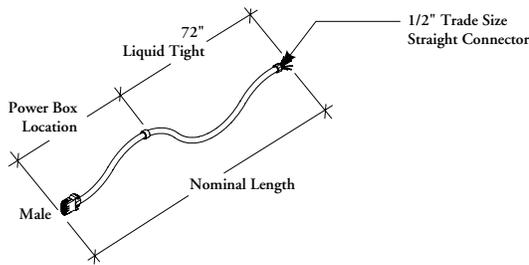

The Base Feed connects to the building supply and routes power into the workstation from the wall or floor.

WHAT'S INCLUDED

1 base feed harness and hardware.

WHAT'S EXCLUDED

Power Harness Extension, Power Box, Wire Management Cover and Base Feed Power Pole.

NOTES

Must be used with Wire Management Cover – Adaptable Leg (THEML)

The connection to the building power supply must be executed by a qualified electrician.

The same wire system must be specified for all electrical components in a configuration.

Check local codes for limits or restrictions on harness length.

PRODUCT OPTIONS

Mounting Option	Wire System	Desk Width	Country of Installation
M Modesty Panel	4B 4-Wire 5D 5-Wire 7G 7-Wire Isolated Ground 8T 8-Wire Isolated Ground 8N 8-Wire Separate Neutral 8K 8-Wire Dual Isolated	36, 42, 48, 54, 60, 66, 72, 78, 84	A Canada / U.S.A.

SAMPLE ORDER CODE

THECB M	7G	66	A
----------------	-----------	-----------	----------

DIMENSIONS INCHES / MM

Dw
36 / 914
42 / 1067
48 / 1219
54 / 1372
60 / 1524
66 / 1676
72 / 1829
78 / 1981
84 / 2134

PRICING

MODESTY PANEL MOUNTING OPTION (M)

4-Wire (4B)	5-Wire (5D)	7- to 8-Wire (7G to 8K)
450	461	529
454	465	535
456	470	538
461	474	546
464	478	552
469	483	558
471	487	561
474	494	566
478	498	575