


Xpress

THECB Base Feed

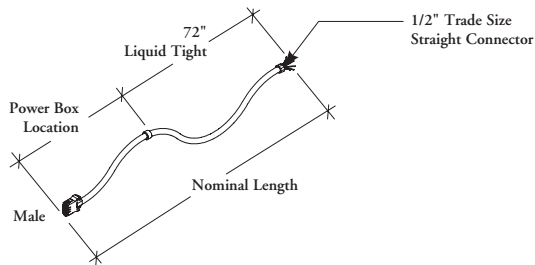

The Base Feed connects to the building supply and routes power into the workstation from the wall or floor.

WHAT'S INCLUDED

1 base feed harness and hardware.

WHAT'S EXCLUDED

Power Harness Extension, Power Box, Wire Management Cover and Base Feed Power Pole.

NOTES

Must be used with Wire Management Cover – Adaptable Leg (THEML)

The connection to the building power supply must be executed by a qualified electrician.

The same wire system must be specified for all electrical components in a configuration.

Check local codes for limits or restrictions on harness length.

PRODUCT OPTIONS

| Mounting Option | Wire System | Desk Width | Country of Installation |
|------------------------|---|------------------------------------|--------------------------|
| M Modesty Panel | 4B 4-Wire 5D 5-Wire 7G 7-Wire Isolated Ground 8T 8-Wire Isolated Ground 8N 8-Wire Separate Neutral 8K 8-Wire Dual Isolated | 36, 42, 48, 54, 60, 66, 72, 78, 84 | A Canada / U.S.A. |

SAMPLE ORDER CODE

| | | | |
|----------------|-----------|-----------|----------|
| THECB M | 7G | 66 | A |
|----------------|-----------|-----------|----------|

DIMENSIONS INCHES / MM

| Dw |
|-----------|
| 36 / 914 |
| 42 / 1067 |
| 48 / 1219 |
| 54 / 1372 |
| 60 / 1524 |
| 66 / 1676 |
| 72 / 1829 |
| 78 / 1981 |
| 84 / 2134 |

PRICING

MODESTY PANEL MOUNTING OPTION (M)

| 4-Wire (4B) | 5-Wire (5D) | 7- to 8-Wire (7G to 8K) |
|-------------|-------------|-------------------------|
| 343 | 349 | 402 |
| 345 | 353 | 407 |
| 347 | 357 | 410 |
| 349 | 361 | 415 |
| 352 | 364 | 419 |
| 356 | 367 | 424 |
| 358 | 370 | 427 |
| 361 | 375 | 431 |
| 364 | 378 | 437 |