


The Four-Way Splitter attaches to a harness to split power at floor level.

**WHAT'S INCLUDED**

1 four-way splitter and hardware.

**EWDB  
4-Way Splitter**

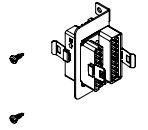

The I-Connector is used to join two harnesses when a single harness length is not long enough.

**WHAT'S INCLUDED**

1 I-connector.

**EWIC  
I-Connector**



**PRODUCT OPTIONS**

**Country of Installation**

A Canada/U.S.A.

**SAMPLE ORDER CODE**

**EWIC A**

**EWDB  
FOUR-WAY SPLITTER**

124

**EWIC  
I-CONNECTOR**

38