

The Split Base Feed connects to the building supply and routes power into the workstation from the wall or floor.

**WHAT'S INCLUDED**

1 split base feed and mounting hardware.

**WHAT'S EXCLUDED**

i-Connector and Four-Way Splitter.

**NOTES**

 
The Split Base Feed is mounted under a structural beam.

The connection to the building power supply and in the junction box must be executed by a qualified electrician.

Check local codes for limits or restrictions on harness length.

Refer to Application Guide for applications.

## JNESBF Split Base Feed



**PRODUCT OPTIONS**

Mounting Style	Wire System	Length	Country of Installation	PVC Option
<b>B</b> Beam-Mounted	<b>7K</b> 7-Wire Dual Non Isolated <b>7T</b> 7-Wire Non Isolated Ground <b>8K</b> 8-Wire Dual Isolated <b>8T</b> 8-Wire Isolated Ground	072	<b>A</b> Canada/U.S.A.	<b>S</b> Standard <b>V</b> PVC Free

**SAMPLE ORDER CODE**

<b>JNESBF B</b>	<b>8T</b>	<b>072</b>	<b>A</b>	<b>S</b>
-----------------	-----------	------------	----------	----------

**DIMENSIONS  
INCHES / MM**

<b>L</b>
72 / 1829

**PRICING**

STANDARD (S)		PVC FREE (V)	
7T or 8T	7K or 8K	7T or 8T	7K or 8K
568	596	682	715