

The Split Base Feed connects to the building supply and routes power into the workstation from the wall or floor.

WHAT'S INCLUDED

1 split base feed and mounting hardware.

WHAT'S EXCLUDED

i-Connector and Four-Way Splitter.

NOTES

 
The Split Base Feed is mounted under a structural beam.

The connection to the building power supply and in the junction box must be executed by a qualified electrician.

Check local codes for limits or restrictions on harness length.

Refer to Application Guide for applications.

JNESBF Split Base Feed



PRODUCT OPTIONS

Mounting Style	Wire System	Length	Country of Installation	PVC Option
B Beam-Mounted	7K 7-Wire Dual Non Isolated 7T 7-Wire Non Isolated Ground 8K 8-Wire Dual Isolated 8T 8-Wire Isolated Ground	072	A Canada/U.S.A.	S Standard V PVC Free

SAMPLE ORDER CODE

JNESBF B	8T	072	A	S
-----------------	-----------	------------	----------	----------

**DIMENSIONS
INCHES / MM**

L
72 / 1829

PRICING

STANDARD (S)		PVC FREE (V)	
7T or 8T	7K or 8K	7T or 8T	7K or 8K
568	596	682	715