



# JNESBF

## Split Base Feed

The Split Base Feed connects to the building supply and routes power into the workstation from the wall or floor.

**WHAT'S INCLUDED**

1 split base feed and mounting hardware.

**WHAT'S EXCLUDED**

i-Connector and Four-Way Splitter.


**NOTES**

The Split Base Feed is mounted under a Structural Beam (JNDBB), EZ Fence Beam (JZSBB), EZ Fence Beam for Corridor (JZSBS), Chicago Structural Beam (JNDCB), Chicago EZ Fence Beam (JZSCB) or Chicago EZ Fence Beam for Corridor (JZSCS).

The connection to the building power supply and in the junction box must be executed by a qualified electrician.

Check local codes for limits or restrictions on harness length.

Refer to Application Guide for applications.

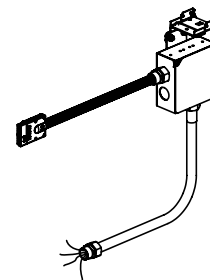

**PRODUCT OPTIONS**

Mounting Style	Wire System	Length	Country of Installation	PVC Option
<b>B</b> Beam-Mounted	<b>7K</b> 7-Wire Dual Non Isolated	036, 072	<b>A</b> Canada/U.S.A.	<b>S</b> Standard
	<b>7T</b> 7-Wire Non Isolated Ground			<b>V</b> PVC Free
	<b>8K</b> 8-Wire Dual Isolated			
	<b>8T</b> 8-Wire Isolated Ground			

**SAMPLE ORDER CODE**

<b>JNESBF B</b>	<b>8T</b>	<b>072</b>	<b>A</b>	<b>S</b>
-----------------	-----------	------------	----------	----------

**DIMENSIONS**  
INCHES / MM

L
36 / 914
72 / 1829

**PRICING**

**STANDARD (S)**

7T, 8T, 7K or 8K
335
362

**PVC FREE (V)**

7T, 8T, 7K or 8K
363
437