

M W W E B C Base Feed Cover

The Base Feed Cover is used to route power & data cables into the workstation from the floor.

WHAT'S INCLUDED

1 base feed cover and mounting brackets.

NOTES

The Base Feed Cover goes from the floor and is attached to the frame structure along the center support beam where beam clamps or accessory beam clamps are located.



PRODUCT OPTIONS

Finish
Foundation
Mica
Accent
European Accent

SAMPLE ORDER CODE

MWWEBC 74

PRICING

Foundation	Mica/Accent/ Euro Accent
185	191