

W W E B C

Base Feed Cover

The Base Feed Cover is used to route power & data cables into the workstation from the floor.

WHAT'S INCLUDED

1 base feed cover and mounting brackets.

NOTES

The Base Feed Cover goes from the floor and is attached to the frame structure along the center support beam where beam clamps or accessory beam clamps are located.



PRODUCT OPTIONS

	Finish
Foundation	
Mica	
Accent	

SAMPLE ORDER CODE

WWEBC 74

PRICING

Foundation	Mica/Accent
222	229