

## W W E B C

### Base Feed Cover

The Base Feed Cover is used to route power & data cables into the workstation from the floor.

#### WHAT'S INCLUDED

1 base feed cover and mounting brackets.

#### NOTES

The Base Feed Cover goes from the floor and is attached to the frame structure along the center support beam where beam clamps or accessory beam clamps are located.



#### PRODUCT OPTIONS

Finish
Foundation
Mica
Accent

#### SAMPLE ORDER CODE

WWEBC 74

#### PRICING

Foundation	Mica/Accent
266	274