


WWSCP  
CPU Holder

The CPU Holder attaches to the beam structure to support a CPU.

**WHAT'S INCLUDED**  
1 CPU Holder.

**NOTES**  
Available in single CPU and double CPU format.  
Sliding Worksurface (WWWRS) **cannot** be used with Accommodation Kit (WWSKL).

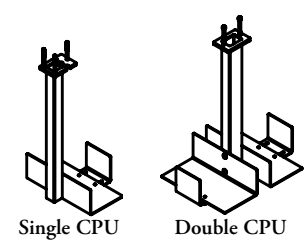

PRODUCT OPTIONS

Style	Finish
<b>S</b> Single CPU <b>D</b> Double CPU	Foundation Mica Accent

SAMPLE ORDER CODE

WWSCP S	74
---------	----

DIMENSIONS  
INCHES / MM

Style
S
D

PRICING

Foundation	Mica/Accent
255	264
391	400