

WWSCP CPU Holder

The CPU Holder attaches to the beam structure to support a CPU.


WHAT'S INCLUDED

1 CPU Holder.

NOTES

Available in single CPU and double CPU format.

Sliding Worksurface (WWWRS) **cannot** be used with Accommodation Kit (WWSKL).

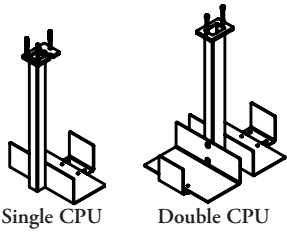

PRODUCT OPTIONS

Style	Finish
S Single CPU D Double CPU	Foundation Mica Accent

SAMPLE ORDER CODE

WWSCP S	74
---------	----

DIMENSIONS INCHES / MM

Style	PRICING	
	Foundation	Mica/Accent
S	245	254
D	376	385