

The Four-Way Connector connects to receptacle or pass-through harness to route power in three directions for distribution between two to four adjacent panels. Outlets cannot be connected to the Four-Way Connector.


**WHAT'S INCLUDED**

1 four-way connector.

**E F**

**Four-Way Connector**

317

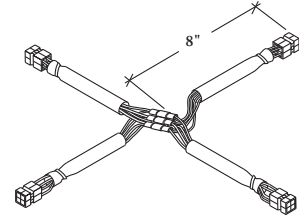

**PRODUCT OPTIONS**

| Wire System                | Country of Installation |
|----------------------------|-------------------------|
| 4B 4-Wire                  | A Canada/U.S.A.         |
| 5D 5-Wire                  |                         |
| 7G 7-Wire Isolated Ground  |                         |
| 8T 8-Wire Isolated Ground  |                         |
| 8N 8-Wire Separate Neutral |                         |
| 8K 8-Wire Dual Isolated    |                         |

**SAMPLE ORDER CODE**

|              |          |
|--------------|----------|
| <b>EF 5D</b> | <b>A</b> |
|--------------|----------|

| WIRE SYSTEM | PRICING |
|-------------|---------|
| 4B          | 97      |
| 5D          | 97      |
| 7G          | 131     |
| 8T          | 131     |
| 8N          | 148     |
| 8K          | 166     |