

# workwall storage

UNDERSTANDING WORKWALL MODULES FOR CANTILEVER RUN-OFF . . . . .	370
UNDERSTANDING WORKWALL KNEESPACE MODULES . . . . .	371
WORKWALL MODULES FOR CANTILEVER RUN-OFF COMPONENTS .	374
WORKWALL MODULES FOR CANTILEVER RUN-OFF BASICS . . .	376
WORKWALL KNEESPACE MODULE COMPONENTS . . . . .	377
WORKWALL KNEESPACE MODULE BASICS . . . . .	380
WORKWALL KNEESPACE MODULE REMOVABLE FRONT PANEL WIDTHS . . . . .	383
UNDERSTANDING WORKWALL BOOKCASES – MID – 21" H. . . .	388
WORKWALL BOOKCASE – MID – 21" H COMPONENTS . . . . .	390
WORKWALL BOOKCASE – MID – 21" H BASICS . . . . .	391
OPEN COMPARTMENT WIDTHS – WORKWALL BOOKCASE – MID – 21" H . . . . .	393
INTERIOR CLEARANCE – WORKWALL BOOKCASE – MID – 21" H. . .	394
PLANNING WITH WORKWALL MODULES & WORKWALL CREDENZAS FOR HEIGHT-ADJUSTABLE CANTILEVER RUN-OFF – MID – 21" H . . . . .	395
PLANNING WITH WORKWALL KNEESPACE MODULES & WORKWALL BOOKCASES – MID – 21" H. . . . .	396
WORKWALL STORAGE – INTEGRAL TOP – 29" H BASICS. . . . .	398





# workwall storage (continued)

WORKWALL CABINET & STRETCH PEDESTAL – MID – 21" H BASICS . . . . .	401
INTERIOR CLEARANCE – WORKWALL CABINET – MID – 21" H . . . .	402
UNDERSTANDING WORKWALL CREDENZAS – MID – 21" H . . . .	403
WORKWALL CREDENZA – MID – 21" H COMPONENTS . . . . .	407
WORKWALL CREDENZA – MID – 21" H BASICS. . . . .	410
WORKWALL CREDENZAS – HEIGHT-ADJUSTABLE CANTILEVER – RUN-OFF – MID – 21" H – BASICS . . . . .	413
WORKWALL CREDENZAS FOR FIXED OR HEIGHT-ADJUSTABLE WORKSURFACES – DRAWER WIDTHS . . . . .	415
INTERIOR CLEARANCE – WORKWALL CREDENZA – MID – 21" H . .	426
FILING DRAWER CAPACITIES – WORKWALL CREDENZAS – MID – 21" H FOR FIXED OR HEIGHT-ADJUSTABLE WORKSURFACES . . . . .	427
PLANNING WORKWALL CREDENZAS – MID – 21" H FOR FIXED OR HEIGHT-ADJUSTABLE WORKSURFACES . . . . .	428
PRODUCT OFFERING – WORKWALL STORAGE . . . . .	429
LOCK CHART – WORKWALL STORAGE. . . . .	432
CONNECTING DEVICES – WORKWALL STORAGE . . . . .	435
WORKWALL STORAGE FINISHES . . . . .	436
GRAIN DIRECTION – WORKWALL STORAGE . . . . .	438

## understanding workwall modules for cantilever run-off

All dimensions in this section are nominal



### workwall modules for cantilever run-offs

- Two styles can be specified:
  - for Height-Adjustable Cantilever Run-Off (BHKHC)
  - for Fixed-Height Cantilever Run-Off (BHKFC)
- Can support Wall Panels (B\_WCC, B\_WCO, B\_WAA, B\_WOO, B\_WMD, B\_WMO or B\_WMM)
- For more details on Workwall Modules for Cantilever Run-Off Applications, refer to page 395


#### Workwall Module – Height-Adjustable Cantilever Run-Off (BHKHC)

Only compatible with the following worksurfaces:

For more details on these products listed below, refer to Multi-Level Workstations Section

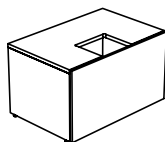

Height-Adjustable  
Cantilever Rectangular  
Run-Off  
(BH\_CR)





Height-Adjustable  
Cantilever Wing  
Shape Run-Off  
(BH\_CP)


#### Workwall Module – Fixed-Height Cantilever Run-Off (BHKFC)

Only compatible with the following worksurfaces:

For more details on these products listed below, refer to Multi-Level Workstations Section

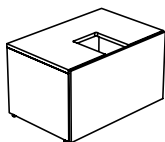

Fixed-Height  
Cantilever Rectangular  
Run-Off  
(B\_MCR)



Fixed-Height  
Cantilever Wing  
Shape Run-Off  
(B\_MCP)

# understanding workwall kneespace modules

## workwall kneespace modules



- Two styles can be specified:
  - Standard:**  
Fixed or Height-Adjustable Worksurfaces (BHKHW, BHKHF or BHKFW)
  - Full-Modesty:**  
Fixed or Height-Adjustable Worksurfaces (BHKHM, BHKHL or BHKFR)
- Can support Wall Panels (B\_WCC, B\_WCO, B\_WAA, B\_WOO, B\_WMD, B\_WMO or B\_WMM)
- For more details on Workwall Kneespace Module Applications, refer to page 396

## standard style


### Workwall Kneespace Module – Height-Adjustability (BHKHW)

Only products illustrated below can be installed on this module:


For more details on these products listed below, refer to Multi-Level Workstations Section

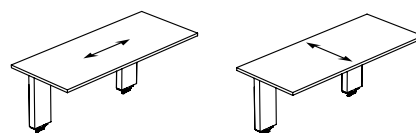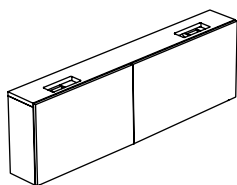


Height-Adjustable Rectangular Worksurfaces  
(BH\_RL or BH\_RC)

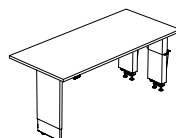


Height-Adjustable  
Rectangular Peninsula  
(BH\_RP)

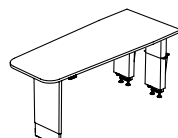


Height-Adjustable  
Tapered Peninsula  
(BH\_TP)

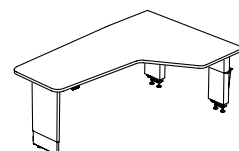


Height-Adjustable Extended  
Tapered Peninsula  
(BH\_PE)

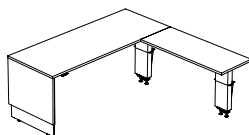

Height-Adjustable  
L-Shape Run-Off  
(BH\_LB)

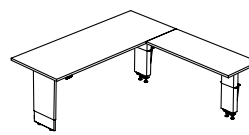


Height-Adjustable  
L-Shape Peninsula  
(BH\_L)

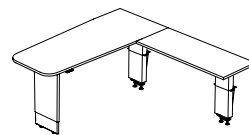


Height-Adjustable L-Shape  
Tapered Peninsula  
(BH\_LT)


For more details on these products listed below, refer to Meeting Tables Section

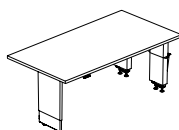


Height-Adjustable  
Rectangular Meeting  
Peninsula  
(B\_HRW)

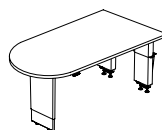

Height-Adjustable  
D-Shape Meeting  
Peninsula  
(B\_HDW)

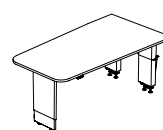

Height-Adjustable  
Tapered Meeting  
Peninsula  
(B\_HBW)

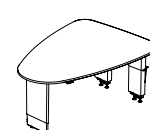

Height-Adjustable  
Diamond Meeting  
Peninsula  
(B\_HPWW)



# understanding workwall kneespace modules (continued)

standard style (continued)


## Workwall Kneespace Module – Height-Adjustability and Fixed Worksurface (BHKHF)

Only products illustrated can be installed on this module:

For more details on theses products listed below, refer to Multi-Level Workstations Section

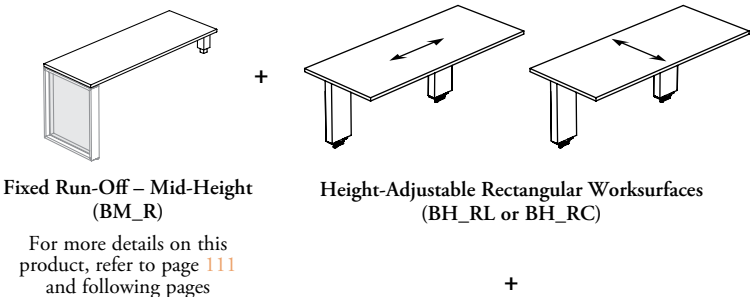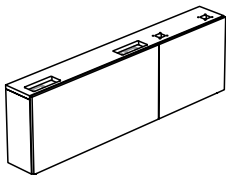



For more details on theses products listed below, refer to Meeting Tables Section

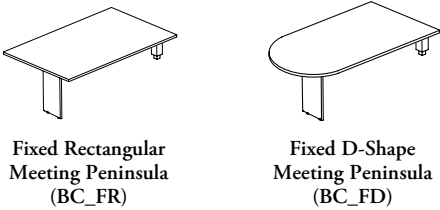


## Workwall Kneespace Module – Fixed Worksurface (BHKFW)

Only products illustrated can be installed on this module:

For more details on theses products listed below, refer to Multi-Level Workstations Section

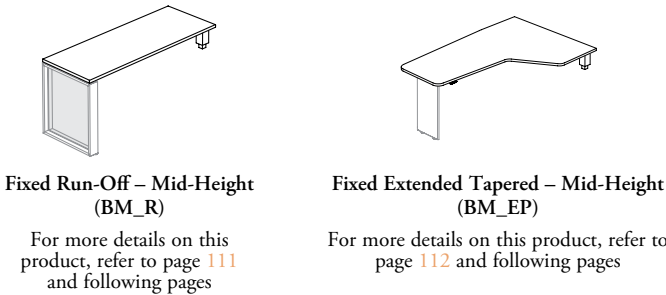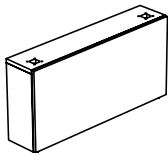

For more details on theses products listed below, refer to Meeting Tables Section

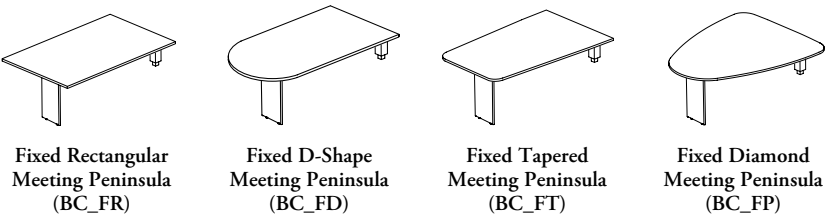

# understanding workwall kneespace modules (continued)

## workwall kneespace modules (continued)

### full-modesty style


Can be specified with or without Extension Panel, three styles available:

- No Extension Panel (N)
- With Extension Panel – Solid Colors/Horizontal (E)
- With Extension Panel – Vertical (V)


for more details, refer to page [379](#)

#### Workwall Kneespace Module for Full-Modesty Height-Adjustable Run-Off (BHKHM)


Only product illustrated below can be installed on this module:

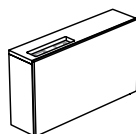

No Extension Panel (N)

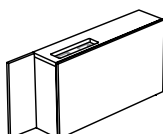


With Extension Panel (E or V)

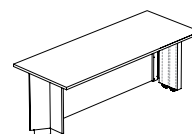



Full-Modesty Height-Adjustable Run-Off (BF\_R)

#### Workwall Kneespace Module for Full-Modesty Height-Adjustable Extended or "L" Run-Off (BHKHL)



Only products illustrated below can be installed on this module:

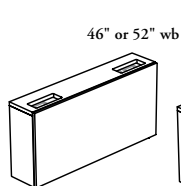


No Extension Panel (N)

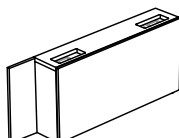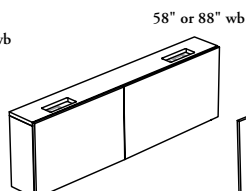

With Extension Panel (E or V)

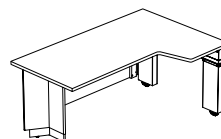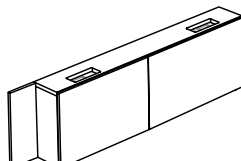


Full-Modesty Height-Adjustable Run-Off (BF\_E)

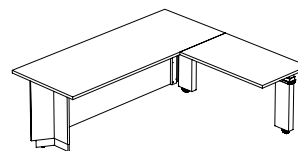


Full-Modesty Height-Adjustable Run-Off (BF\_L)

#### Workwall Kneespace Module for Full-Modesty Fixed Run-Off (BHKFR)


Only product illustrated below can be installed on this module:

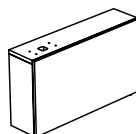

No Extension Panel (N)

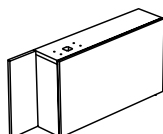

With Extension Panel (E or V)

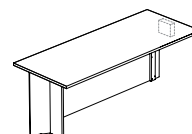


Full-Modesty Fixed Run-Off (BF\_MR)

# workwall modules for cantilever run-off components

The following should be considered when planning with Expansion Casegoods Workwall Modules for Height-Adjustable or Fixed-Height Cantilever Run-Offs.


## components & cable routing for height-adjustable cantilever run-off configurations

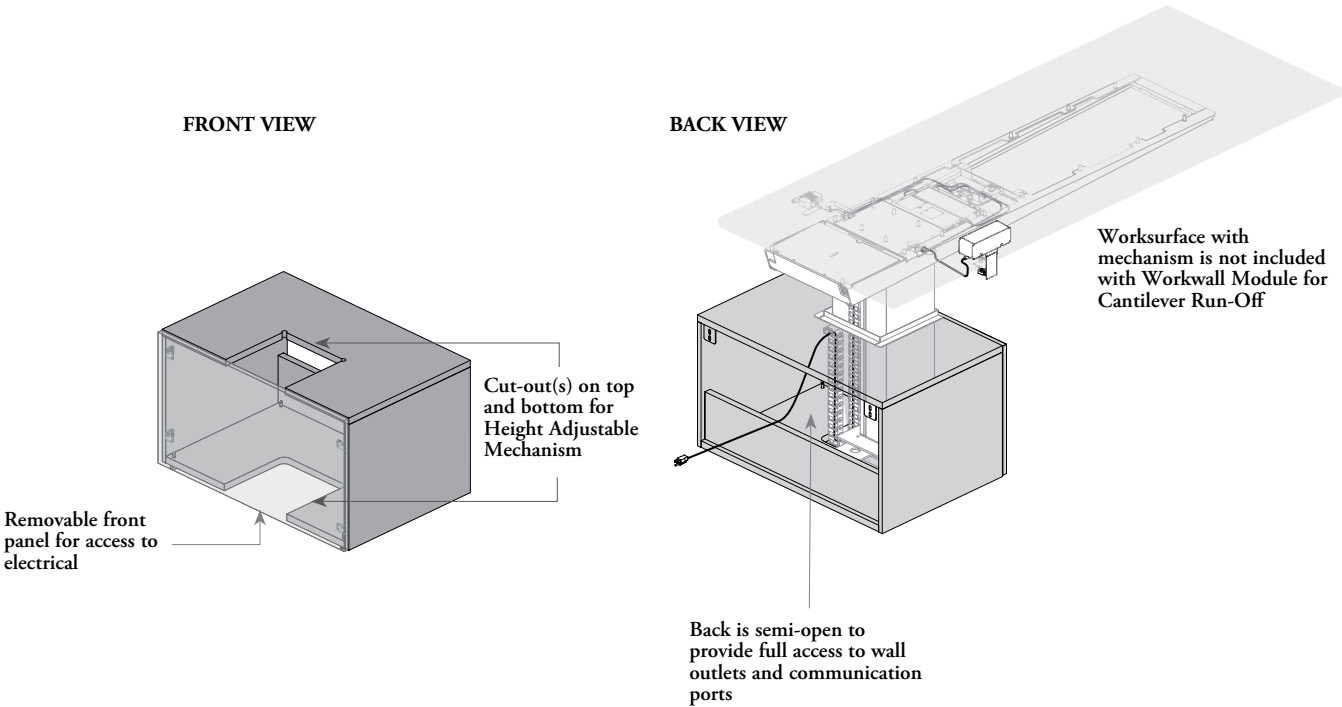

## user kneespace


(Height-Adjustable Cantilever Rectangular Run-Off (BH\_CR) (Shown) and Height-Adjustable Cantilever Wing Shape Run-Off (BH\_CP))

### 24" Storage Depth

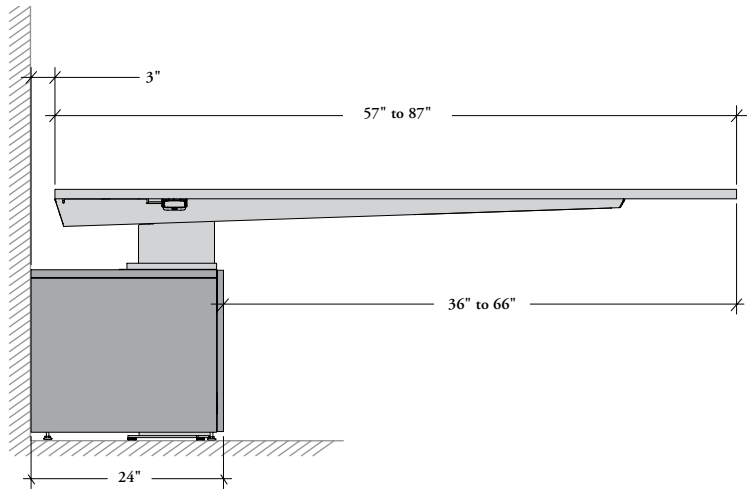

# workwall modules for cantilever run-off components (continued)


components & cable routing for fixed-height cantilever run-off configurations

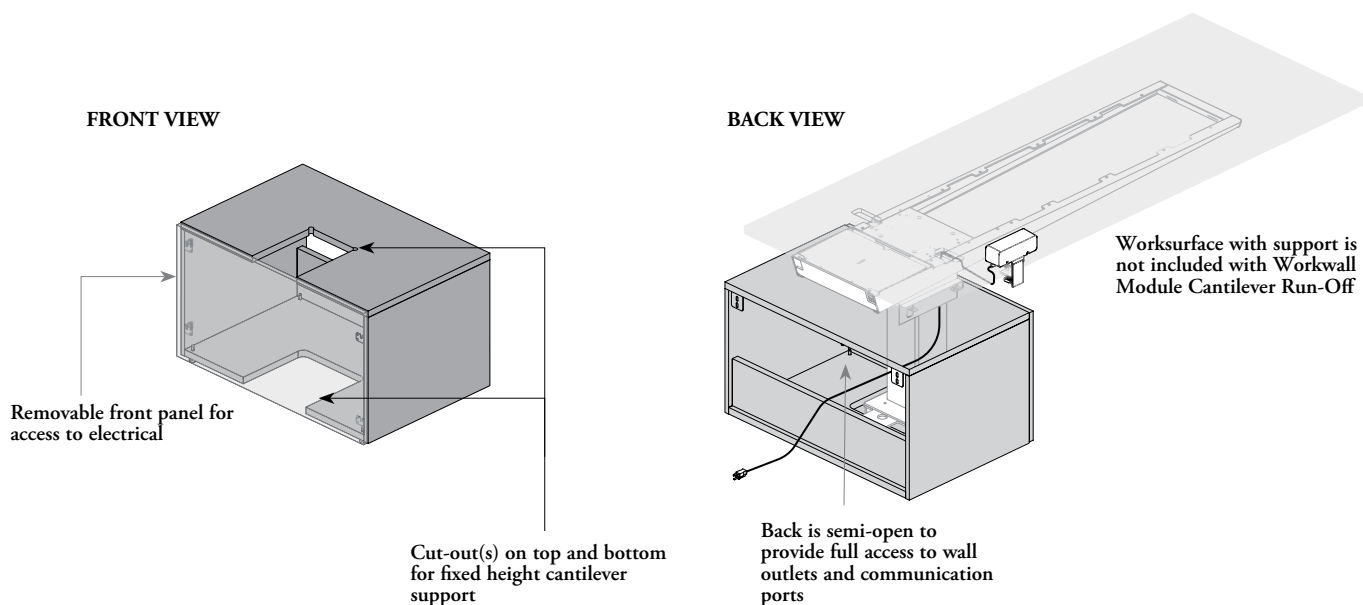


## user kneespace

(Fixed-Height Cantilever Rectangular Run-Off (B\_MCR) (Shown) and Fixed-Height Cantilever Wing Shape Run-Off (B\_MCP))

### 20" Storage Depth

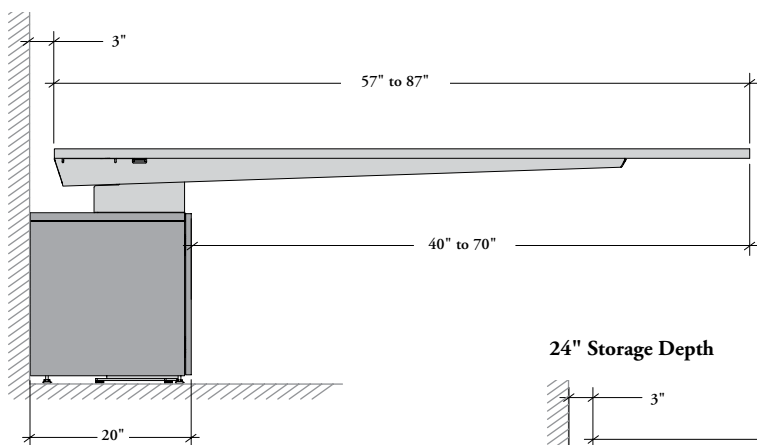


### 24" Storage Depth

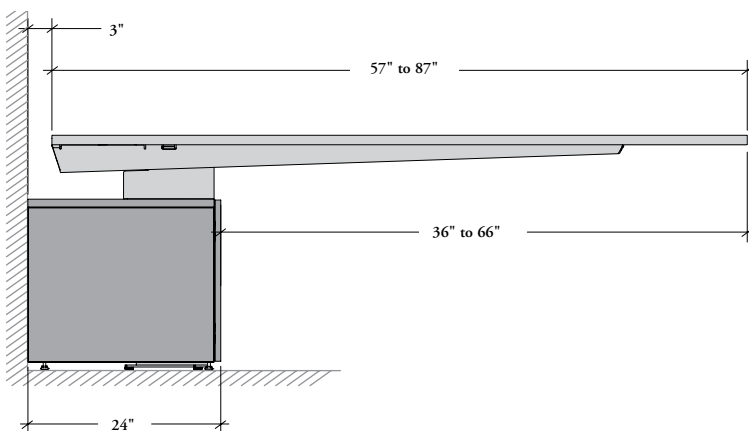


## workwall modules for cantilever run-off basics

Expansion Casegoods Workwall Cantilever Run-Off Modules are only compatible with cantilever run off Worksurfaces.

- ❗ • Must be installed against a building wall
- Wall anchoring is recommended for optimal stiffness but is **not** mandatory
- **Do not** require attachment to another Freestanding or Workwall Storage unit. However, when connected together, they ensure a perfect installation

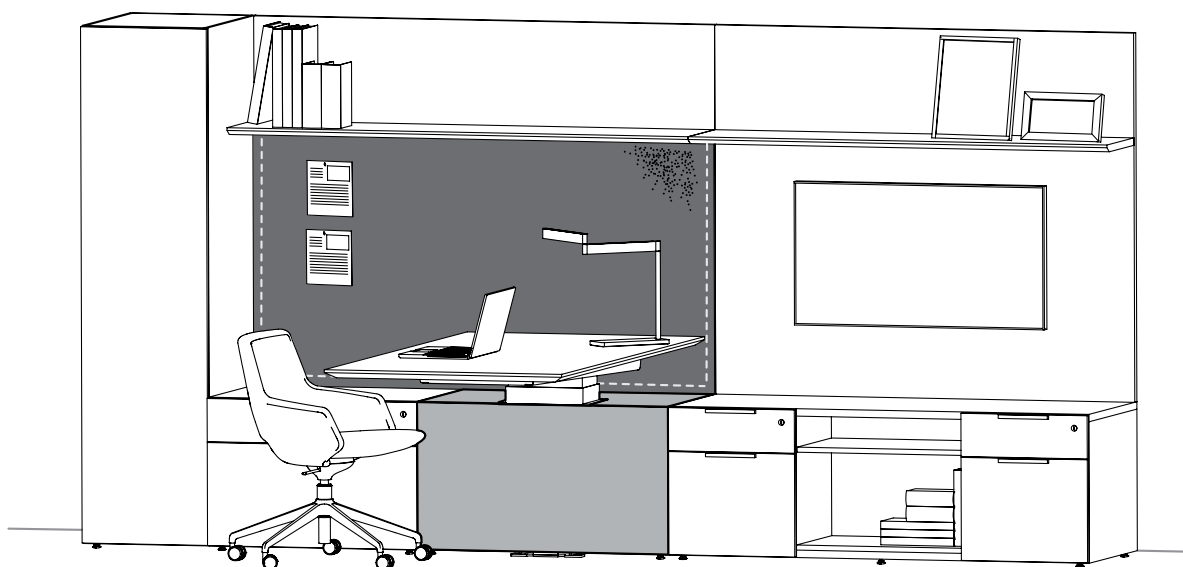


Workwall Module for Height-Adjustable Cantilever Run-Off (BHKHC) (Shown)

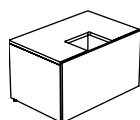

Workwall Module for Height-Adjustable Cantilever Run-Off (BHKHC) or Workwall Module for Fixed-Height Cantilever Run-Off (BHKFC)

- Depth:
  - 24" (BHKHC)
  - 20" and 24" (BHKFC)
- Width: 30" and 36"
- Height: 21"
- Include levelers with a 1" adjustment range
- Features a front removable panel for easy installation and access to the wall behind, as well as convenient cable management
- A Wall Panel is **not** mandatory for mounting fixed or Height Adjustable Worksurface
- Storage is non-handed
- Can support Wall Panels (B\_WCC, B\_WCO, B\_WAA, B\_WOO, B\_WMD, B\_WMO or B\_WMM)
- Back is partially open to provide wall access (electricity management)







# workwall kneespace module components

components & cable routing for fixed-height cantilever run-off configurations

## FRONT VIEW

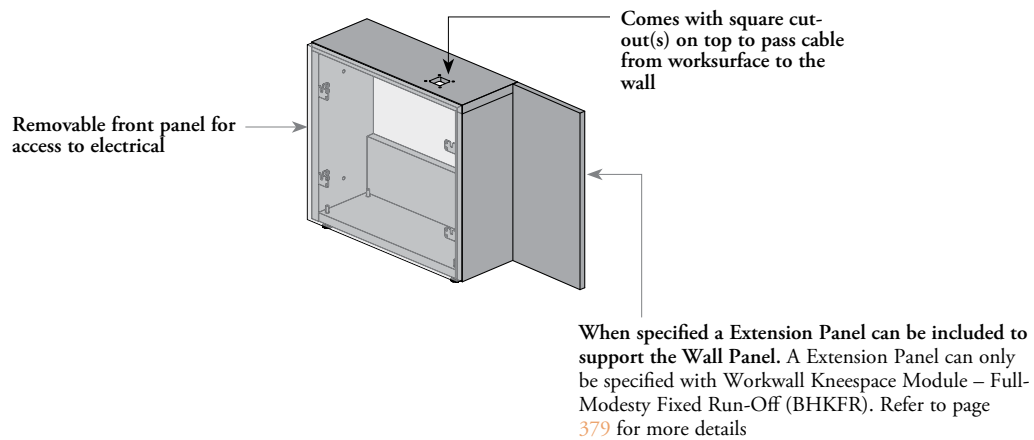


## BACK VIEW

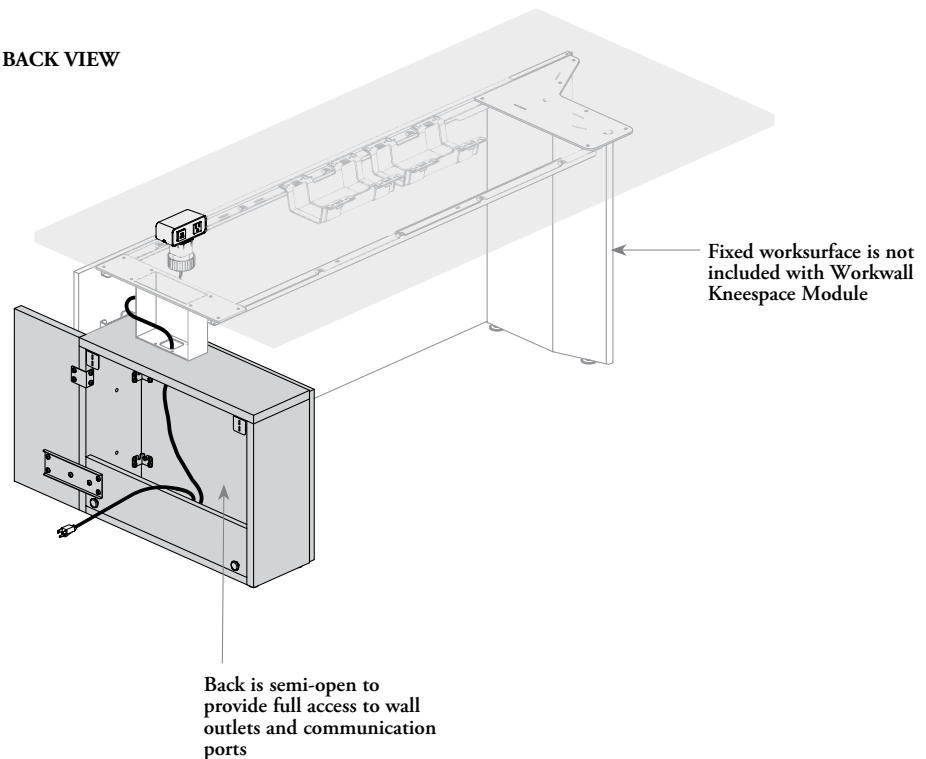

## workwall kneespace module components (continued)

components & cable routing for height-adjustable configurations (standard (shown) or full-modesty style)


A Extension Panel can be specified to support a Wall Panel. Refer to the following page for more details

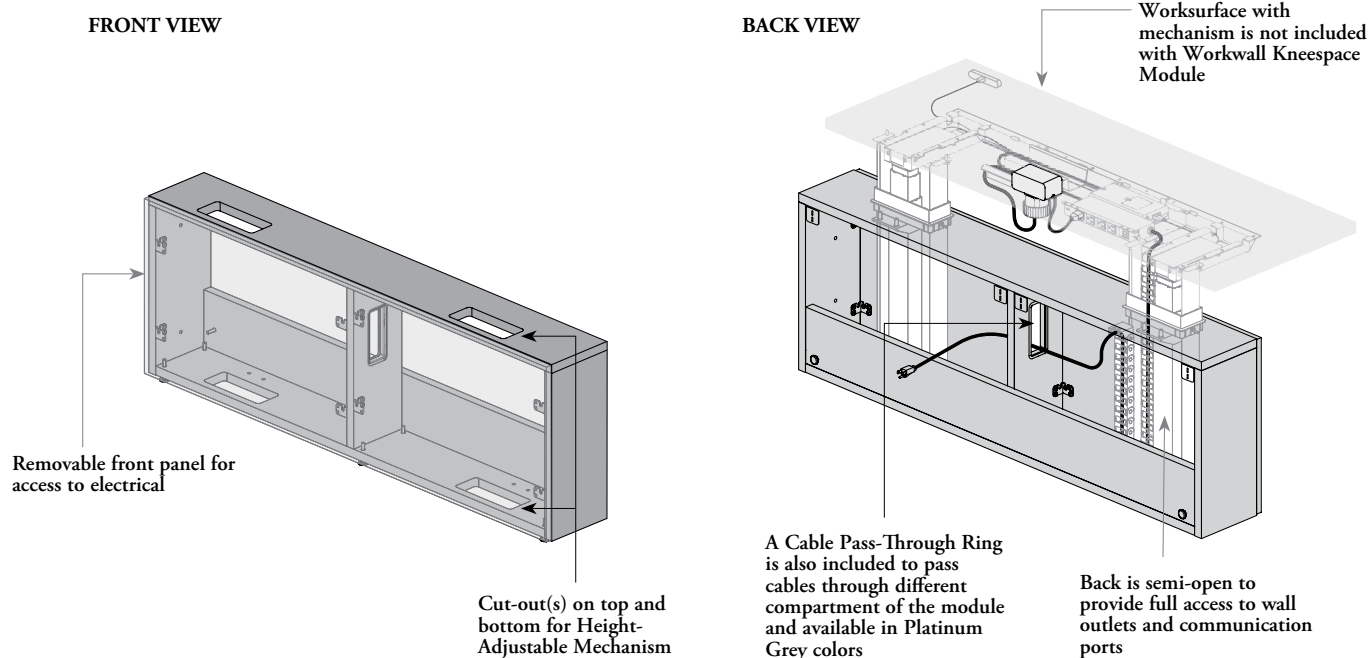


### user kneespace

(Height-adjustable Rectangular Worksurfaces (BH\_RL or BH\_RC) (Shown), Height-Adjustable L-Shape for Workstations (BH\_LB, BH\_L or BH\_LT) and Full-Modesty Height-Adjustable L-Shape Run-Off – Offset Base (BF\_L))


21" Worksurface Width

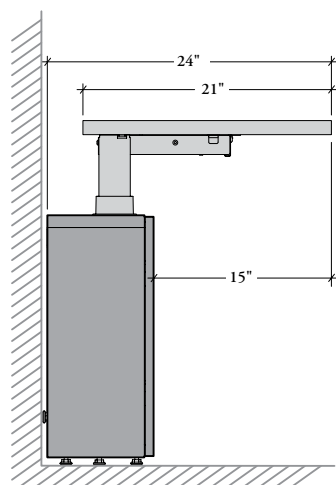

24" Worksurface Width

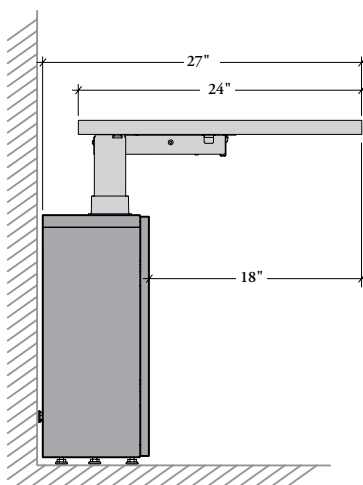

27" Worksurface Width

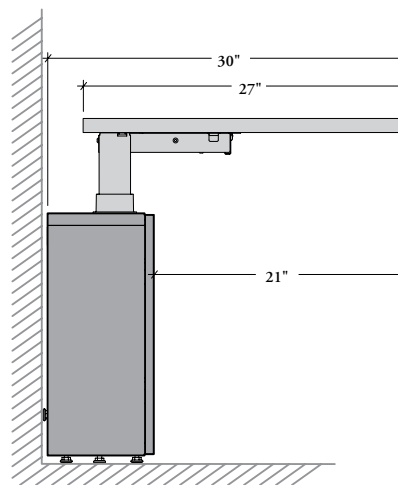

# workwall kneespace module components (continued)


## extension panel applications for full-modesty style only– fixed-height or height-adjustable configurations

Three Extension Panel options are available:

### no extension panel (N)


Workwall Kneespace Module – Full-Modesty can be specified without Extension Panel when:

- no Wall Panel is needed on top of the module
- no storage is needed on the visitor side

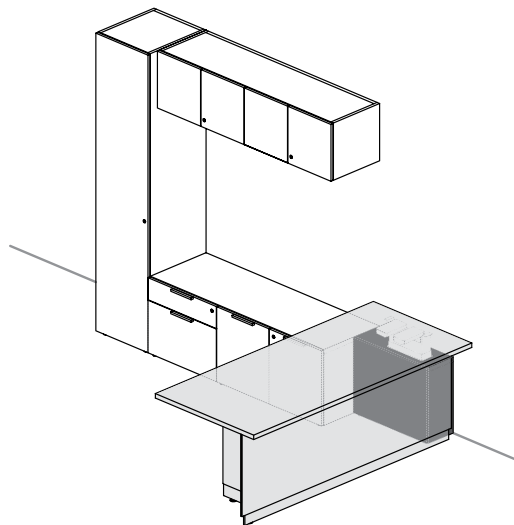


### with extension panel – solid colors/horizontal (E) or – vertical (V)

Three Extension Panel are available to fit with Wall Panel Grain:

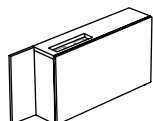


Extension Panel  
with Solid Colors  
(E)

OR

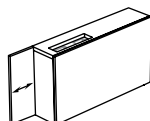


Extension Panel  
with Horizontal  
Grain (E)

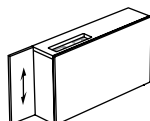


Extension Panel  
with Vertical Grain  
(V)

The Extension Panel has two purposes:

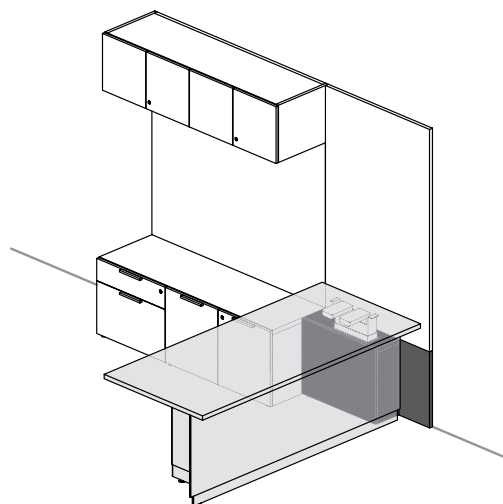

It must be specified when a wall panel is installed on a Workwall Kneespace Module for Full-Modesty. The Extension Panel **not** only offers support to the wall panel but also ensures that the worksurface depth remains completely enclosed within the wall panel

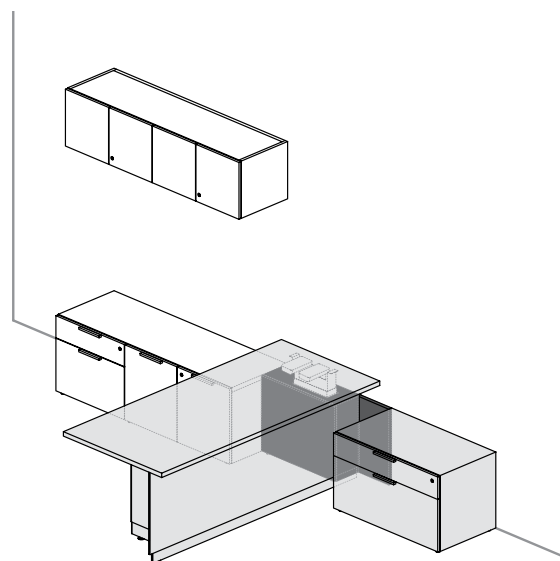


It provides a continuous aesthetic with storage on visitor side. It also preserves the mandatory 1-inch pinch gap for height-adjustable worksurface when specified with storage


## workwall kneespace module basics

**Expansion Casegoods Workwall Kneespace Modules can be used with Fixed and/or Height-Adjustable Worksurfaces to create diverse workstation configurations.**

- ❗ The installation of the Workwall Kneespace Modules for Height-Adjustability relies on the structural wall it is anchored to. The warranty on the Workwall Kneespace Module applies only to the product itself, and not to the durability of the wall. Installation on building/structural walls that do not meet local code requirements will affect the safety and durability of the product
- The Workwall Kneespace Modules (BHKHW, BHKHM, BHKHL and BHKHF) must always be anchored to the wall. Depending on the wall condition or the geographic region, especially for seismic zones, an engineer of record could have to evaluate the wall capabilities to support this product
- In addition to wall anchoring, when planning with Workwall Kneespace Module – Full-Modesty (BHKFR or BHKHM) it is recommended to link the module to another Workwall Storage or Freestanding Storage on the user side for optimal stiffness (hardware supplied)
- When using a Workwall Kneespace Module – Fixed Worksurface (BHKFW), wall anchored is recommended for optimal stiffness but is **not** mandatory
- When using a Workwall Kneespace Module – Full-Modesty Fixed Run-Off (BHKFR), it must be wall anchored

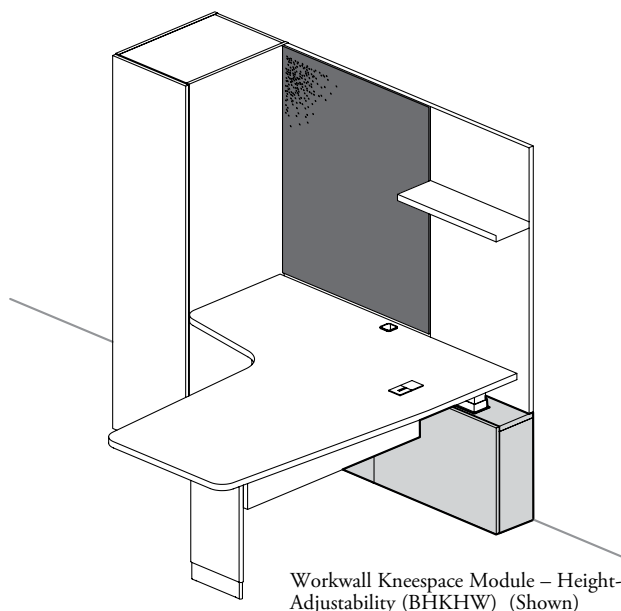


- All Workwall Kneespace Module styles (Standard or Full-Modesty) provide maximum knee clearance
- Workwall Kneespace Module **does not** require attachment to another Freestanding or Workwall Storage unit. However, when connected together, they ensure a perfect installation. Refer to page 435 for more details
- Only a freestanding mid-height storage can be used in front of the module
- Includes removable front panel to access the wall behind and to allow cable management
- Height: 21"
- Depth: 9"
- Include levelers with a 1" adjustment range
- A Wall Panel is **not** mandatory for mounting fixed or Height-Adjustable Worksurface

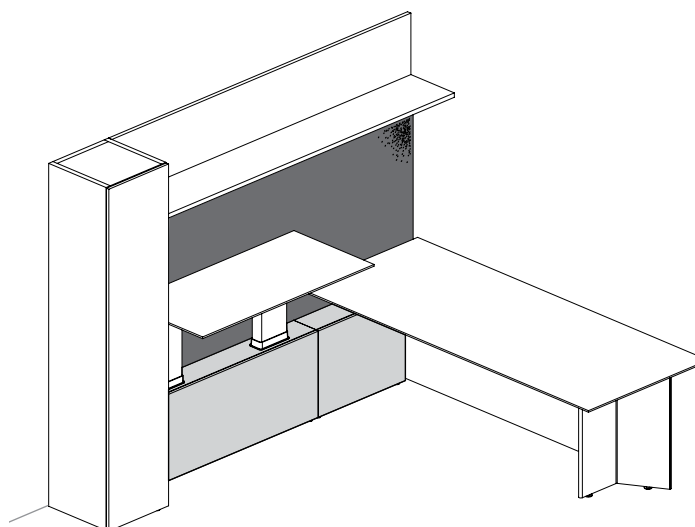


# workwall kneespace module basics (continued)

## standard style

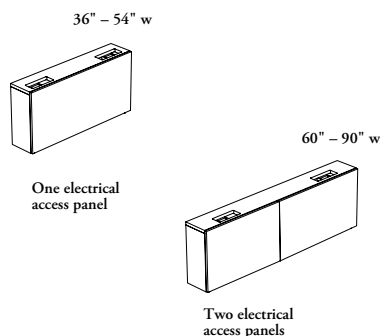


### Workwall Kneespace Module – Height-Adjustability (BHKHW)

- Widths: 36" to 90" (6" increments)
- Can be used with:
  - Height-Adjustable Rectangular Worksurfaces – Mid-Height (BH\_RL or BH\_RC)
  - Height-Adjustable Peninsulas – Bevel Post Leg (BH\_RP, BH\_TP or BH\_PE)
  - Height-Adjustable L-Shaped Worksurfaces (BH\_LB, BH\_L or BH\_LT)
  - Height-Adjustable Meeting Peninsulas (B\_HRW, B\_HDW, B\_HBW or B\_HPW)
- On-module application only

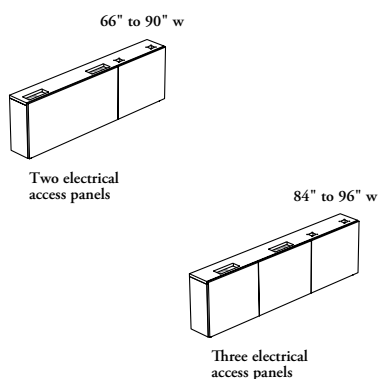

### Workwall Kneespace Module – Height-Adjustability and Fixed Worksurface (BHKHF)

- Widths: 66" to 96" (6" increments)
- Can accommodate Run-Off Depths: 24" to 36" (6" increments)
- Run-Off Configuration:
  - Left (L)
  - Right (R) (Shown)
- Can be used with:
  - Height-Adjustable Rectangular Worksurfaces – Mid-Height (BH\_RL or BH\_RC)
  - Fixed Run-Off – Mid-Height (BM\_R)
  - Fixed Meeting Peninsulas (BC\_FR or BC\_FD)

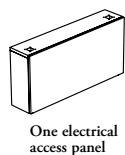


### Workwall Kneespace Module – Fixed Worksurface (BHKFW)


- Can accommodate Worksurface Depths: 36" to 60" (6" increments)
- Can be used with:
  - Fixed Run-Off – Mid-Height (BM\_R)
  - Fixed Extended Tapered Peninsula – Mid-Height (BM\_EP)
  - Fixed Meeting Peninsulas (BC\_FR, BC\_FD, BC\_FT or BC\_FP)

## workwall kneespace module basics (continued)

### full-modesty style




One electrical access panel and No Extension Panel




One electrical access panel and with Extension Panel

#### Workwall Kneespace Module – Full-Modesty Height-Adjustable Run-Off (BHKHM)


- Can accommodate Worksurface Depths: 28" or 34"
- Extension Panel (for details, refer to page 379):
  - No Extension Panel (N)
  - With Extension Panel – Horizontal or Solid Colors (Shown) (E)
  - With Extension Panel – Vertical (V)
- Configuration:
  - Left Handed (L) (Shown)
  - Right Handed (R)
- Can only be used with:
  - Full-Modesty Height-Adjustable Run-Off – Offset Base (BF\_R)

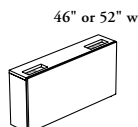


One electrical access panel and No Extension Panel

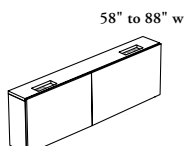

Two electrical access panel and No Extension Panel




One electrical access panel and with Extension Panel

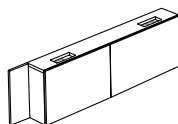


Two electrical access panel and with Extension Panel

#### Workwall Kneespace Module – Full-Modesty Height-Adjustable Extended or "L" Run-Off (BHKHL)

- Can accommodate Worksurface Depths A: 29" or 35"
- Can accommodate Worksurface Widths B: 46" to 88" (6" increments)
- Extension Panel (for details, refer to page 379):
  - No Extension Panel (N)
  - With Extension Panel – Horizontal or Solid Colors (Shown) (E)
  - With Extension Panel – Vertical (V)
- Configuration:
  - Left Handed (L) (Shown)
  - Right Handed (R)
- Can be used with:
  - Full-Modesty Height-Adjustable Extended Run-Off – Offset Base (BF\_E)
  - Full-Modesty Height-Adjustable L-Shape Run-Off – Offset Base (BF\_L)



One electrical access panel and No Extension Panel



One electrical access panel and with Extension Panel

#### Workwall Kneespace Module – Full-Modesty Fixed Run-Off (BHKFR)

- Can accommodate Worksurface Depths: 30" or 36"
- Extension Panel (for details, refer to page 379):
  - No Extension Panel (N)
  - With Extension Panel – Horizontal or Solid Colors (Shown) (E)
  - With Extension Panel – Vertical (V)
- Configuration:
  - Left Handed (L) (Shown)
  - Right Handed (R)
- Can only be used with:
  - Full-Modesty Fixed Run-Off – Offset Base (BF\_MR)


# workwall kneespace module removable front panel widths

The following illustrates the nominal width of the Workwall Kneespace Module removable front panel.


## workwall kneespace module – height-adjustability (BHKHW)

- Come with two compartments
- Include one removable front panel for two compartments


36" Width

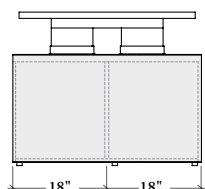


42" Width

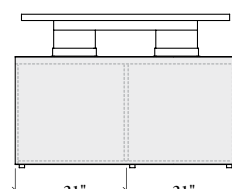


48" Width

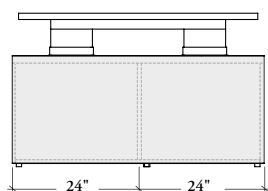


54" Width

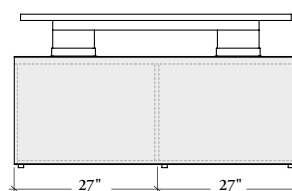

60" Width

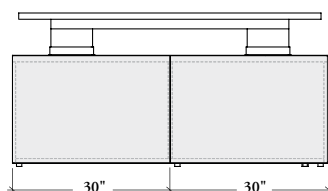


66" Width

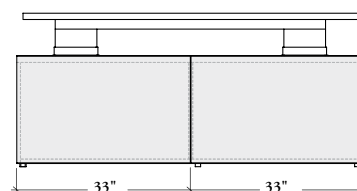


- Come with two compartments
- Include two removable front panels (one panel for each compartments)


72" Width

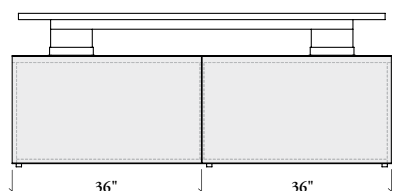

78" Width

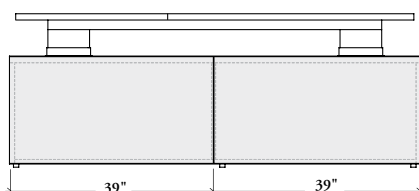


84" Width

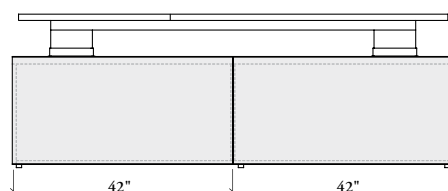

- Come with two compartments
- Include two removable front panels (one panel for each compartments)

90" Width

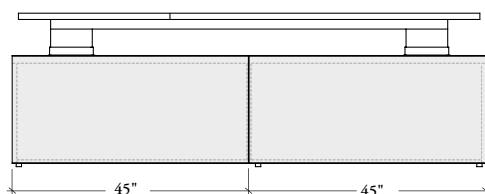


## workwall kneespace module removable front panel widths (continued)

### workwall kneespace module – height-adjustability and fixed worksurface (BHKHF)

Both sides of the panel below the Fixed-Run-Off – Mid-Height are aligned with worksurface width

- Come with two compartments
- Include two removable front panels (one panel for each compartments)
- Come with three compartments
- Include two removable front panels (one panel for compartment under Fixed-Run-Off – Mid-Height and one panel for two other compartments)
- Come with three compartments
- Include three removable front panels (one panel for each compartments)

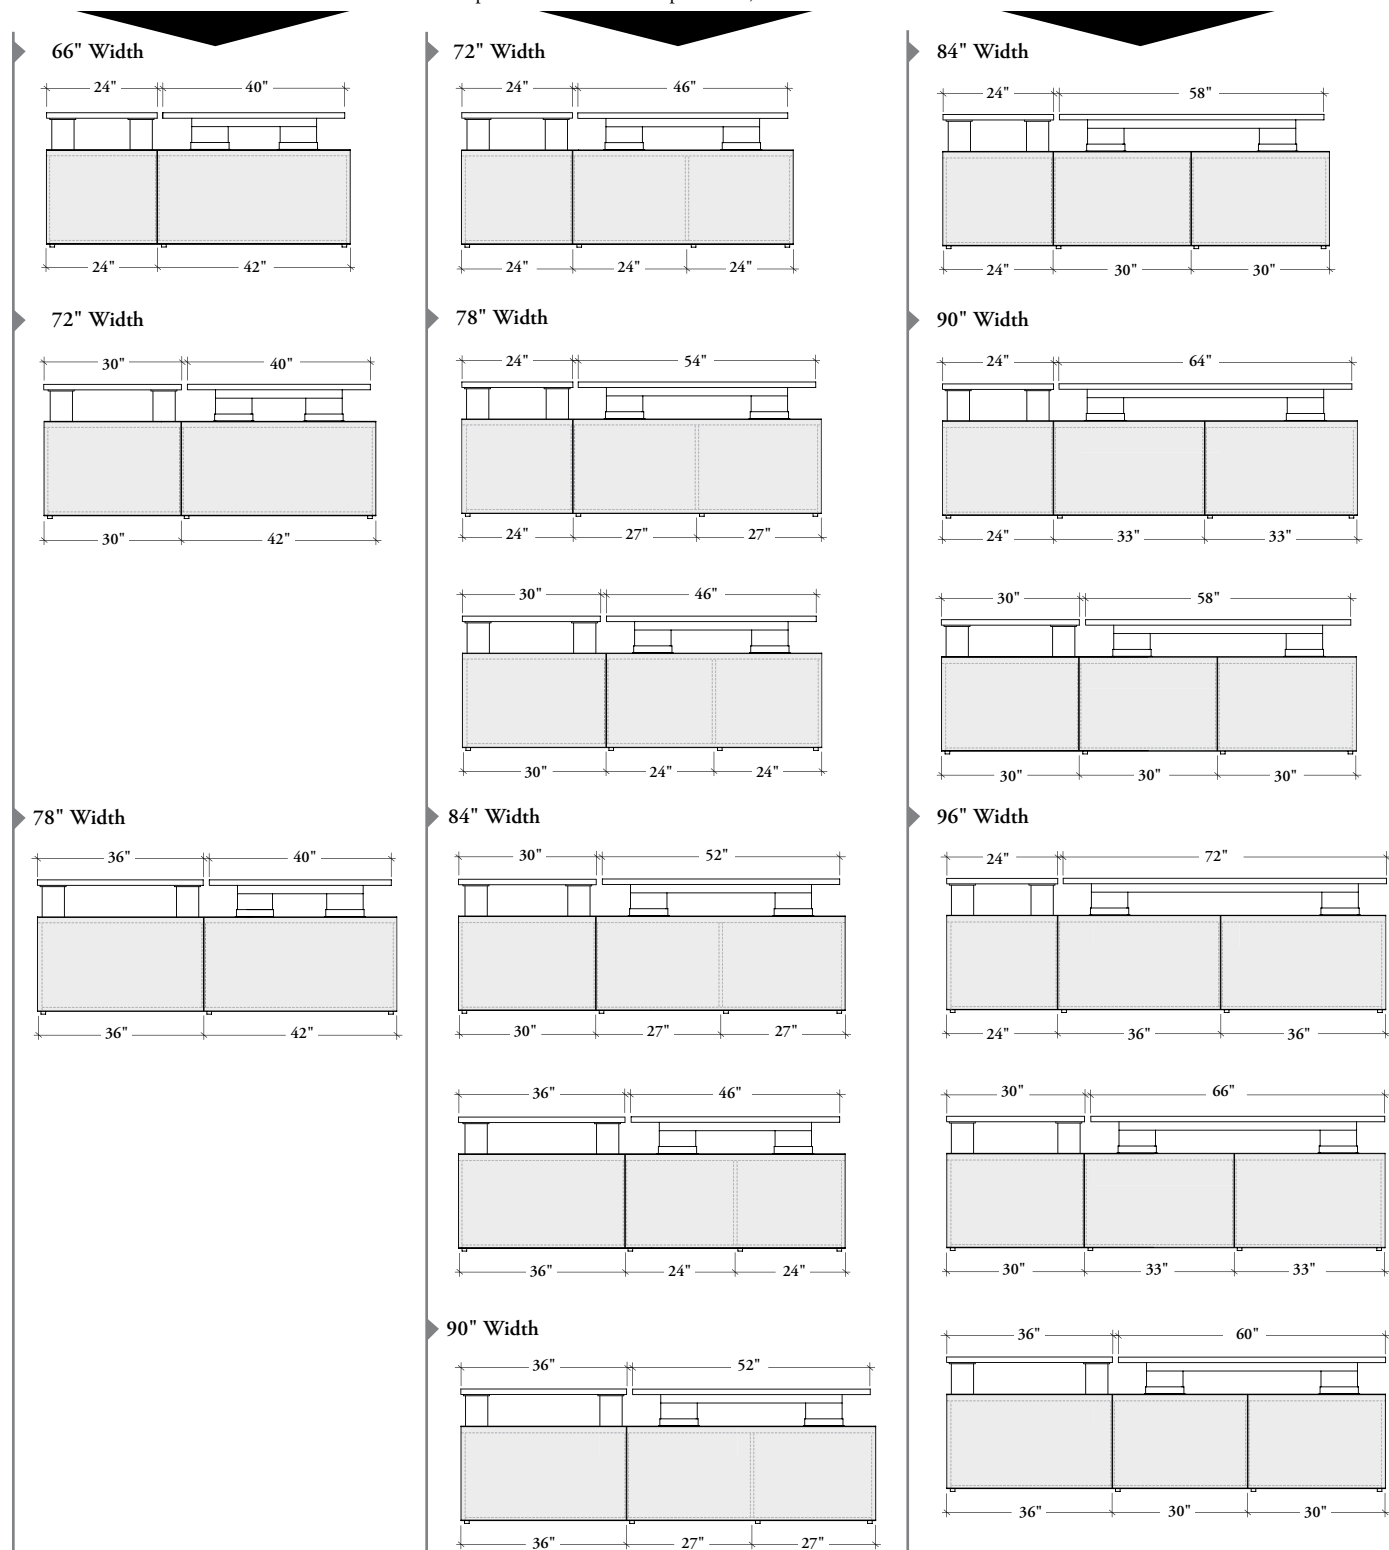




# workwall kneespace module removable front panel widths (continued)

## workwall kneespace module – fixed worksurface (BHKFW)


All Fixed Worksurface depths must be specified same width as kneespace module, except for Fixed Diamond Meeting Peninsula (BC\_FP)

- Come with two compartments
- Include one removable front panel for two compartments


36" Width

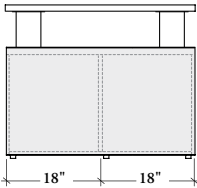


42" Width

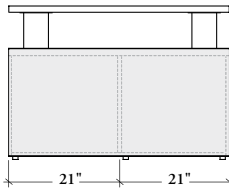


48" Width

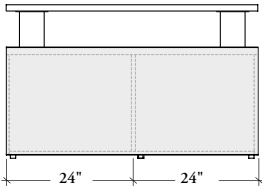

54" Width

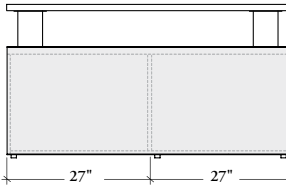

60" Width

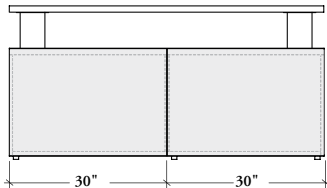


- Come with two compartments
- Include two removable front panels for two compartments

# workwall kneespace module removable front panel widths (continued)


workwall kneespace module – full-modesty height-adjustable run-off (BHKHM)  
without (N) or with extension panel (E or V) (shown)

- Comes with one compartment
- Includes one removable front panel

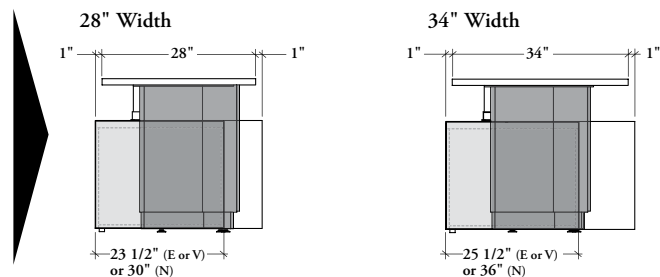

workwall kneespace module – full-modesty height-adjustable extended or "L" run-off (BHKHL)  
without (N) or with extension panel (E or V) (shown)

- Come with two compartments
- Include one removable front panel for two compartments

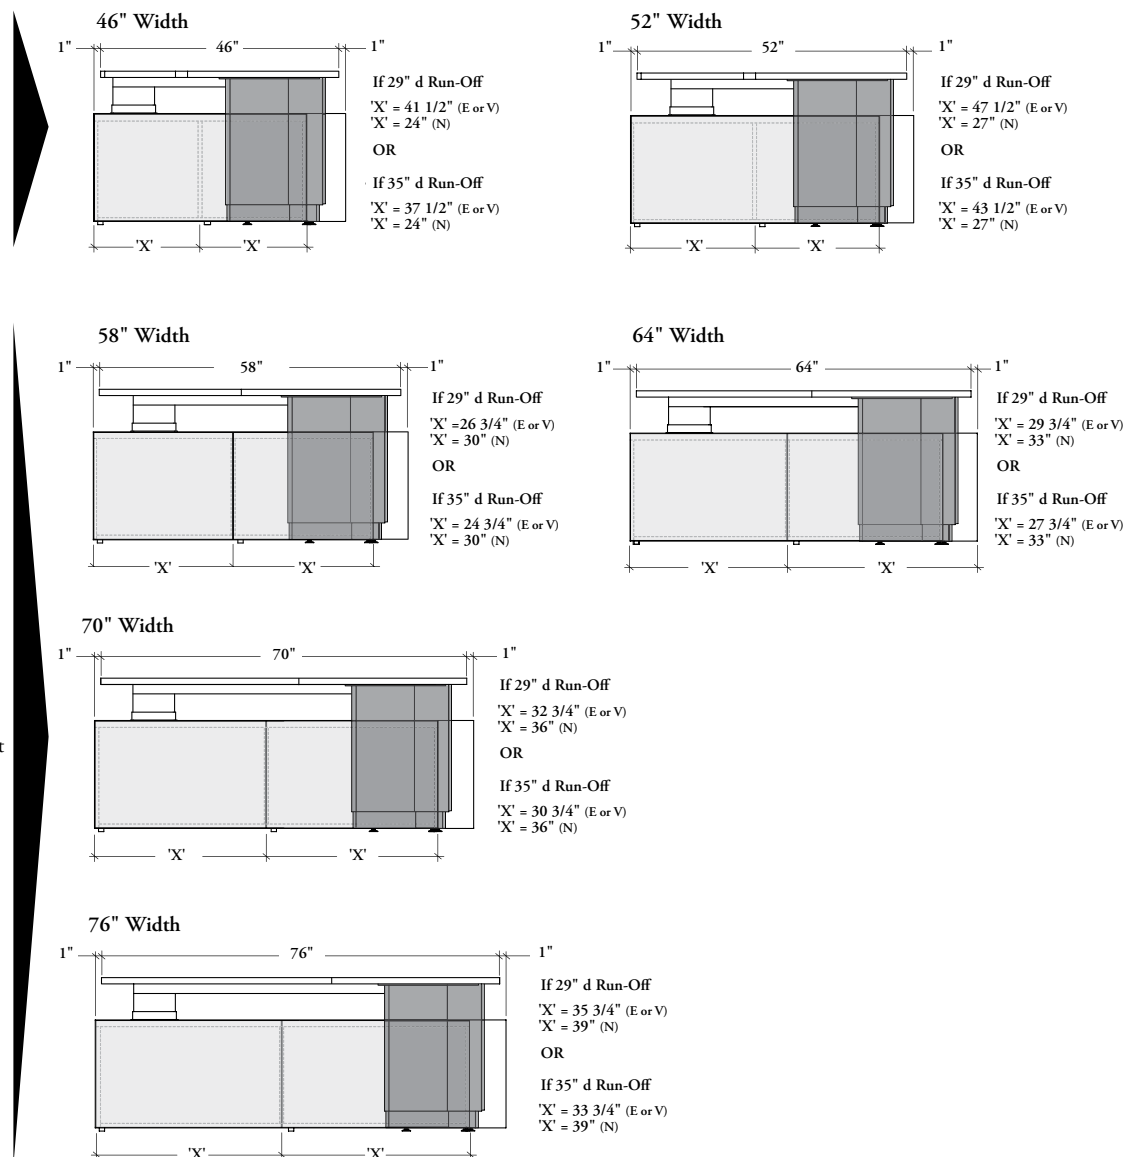


- Come with two compartments
- Include two removable front panels (one panel for each compartment)

# workwall kneespace module removable front panel widths (continued)


workwall kneespace module – full-modesty height-adjustable extended or "L" run-off (BHKHL) without (N) or with extension panel (E or V) (shown) (continued)

- Come with two compartments
- Include two removable front panels (one panel for each compartment)

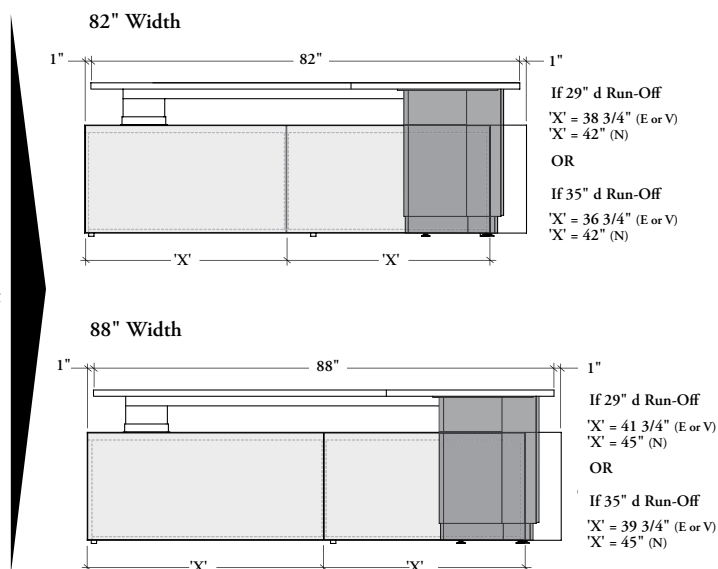

workwall kneespace module – full-modesty fixed run-off (BHKFR) without (N) or with extension panel (E or V) (shown)

- Comes with one compartment
- Includes one removable front panel

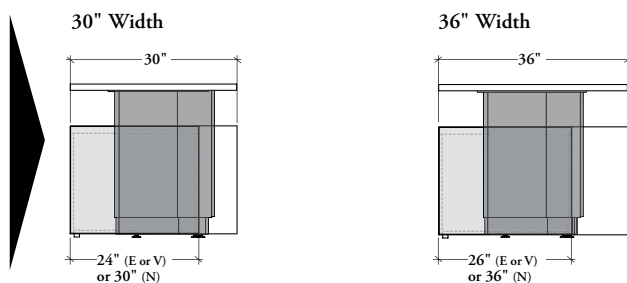


## understanding workwall bookcases – mid – 21" h

All dimensions in this section are nominal

### workwall bookcases – mid – 21" h

- Two styles can be specified:
  - **Standard:**  
21" high Workwall Bookcase (BSMO)
  - **Supporting :**  
Workwall Bookcases for Fixed or Height-Adjustable Worksurfaces – Mid – 21" h (BSMOBW or BSMOBH)
- Can support Wall Panels (B\_WCC, B\_WCO, B\_WAA, B\_WOO, B\_WMD, B\_WMO or B\_WMM)
- For more details on mid-height Workwall Bookcase Applications, refer to page 396

### standard style


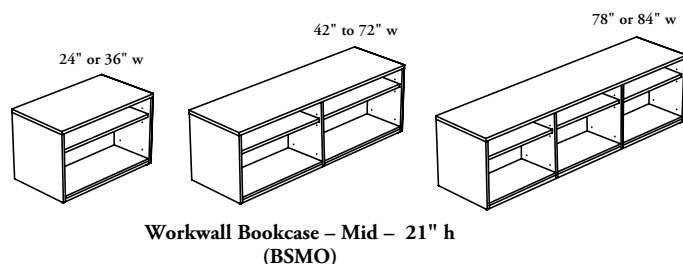


### supporting style

#### Workwall Bookcase – Fixed Worksurface – Mid – 21" h (BSMOBW)


Only products illustrated below can be installed on this bookcase:

For more details on these products listed below, refer to Multi-Level Workstations Section

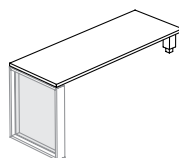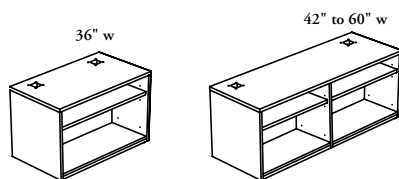

Fixed Run-Off – Mid-Height  
(BM\_R)


For more details on this product, refer to page 111 and following pages

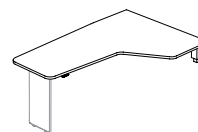


Fixed Extended Tapered – Mid-Height  
(BM\_EP)

For more details on this product, refer to page 112 and following pages


For more details on these products listed below, refer to Meeting Tables Section




Fixed Rectangular  
Meeting Peninsula  
(BC\_FR)

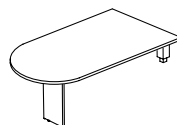

Fixed D-Shape  
Meeting Peninsula  
(BC\_FD)



Fixed Tapered  
Meeting Peninsula  
(BC\_FT)



Fixed Diamond  
Meeting Peninsula  
(BC\_FP)

# understanding workwall bookcases – mid – 21" h (continued)



workwall bookcases – mid – 21" h (continued)

supporting style (continued)


Workwall Bookcase – Height-Adjustable Worksurface – Mid – 21" h (BSMOBH)

Only products illustrated below can be installed on this bookcase:


For more details on theses products listed below, refer to Multi-Level Workstations Section

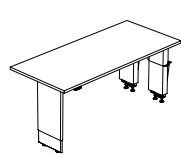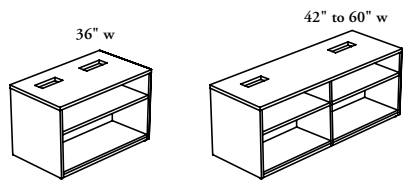

Height-Adjustable  
Rectangular Peninsula  
(BH\_RP)

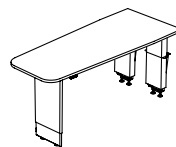


Height-Adjustable  
Tapered Peninsula  
(BH\_TP)

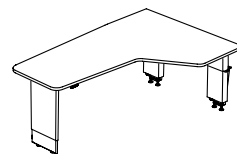


Height-Adjustable Extended  
Tapered Peninsula  
(BH\_PE)


For more details on theses products listed below, refer to Meeting Tables Section

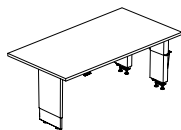

Height-Adjustable  
Rectangular Meeting  
Peninsula  
(B\_HRW)

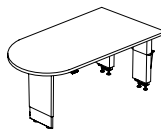

Height-Adjustable  
D-Shape Meeting  
Peninsula  
(B\_HDW)

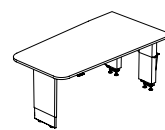

Height-Adjustable  
Tapered Meeting  
Peninsula  
(B\_HBW)




Height-Adjustable  
Diamond Meeting  
Peninsula  
(B\_HPW)


## workwall bookcase – mid – 21" h components

The following should be considered when planning with Expansion Casegoods mid-height Workwall Bookcases for Height-Adjustability or Fixed Worksurfaces.

components & cable routing for fixed-height configurations (standard or supporting (shown) style)

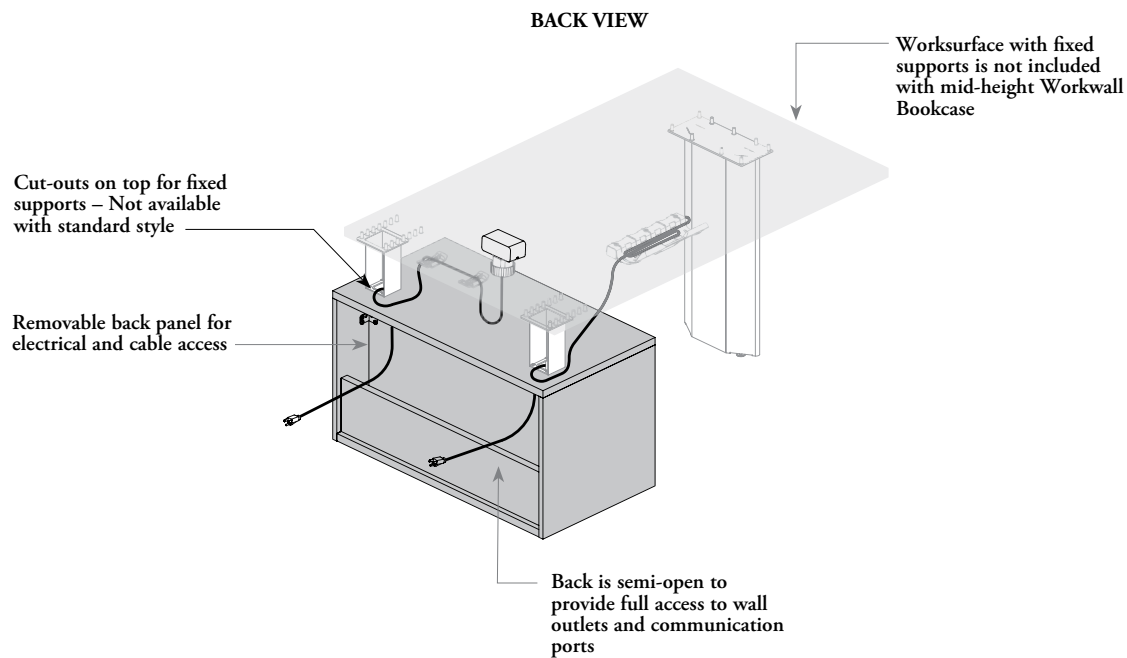


components & cable routing for height-adjustable configurations (standard or supporting (shown) style)

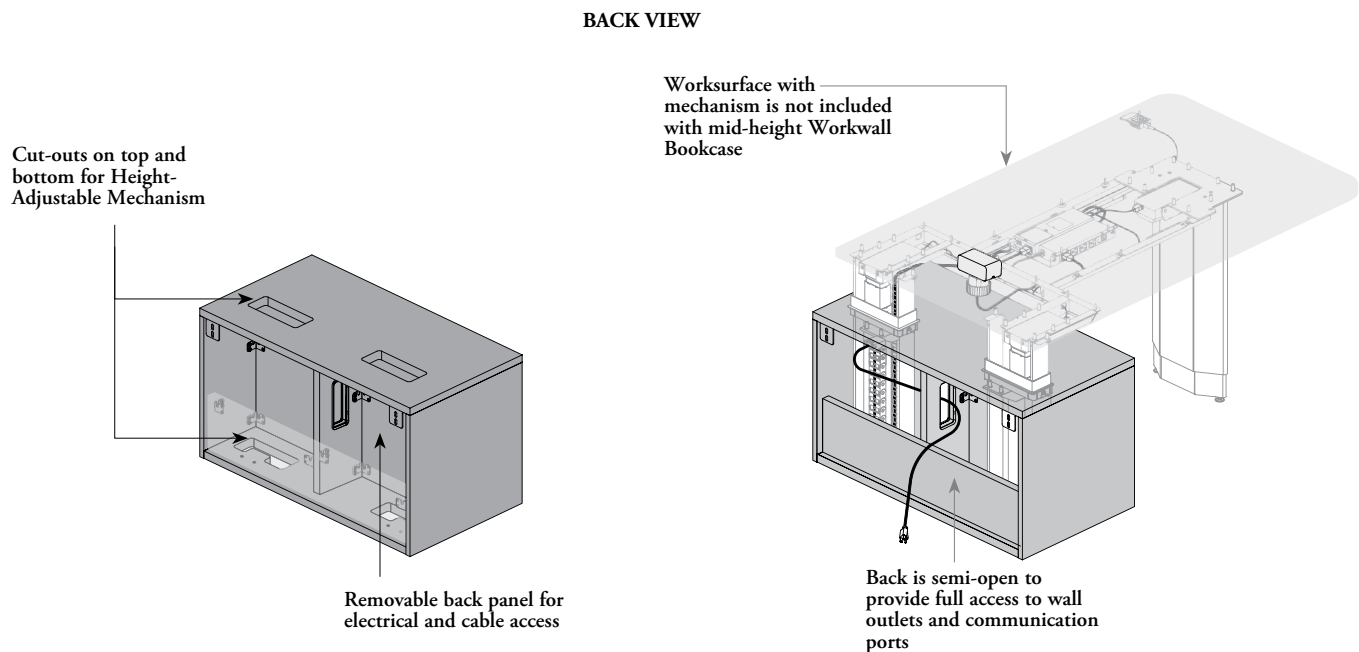

## workwall bookcase – mid – 21" h basics

Expansion Casegoods mid-height Workwall Bookcases can be used alone or with fixed or height-adjustable worksurfaces to create diverse workstation configurations.

- ❗ The mid-height Workwall Bookcase provides a variety of options to create the optimal combination of functionality for the office or meeting room
- Can accommodate fixed or height-adjustable worksurfaces
- Must be against a building wall
- Workwall Bookcase – Mid – 21" h (BSMO) can be used freestanding, **no** wall anchoring is required
- When using a mid-height Workwall Bookcase for Fixed or Height-Adjustable Worksurface (BSMOBW or BSMOBH), wall anchored is recommended for optimal stiffness but is **not** mandatory

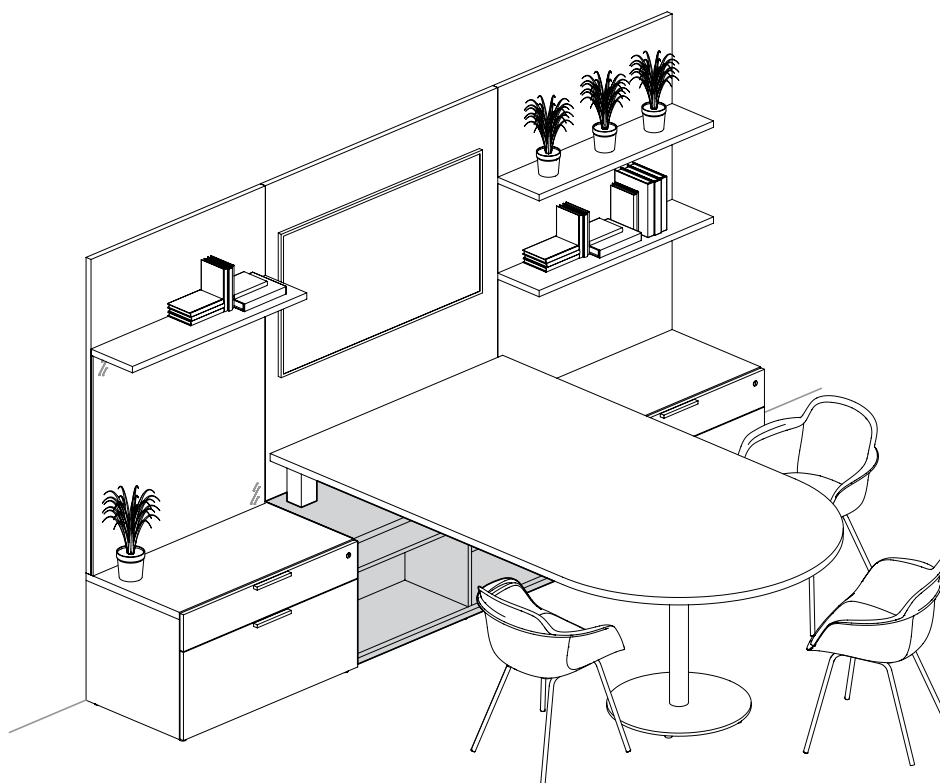


Workwall Bookcase – Fixed Worksurface  
– Mid – 21" h (BSMOBH) (Shown)

- The mid-height Workwall Bookcases provide a base support and storage for a fixed or height-adjustable worksurface. Ideal for small meeting room
- The Mid-height Workwall Bookcase **does not** require attachment to another Freestanding or Workwall Storage unit. However, when connected together, they ensure a perfect installation. Refer to page 435 for more details
- Fixed worksurface depth must match the bookcase width, except for Fixed Diamond Meeting Peninsula (BC\_FP)
- Storage is non-handed
- Height: 21"
- Open section with adjustable shelf configuration has holes in 1 1/4" intervals on the inside walls for shelf height adjustment
- Additional shelves **cannot** be specified for these products
- Include levelers with a 1" adjustment range

## workwall bookcase – mid – 21" h basics (continued)


### standard style

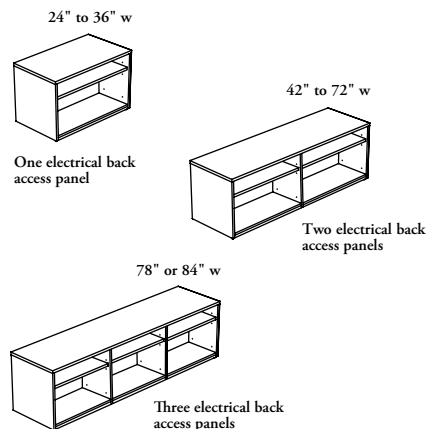

#### Workwall Bookcase – Mid – 21" h (BSMO)


- Depths: 20" or 24"
- Widths: 24" to 84" (6" increments)
- Each open compartment comes with one adjustable shelf

### supporting style

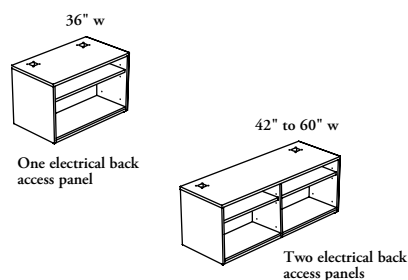

#### Workwall Bookcase – Fixed Worksurface – Mid – 21" h (BSMOBW)

- Only available in 20" depth
- Widths: 36" to 60" (6" increments)
- Can be used with:
  - Fixed Run-Off – Mid-Height (BM\_R)
  - Fixed Extended Tapered Peninsula – Mid-Height (BM\_EP)
  - Fixed Meeting Peninsulas (BC\_FR, BC\_FD, BC\_FT or BC\_FP)
- Each open compartment comes with one adjustable shelf

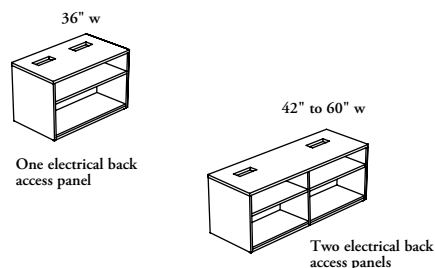

#### Workwall Bookcase – Height-Adjustable Worksurface – Mid – 21" h (BSMOBH)

- Only available in 20" depth
- Widths: 36" to 60" (6" increments)
- Can be used with:
  - Fixed Run-Off – Mid-Height (BM\_R)
  - Height-Adjustable Peninsulas – Bevel Post Leg (BH\_RP, BH\_TP or BH\_PE)
  - Height-Adjustable Meeting Peninsulas (B\_HRW, B\_HDW, B\_HBW or B\_HPWW)
- Each open compartment comes with one adjustable shelf




# open compartment widths – workwall bookcase – mid – 21" h

The following illustrates Expansion Casegoods mid-height Workwall Bookcases for Fixed Worksurfaces or Height-Adjustability open sections nominal widths.


Workwall Bookcase – Mid – 21" h (BSMO) (Shown),  
Workwall Bookcase – Fixed Worksurface – Mid – 21" h (BSMOBW) or  
Workwall Bookcase – Height-Adjustable Worksurface – Mid – 21" h (BSMOBH)

- Comes with one open compartment
- Includes one removable back access panel


24" Width

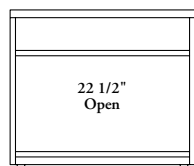


30" Width

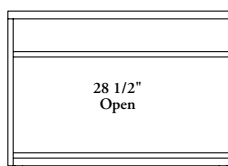


36" Width

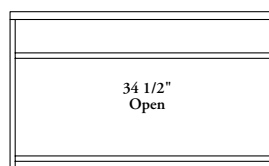

42" Width

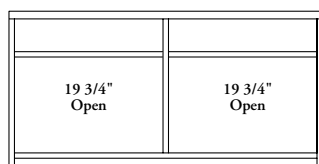


48" Width

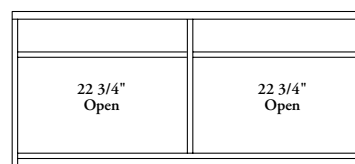


- Comes with two open compartments
- Includes two removable back access panels


54" Width

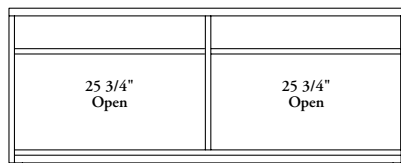


60" Width

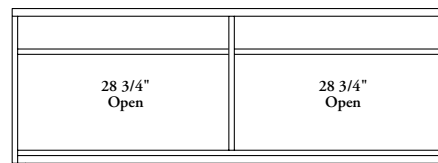

66" Width

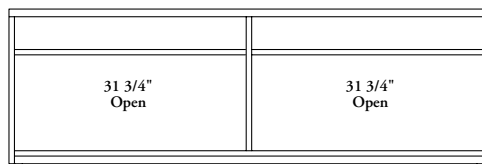


72" Width

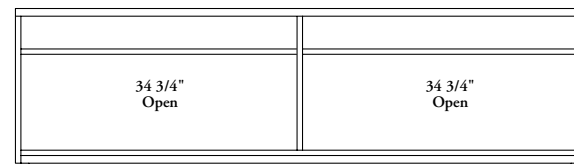


- Comes with three open compartments
- Includes three removable back access panels

78" Width

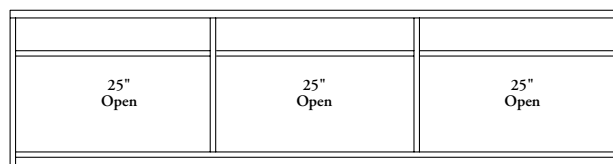

84" Width

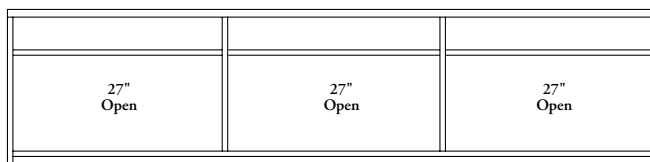


## interior clearance – workwall bookcase – mid –21" h

The following outline the interior clearance available for all mid-height Workwall Bookcases.


### interior height clearance

- The open section features holes at 1 1/4" intervals on the interior walls, allowing for convenient adjustment of shelf height
- The interior height dimension is 17 5/8" for all mid-height Workwall Bookcases

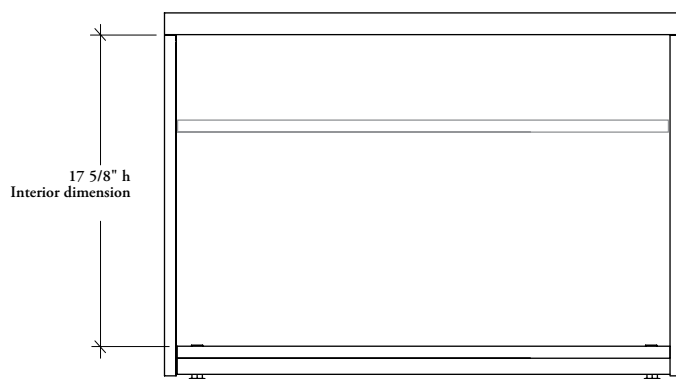


### interior depth clearance

Standard or Fixed Worksurface:  
mid-height Workwall Bookcases (BSMO) and Workwall Bookcases – Fixed Worksurface (BSMOBW)

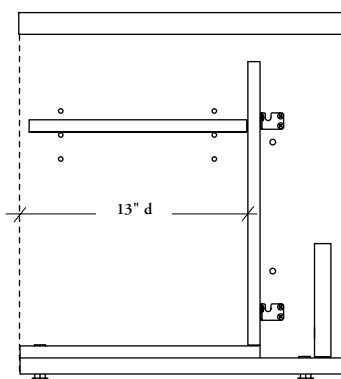

Height-Adjustable Worksurface:  
mid-height Workwall Bookcases – Height-Adjustable Worksurface (BSMOBH)

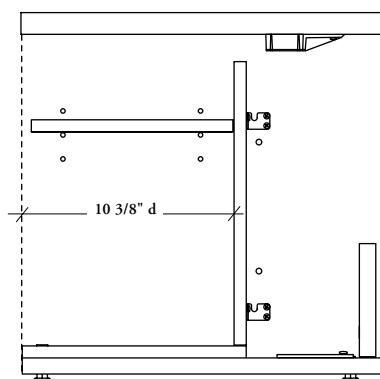


# planning with workwall modules & workwall credenzas for height-adjustable cantilever run-off – mid – 21" h

The following should be considered when planning with Expansion Casegoods Workwall Modules & Workwall Credenzas for Cantilever Run-Off.


- ⚠ When the Workwall Module or Workwall Credenza for Cantilever Run-Off is used with a Height-Adjustable Cantilever worksurface (BH\_CR or BH\_CP ) the combination of products will automatically ensure the 1<sup>st</sup> minimum clearance all around worksurface

workwall module for height-adjustable cantilever run-off (BHKHC) (shown),  
workwall credenza with drawers for height-adjustable cantilever run-off – mid – 21" h (BSMCHC) (shown) or  
workwall credenza with drawers and cabinet for height-adjustable cantilever run-off – mid – 21" h (BSMHLC)

with height-adjustable cantilever run-off

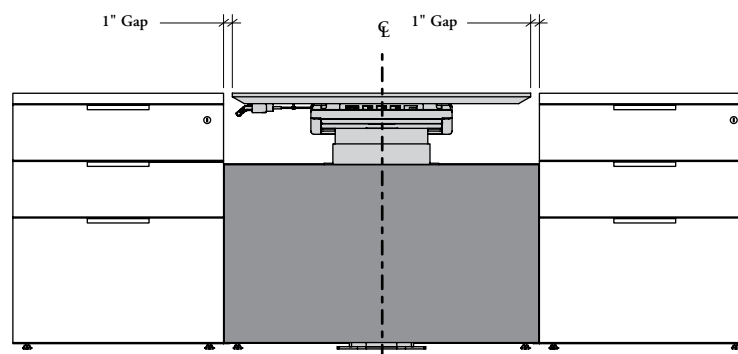

Workwall Module for Height-Adjustable  
Cantilever Run-Off (BHKHC)

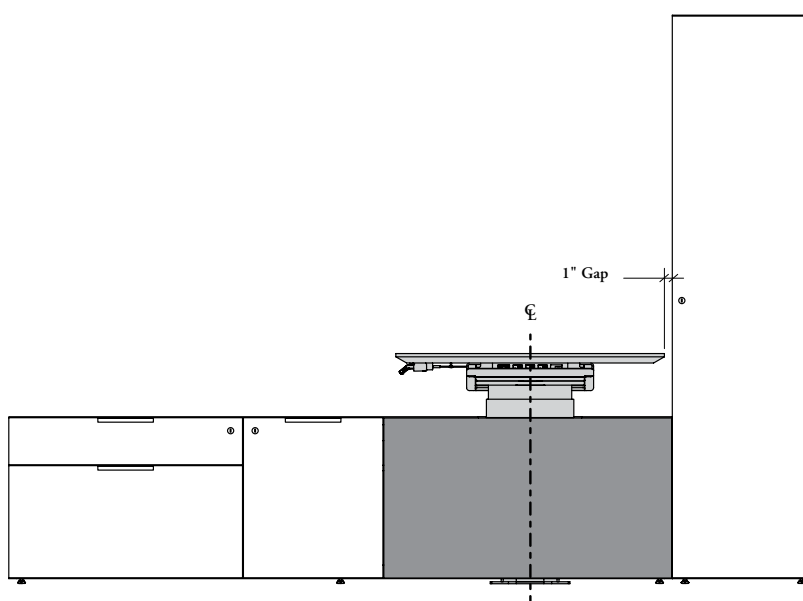

Workwall Credenza with Drawers for  
Height-Adjustable Cantilever Run-Off  
(BSMCHC)


## planning with workwall kneespace modules & workwall bookcases – mid – 21" h

The following should be considered when planning with Expansion Casegoods Workwall Kneespace Modules & Workwall Bookcases.

- ⚠ Depending on the worksurface shape, the Workwall Kneespace Module or Workwall Bookcase required special consideration when planning workstation set-up
- Other special considerations must be taken when planning with Fixed or Height-Adjustable Worksurfaces, or with Full-Modesty Fixed or Height-Adjustable Worksurfaces. For more details, refer to Multi-Level Workstation section
- Other special considerations must be taken when planning with Fixed or Height-Adjustable Meeting Peninsulas. For details, refer to Meeting Tables section


workwall kneespace module – height-adjustability (BHKHW) (shown) or  
workwall bookcase – height-adjustable worksurface – mid – 21" h (BSMOBH)

with height-adjustable meeting peninsulas

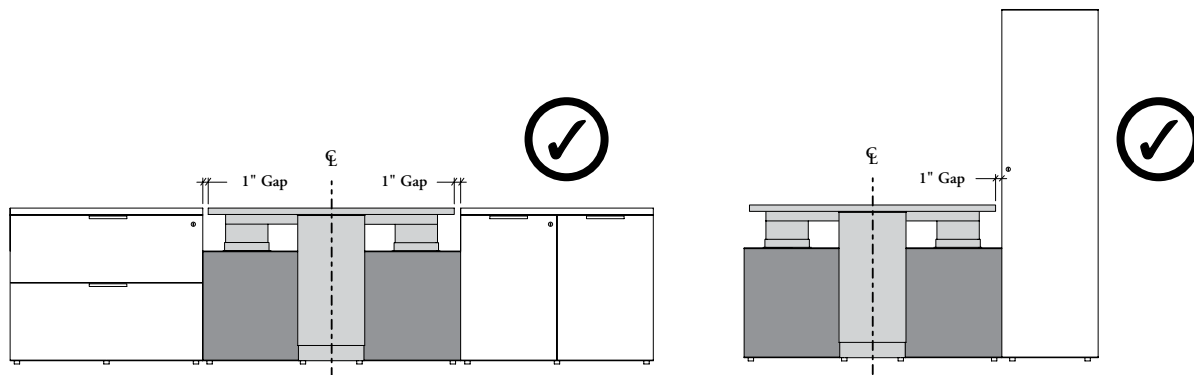

When the Workwall Kneespace Module or Bookcase is used with a Height-Adjustable Meeting Peninsula (B\_HRW, B\_HDW or B\_HBW) the combination of products will automatically ensure the 1" minimum clearance all around worksurface


with height-adjustable peninsula (BH\_RP) or height-adjustable tapered peninsula (BH\_TP)

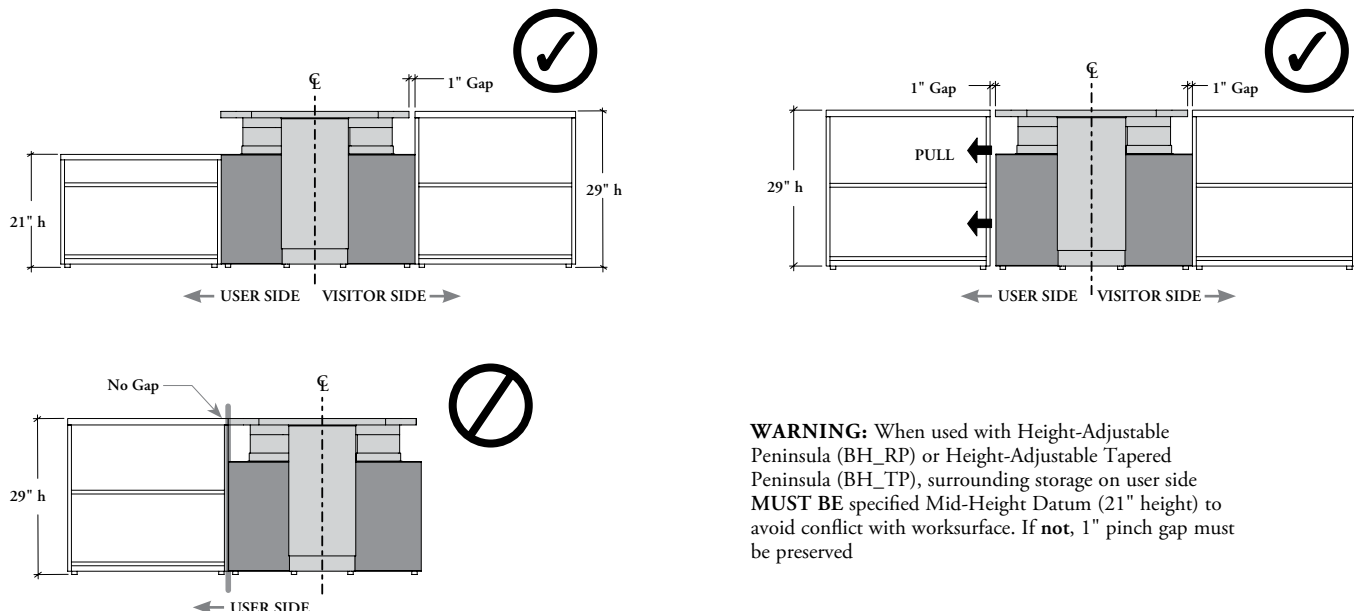

**WARNING:** When used with Height-Adjustable Peninsula (BH\_RP) or Height-Adjustable Tapered Peninsula (BH\_TP), surrounding storage on user side **MUST BE** specified Mid-Height Datum (21" height) to avoid conflict with worksurface. If **not**, 1" pinch gap must be preserved


# planning with workwall kneespace modules & workwall bookcases – mid – 21" h (continued)

workwall kneespace module – height-adjustability (BHKHW) (shown) or  
workwall bookcase – height-adjustable worksurface – mid – 21" h (BSMOBH) (continued)

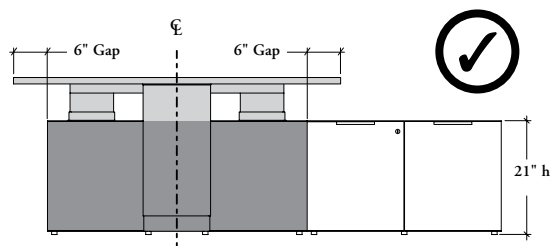


- When the Workwall Kneespace Module or Bookcase is used with the Height-Adjustable Diamond Meeting Peninsula (B\_HWP), the worksurface exceed the kneespace by 6" on each side
- Surrounding storage must be specified mid-height (21" height) to avoid conflict with the worksurface

workwall kneespace module – fixed worksurface (BHKFW) (shown) or  
workwall bookcase – fixed worksurface – mid – 21" h (BSMOBW)

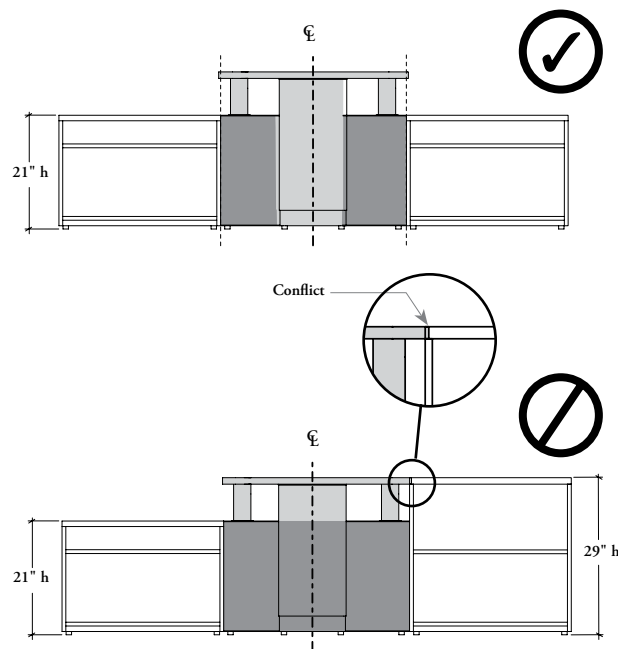


- When used with Fixed Run-Off – Mid Height (BM\_R) (Shown) or Fixed Extended Tapered Peninsula (BM\_EP), surrounding storage on both side **MUST BE** specified Mid-Height Datum (21" height) to avoid conflict with worksurface. This conflict will **not** occur with Fixed Meeting Peninsula (BC\_FR, BC\_FS or BC\_FT), since the worksurface will **not** exceed the module

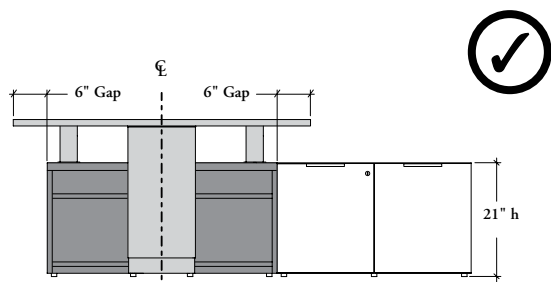

- When the module or bookcase (Shown) is used with the Fixed Diamond Meeting Peninsula (BC\_FP), the worksurface exceed by 6" on each side
- Surrounding storage must be specified mid-height (21" height) to avoid conflict with the worksurface

## workwall storage – integral top – 29" h basics

- ❗ When using a 29" high Workwall Storage with Integral Top (BSOBT, BSOBC, BSCT, BSDC, BSLFT, BSLFC, BSPT and BSPC), **no** wall anchoring is needed
- **Cannot** be installed under a desk
- These storage come with a closed back and **do not** provide any space for wire management or wall outlet clearance
- **Cannot** support one end of a semi-supported worksurface

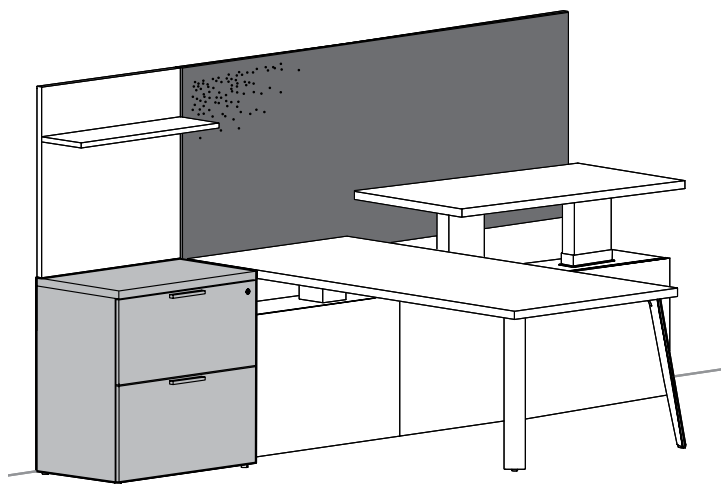


Workwall Lateral Files – Integral Top –  
29" h (BSLFT) (Shown)

### Storage with Integral Top

- Eight storage styles are available:
  - 2 open compartments, Straight (BSOBT) or with Cross Grain Top (BSOBC)
  - 2 solid doors, Straight (BSCT) or with Cross (BSDC) Grain Top
  - 2 file drawers, Straight (BSLFT) or with Cross (BSLFC) Grain Top
  - 2 file boxes and 1 file drawer, Straight (BSBT) or with Cross (BSPC) Grain Top
- Depths : 20", 24" or 27"
- Widths : 24" to 36" in 6" increments
- Height: 29" from the floor to the top of finished worksurface with a leveling range of 1"
- Top are available in the same styles/thicknesses (1 3/16" (M) or 1 9/16" (X)) as worksurfaces
- Five finish configurations are available:
  - All Laminate (L)
  - Wood Top; Laminate Front and Case (T)
  - Wood Top and Front; Laminate Case (U)
  - Wood Top and Case, Grade 2 Front (V)
  - All Wood (W)
- A Wall Panel can be mounted on these storage, refer to page 294, for more details
- Constructed without toe kick

### Pull Styles

- If applicable, five pull styles are available:

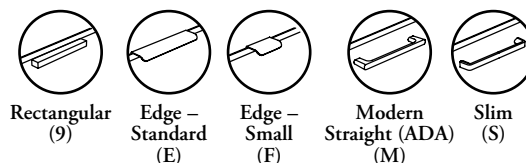


for more details, refer to page 333

- Storage (BSCT) can also be specified without pulls

# workwall storage – integral top – 29" h basics (continued)

## Storage with Integral Top (continued)



- Additional shelves **cannot** be specified separately
- Can store two rows of standard letter-size binders
- Have holes in 1 1/4" intervals on the inside walls for shelf height adjustment



## Workwall Bookcase – Integral Top – 29" h (BSOBT) or Workwall Bookcase – Integral Top – 29" h – Cross Grain (BSOBC)


- Comes with 1 adjustable shelf
- Bookcase depth is designed to align with the case of the other storage units with front

TOP VIEW

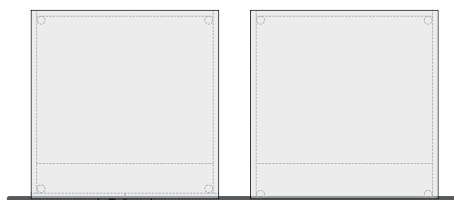


## Workwall Cabinet – Integral Top – 29" h (BSCT) or Workwall Cabinet – Integral Top – 29" h – Cross Grain (BSDC)

Two Storage Styles are available:




Pulls (P)



Touch-to-Open (T)


- Comes with 1 adjustable shelf
- Door fronts are flushed with front edge of the top

## workwall storage – integral top – 29" h basics (continued)




### **Workwall Lateral Files – Integral Top – 29" h (BSLFT) or Workwall Lateral Files – Integral Top – 29" h – Cross Grain (BSLFC)**

- Comes with two file drawers
- Come with a central locking system and full extension drawers that can accommodate both letter- and legal-size paper
- Equipped with an interlock system that prevents opening more than one drawer at a time
- Drawer fronts edge is flushed with front of the top
- Counterweights are included with this storage
- File drawers include 15" Plastic Cross File Bars

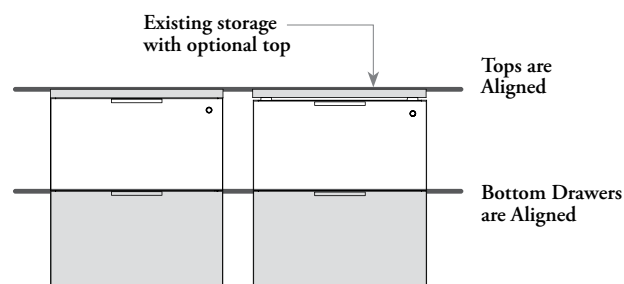


### **Storage Drawer Datum Line**

Only the worksurface top and bottom drawers datum line are aligned with existing laminate storage and optional top when positioned side-by-side

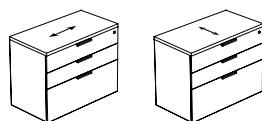

### **Workwall Stretch Pedestal – Integral Top – 29" h (BSPT) or Workwall Stretch Pedestal – Integral Top – 29" h – Cross Grain (BSPC)**


- Comes with two box drawers and one file drawer
- Come with a central locking system and full extension drawers that can accommodate both letter- and legal-size paper
- Equipped with an interlock system that prevents opening more than one drawer at a time
- Drawer fronts edge is flushed with front of the top
- Counterweights are included with this storage
- Include Anodized Pencil Tray in one box file drawer et one 15" Plastic Cross File Bars in the file drawer

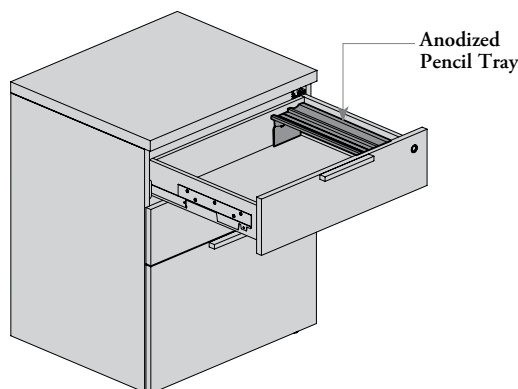



# workwall cabinet & stretch pedestal – mid – 21" h basics


- Back is partially open to provide wall access (electricity management)
- **Cannot** support one end of a semi-supported worksurface

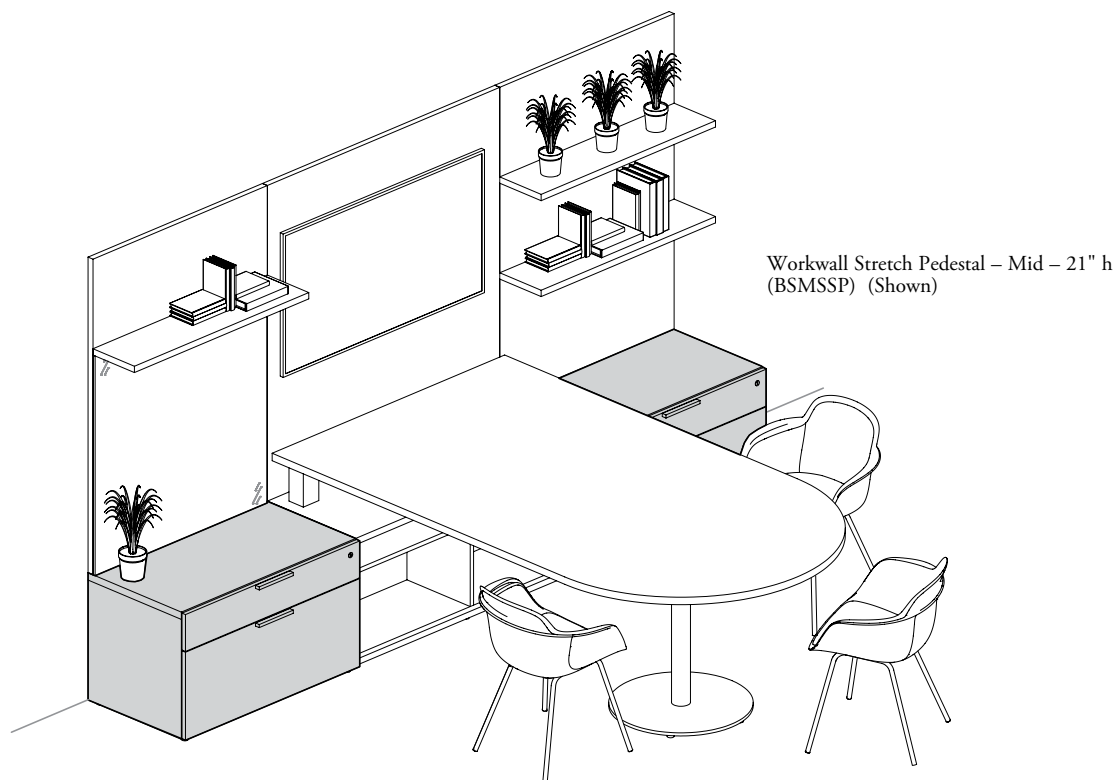


- The mid-height Workwall Cabinet (BSMD) or Workwall Stretch Pedestal (BSMSSP) provide against the wall storage for the office or meeting room
- Can support Wall Panels (B\_WCC, B\_WCO, B\_WAA, B\_WOO, B\_WMD, B\_WMO or B\_WMM)
- Available in 21" high from floor to top of finished worksurface with leveling range of 1"
- Storage is non handed

## Pull Styles

Six pull styles are available:

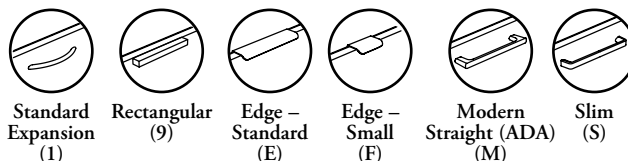


for more details, refer to page [333](#)

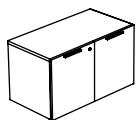

## Workwall Cabinet – Mid – 21" h (BSMD)

- Available in depths: 20" or 24"
- Available in widths: 24" to 36" (6" increments)
- Comes with one adjustable shelf
- Have holes in 1 1/4" intervals on the inside walls for shelf height adjustment
- Additional shelves **cannot** be specified separately
- **Cannot** be stored two rows of standard letter-size binders
- Can be used freestanding, **no** wall anchoring is needed

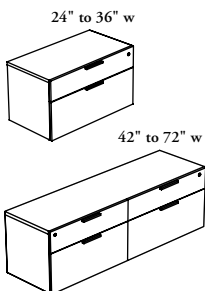

## Workwall Stretch Pedestal – Mid – 21" h (BSMSSP)


- Comes with box and file drawers
- Available in depths: 20" or 24"
- Available in widths: 24" to 72" (6" increments)
- Come full extension drawers that can accommodate both letter- and legal-size paper
- Must be wall anchored

## interior clearance – workwall cabinet – mid – 21" h


The following outline the interior clearance available for all mid-height Workwall Cabinet (BSMD).

### interior height clearance

- The open section features holes at 1 1/4" intervals on the interior walls, allowing for convenient adjustment of shelf height
- The following height dimension listed below are available for all mid-height Workwall Cabinet

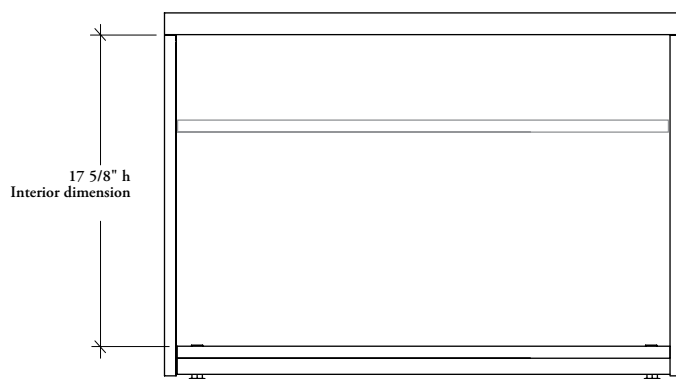

### interior depth clearance (20" deep shown)

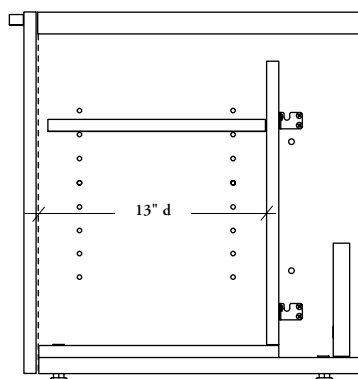


# understanding workwall credenzas – mid – 21" h

All dimensions in this section are nominal



## workwall credenzas – mid – 21" h

- Two styles can be specified:
  - Standard:**  
21" high Workwall Credenzas (BSMCD, BSMOD or BSMDOD)
  - Supporting:**  
Workwall Credenzas for Fixed or Height-Adjustable Worksurfaces – Mid – 21" h (BSMWL, BSMHLR, BSMHDP, BSMCFW, BSMCHR or BSMHCP)  
Workwall Credenzas for Height-Adjustable Worksurfaces – Mid – 21" h (BSMHLR or BSMCHR)
- Can support Wall Panels (B\_WCC\*, B\_WCO\*, B\_WAA, B\_WOO, B\_WMD, B\_WMO or B\_WMM)
- Two worksurface positions are available:
  - Left (L)
  - Right (R)
- For more details on mid-height Workwall Credenza Applications, refer to page 428


## standard style

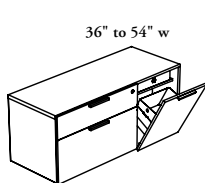


Workwall Credenza with Cabinet & Drawers – Mid – 21" h (BSMCD)

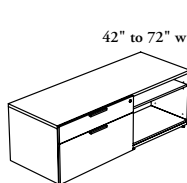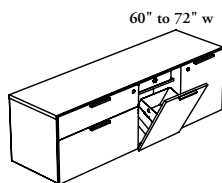

Workwall Credenza with Open & Drawers – Mid – 21" h (BSMOD)

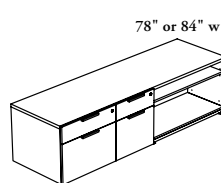

Workwall Credenza for Media with Open & Drawers – Mid – 21" h (BSMDOD)



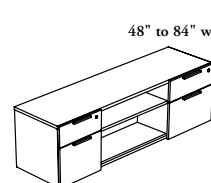


## supporting style

For more details on this product listed below, refer to Multi-Level Workstations & Meeting Tables Sections


### Workwall Credenza with Open & Drawers – Fixed Worksurface – Mid – 21" h (BSMWL)

Only products illustrated below can be installed on this credenza:

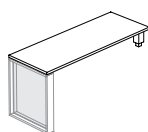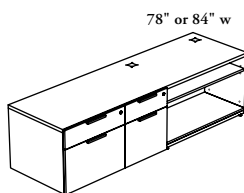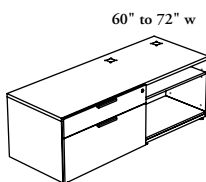


Fixed Run-Off – Mid-Height (BM\_R)

For more details on this product, refer to page 111 and following pages

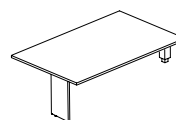

Fixed Rectangular Meeting Peninsula (BC\_FR)


For more details on these products, refer to page 530 and following pages

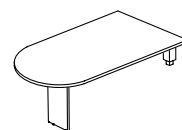


Fixed D-Shape Meeting Peninsula (BC\_FD)

### Workwall Credenza with Open & Combo – Fixed Worksurface – Mid – 21" h (BSMCFW)


Only products illustrated below can be installed on this module:

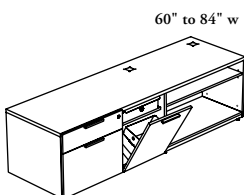


Recycling/Waste Bins (R)

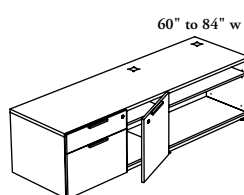

Storage (S)

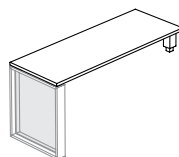

Fixed Run-Off – Mid-Height (BM\_R)

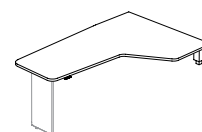

Fixed Extended Tapered – Mid-Height (BM\_EP)

For more details on this product, refer to page 112 and following pages



# understanding workwall credenzas – mid – 21" h (continued)

## supporting style


For more details on these products listed below, refer to Multi-Level Workstations Section

### Workwall Credenza with Open & Drawers – Height-Adjustable Run-Off – Mid – 21" h (BSMHLR)


Only products illustrated below can be installed on this credenza:

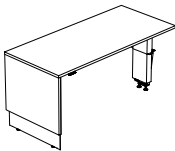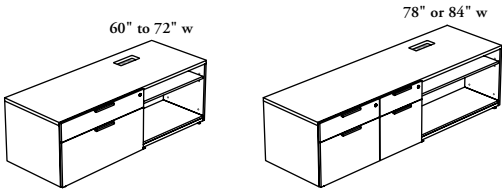


Height-Adjustable  
Run-Off  
(BH\_RB)

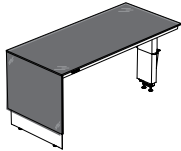

Height-Adjustable  
Run-Off with Glass Top  
(BHGRB)

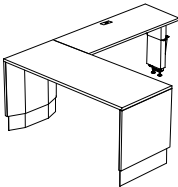



Height-Adjustable  
Desk for U-Shape  
Workstation  
(BH\_UB)

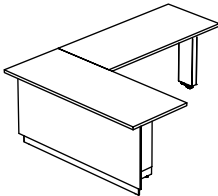


Full-Modesty Height-  
Adjustable Desk  
for U-Shape Workstation  
(BF\_U)

### Workwall Credenza with Open & Drawers – Height-Adjustable Peninsula – Mid – 21" h (BSMHDP)

Only products illustrated below can be installed on this credenza:

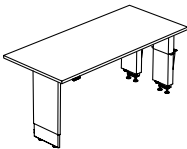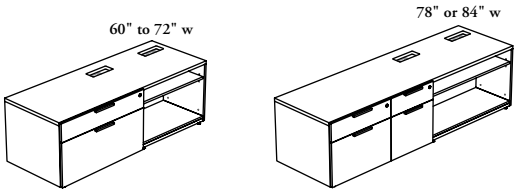

Height-Adjustable  
Peninsula  
(BH\_RP)

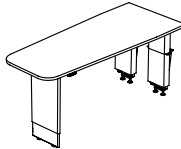

Height-Adjustable  
Tapered Peninsula  
(BH\_TP)


# understanding workwall credenzas – mid – 21" h (continued)

## supporting style (continued)


For more details on these products listed below, refer to Multi-Level Workstations Section

### Workwall Credenza with Open & Combo – Height-Adjustable Run-Off – Mid – 21" h (BSMCHR)


Only products illustrated below can be installed on this credenza:

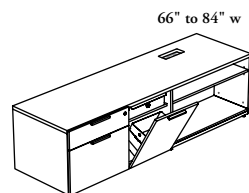


Recycling/Waste Bins (R)

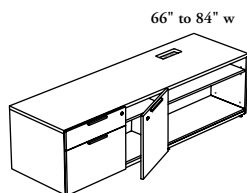


Storage (S)

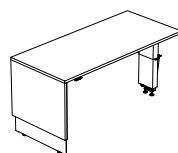


Height-Adjustable  
Run-Off  
(BH\_RB)

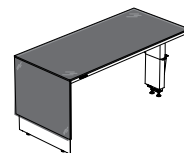

Height-Adjustable  
Run-Off with Glass Top  
(BHGRB)

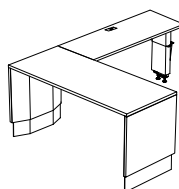


Height-Adjustable  
Desk for U-Shape  
Workstation  
(BH\_UB)

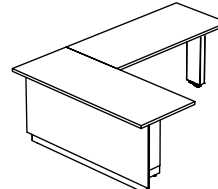


Full-Modesty Height-  
Adjustable Desk  
for U-Shape Workstation  
(BF\_U)

### Workwall Credenza with Open & Combo – Height-Adjustable Peninsula – Mid – 21" h (BSMHCP)


Only products illustrated below can be installed on this credenza:

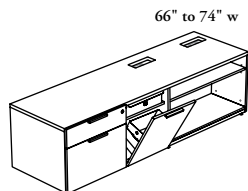


Recycling/Waste Bins (R)

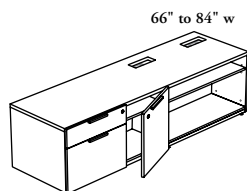


Storage (S)

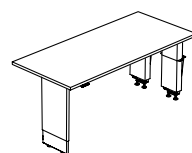

Height-Adjustable  
Peninsula  
(BH\_RP)

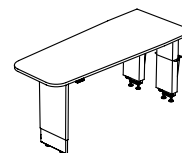

Height-Adjustable  
Tapered Peninsula  
(BH\_TP)

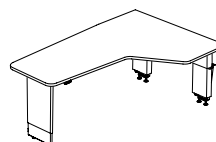


Height-Adjustable  
Extended Tapered  
Peninsula  
(BH\_PE)

# understanding workwall credenzas – mid – 21" h (continued)


## supporting style

For more details on these products listed below, refer to Multi-Level Workstations Section


### Workwall Credenza with Drawers – Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMCHC)

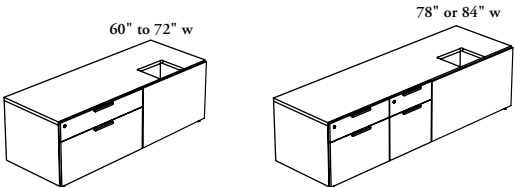

Only compatible with the following worksurfaces:




Height-Adjustable  
Cantilever Rectangular  
Run-Off  
(BH\_CR)



Height-Adjustable  
Cantilever Wing Shape  
Run-Off  
(BH\_CP)


### Workwall Credenza with Drawers and Cabinet – Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMHLC)

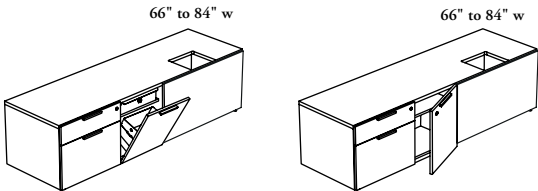


Recycling/Waste Bins (R)

Storage (S)

Only compatible with the following worksurfaces:



Height-Adjustable  
Cantilever Rectangular  
Run-Off  
(BH\_CR)




Height-Adjustable  
Cantilever Wing Shape  
Run-Off  
(BH\_CP)

## workwall credenza – mid – 21" h components

The following should be considered when planning with Expansion Casegoods mid-height Workwall Credenzas for Height-Adjustability or Fixed Worksurfaces.


components & cable routing on standard or fixed worksurface supporting style (shown)

BACK VIEW

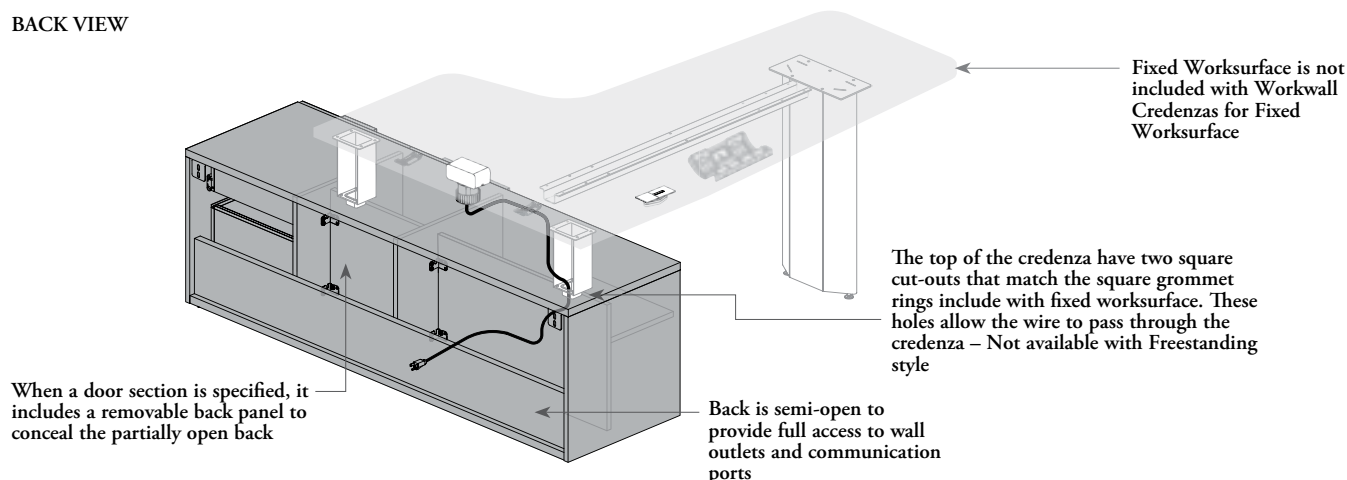

components & cable routing on standard or height-adjustable worksurface supporting style


BACK VIEWS

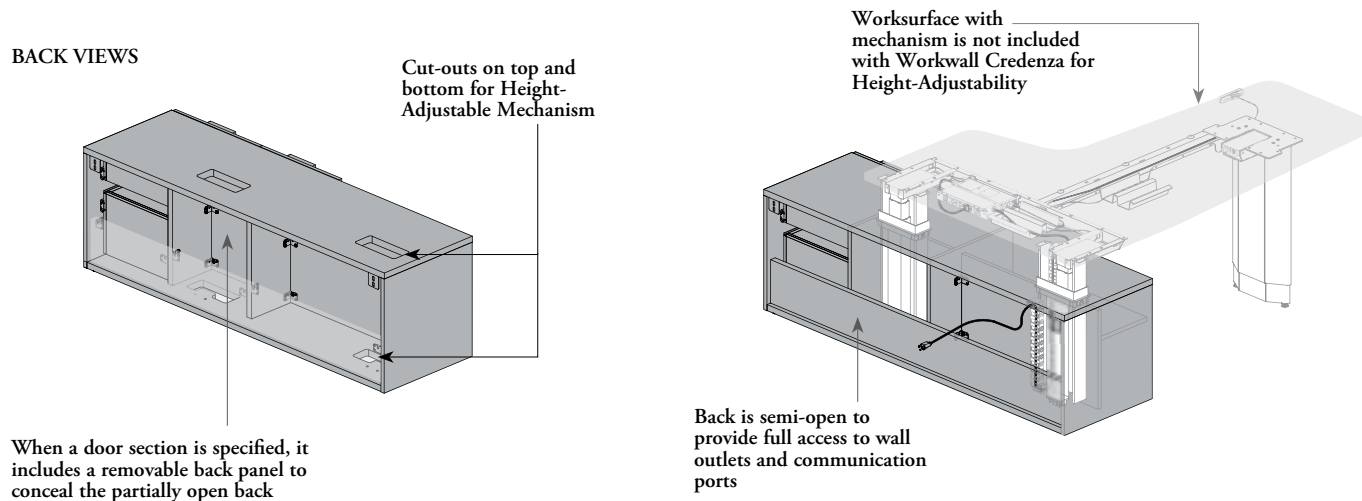

# workwall credenza – mid – 21" h components (continued)


components & cable routing on height-adjustable cantilever run-off supporting style

BACK VIEWS

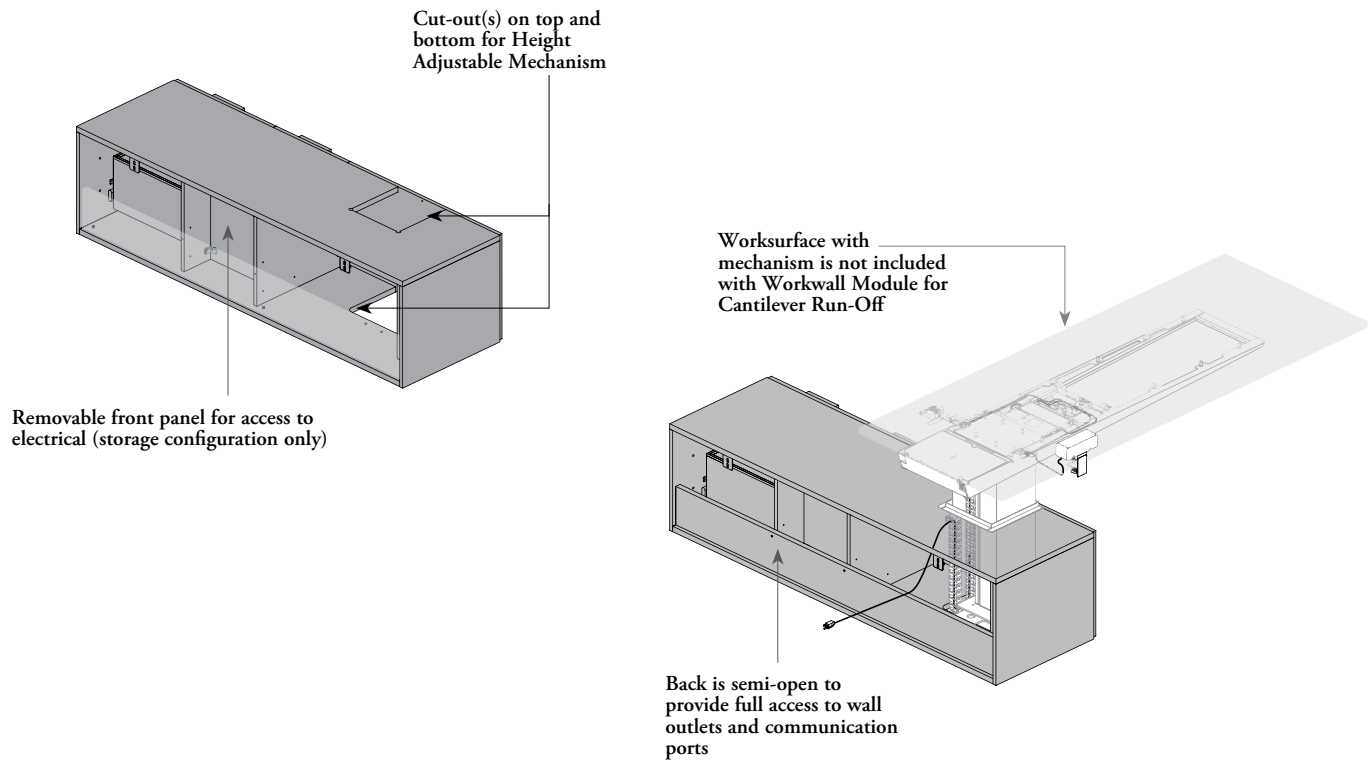

## pull styles

Six pull styles are available:

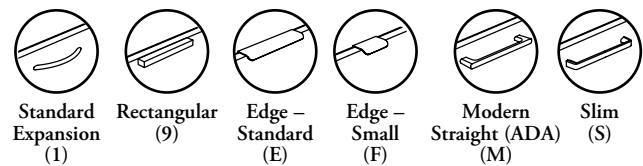

for more details, refer to page 333



# workwall credenza – mid – 21" h components (continued)

## door configurations on workwall credenzas with cabinet section configuration

Come with 18" central door front nominal width



- Four Workwall Credenzas for Fixed or Height-Adjustability styles:
  - Workwall Credenza with Cabinet and Drawers – Mid – 21" h (BSMCD)
  - Workwall Credenza with Open Combo – Fixed Worksurface – Mid – 21" h (BSMCFW)
  - Workwall Credenza with Open Combo – Height-Adjustable Run-Off – Mid – 21" h (BSMCHR)
  - Workwall Credenza with Open Combo – Height-Adjustable Peninsula – Mid – 21" h (BSMHCP) (Shown)
  - Workwall Credenza with Drawers and Cabinet for Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMHLC)
- Two Door Configurations are available:

### Recycling and Waste Bins (R)

- Provides closed recycling and/or waste bin storage
- Storage Bins are removable
- Comes with one flip-down door
- This section is **not** lockable


### Recycling and Waste Bins Anatomy

Waste bin require a 20" wide x 12" high bag (**13 Liter Capacity**) for a true fit. Waste bin include side detail to manage the excess of bag

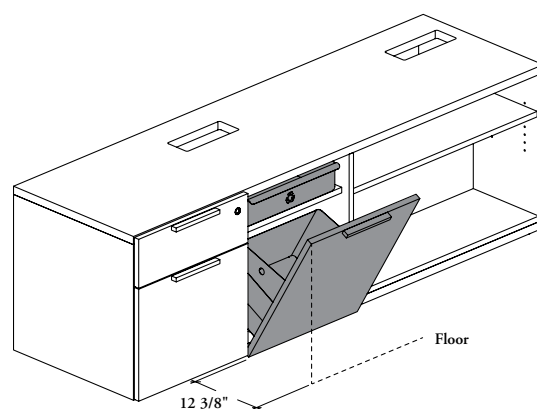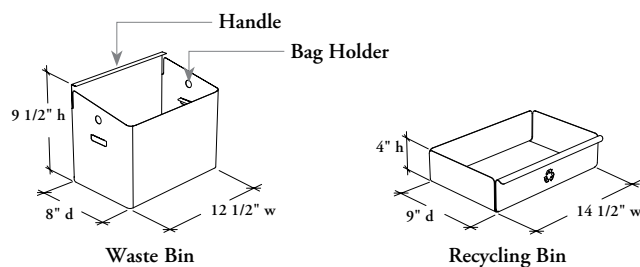

### Storage (S)

- Provides closed and lockable storage with one adjustable shelf
- Comes with one adjustable shelf and has holes in 1 1/4" intervals on the inside walls for shelf height adjustment

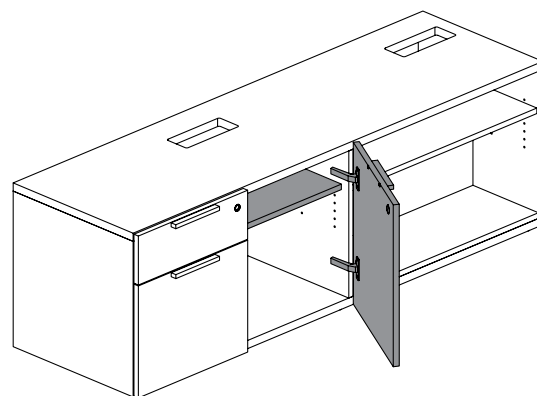

## workwall credenza – mid – 21" h basics


**Expansion Casegoods Workwall Credenzas can be used alone or with a selection of Fixed or Height-Adjustable Worksurfaces.**

- ❗ When using a Workwall Credenza (BSMCD, BSMOD, BSMWL, BSMHLR, BSMDOD and BSMCHR), wall anchored is recommended for optimal stiffness but is **not** mandatory
- When using a Workwall Credenza (BSMHDP, BSMCFW and BSMHCP), no wall anchoring is needed
- Cannot** be installed under a desk
- Back is partially open to provide wall access (electricity management)
- A Seat Pad/Cushion can be installed on these credenzas


### Hinged Doors

Hinges allow the door to open up to 110°


- Provides storage against the wall and support for one end Fixed or Height-Adjustable Worksurfaces
- Height: 21"
- Depths: 20" or 24"
- Include levelers with an adjustment range of 1"
- Lock option is standard lock
- If applicable, open section with adjustable shelf configurations has holes in 1 1/4" intervals on the inside walls for shelf height adjustment
- Additional shelves **cannot** be specified for these products
- A Wall Panel is **not** mandatory for mounting fixed or Height-Adjustable Worksurface
- The bottom drawer of the Storage are aligned with the bottom drawer off all filing storage of the Freestanding Storage section, except the metal one, when placed side-by-side

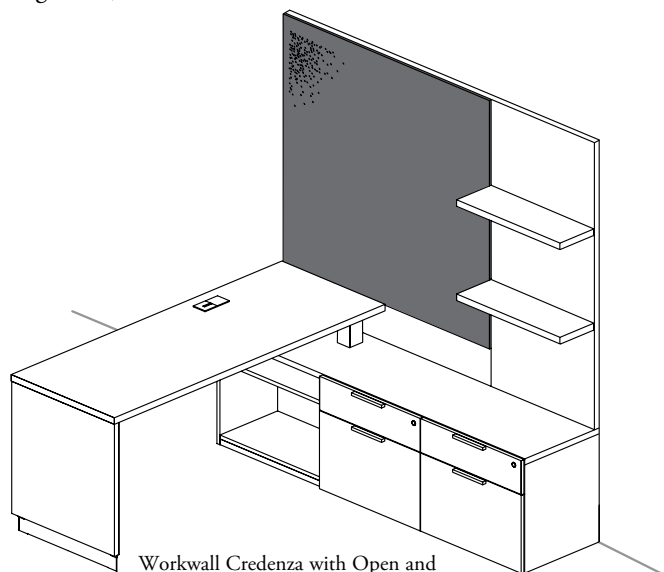

Workwall Credenza with Open and Drawers – Fixed Worksurface – Mid – 21" h (BSMWL) (Shown)

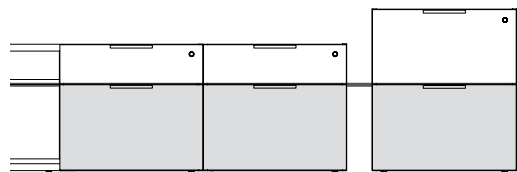


Bottom Drawers are aligned

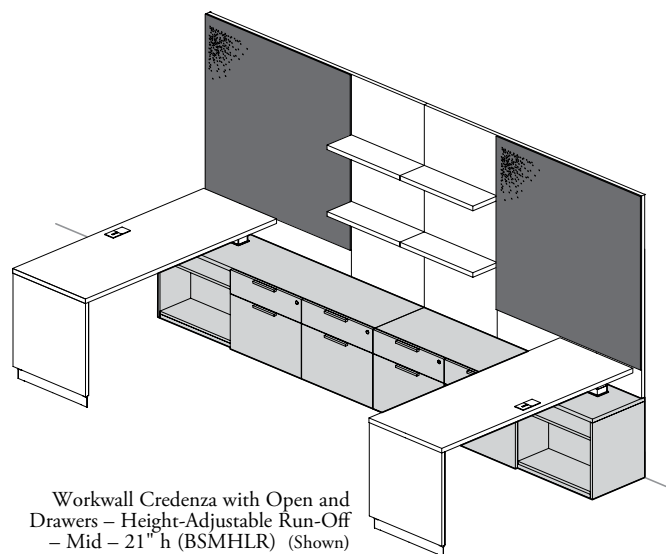


Workwall Credenza with Open and Drawers – Height-Adjustable Run-Off – Mid – 21" h (BSMHLR) (Shown)

# workwall credenza – mid – 21" h basics (continued)

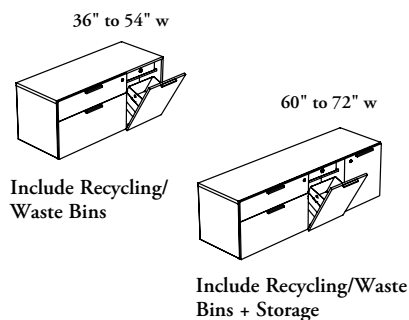


## Workwall Credenza with Cabinet and Drawers – Mid – 21" h (BSMCD)

- Cannot support one end of a semi-supported worksurface
- Widths: 36" to 72" (6" increments)
- When 60" wide and more is specified, an additional door section appears, opposite side to drawer's section
- Features full-extension drawers capable of accommodating both letter- and legal-size paper
- Drawer Configurations:
  - Drawers on Left (L) (Shown)
  - Drawer on Right (R)

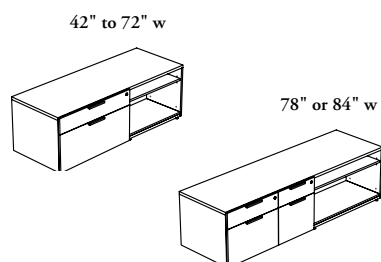


## Workwall Credenza with Open and Drawers – Mid – 21" h (BSMOD)

- Cannot support one end of a semi-supported worksurface
- Widths: 42" to 84" (6" increments)
- Features full-extension drawers capable of accommodating both letter- and legal-size paper
- Drawer Configurations:
  - Drawers on Left (L) (Shown)
  - Drawer on Right (R)

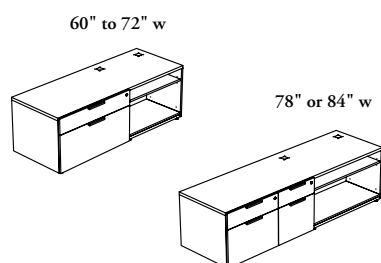


## Workwall Credenza with Open and Drawers – Fixed Worksurface – Mid 21" h (BSMWL)

- Widths: 60" to 84" (6" increments)
- Fixed Worksurface Depths: 30" or 36"
- Worksurface Positions:
  - Left (L)
  - Right (R) (Shown)
- Features full-extension drawers capable of accommodating both letter- and legal-size paper
- Must be used with:
  - Fixed Run-Off – Mid-Height (BM\_R)
  - Fixed Rectangular Meeting Peninsula (BC\_FR)
  - Fixed D-Shape Meeting Peninsula (BC\_FD)

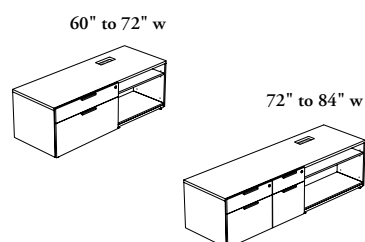

## Workwall Credenza with Open and Drawers – Height-Adjustable Run-Off – Mid – 21" h (BSMHRL)


- Widths: 60" to 84" (6" increments)
- Height-Adjustable Worksurface Depths: 23", 29" or 35"
- Worksurface Positions:
  - Left (L)
  - Right (R) (Shown)
- Features full-extension drawers capable of accommodating both letter- and legal-size paper
- Must be used with:
  - Full-Modesty Height-Adjustable Desk for U-Shape Workstation – Offset Bases (BF\_U)
  - Height-Adjustable Run-Off – Bevel Base (BH\_RB)
  - Height-Adjustable Run-Off with Glass Top – Bevel Base (BHGRB)
  - Height-Adjustable Desk for U-Shape Workstation – Bevel Bases
  - Mid-Height (BH\_UBK)

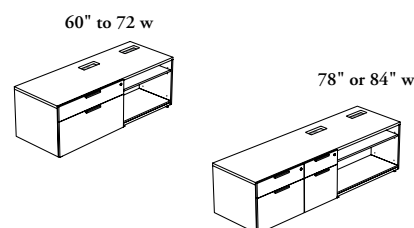


## Workwall Credenza with Open and Drawers – Height-Adjustable Peninsula – Mid – 21" h (BSMHDP)

- Widths: 60" to 84" (6" increments)
- Height-Adjustable Worksurface Depth: 35"
- Worksurface Positions:
  - Left (L)
  - Right (R) (Shown)
- Features full-extension drawers capable of accommodating both letter- and legal-size paper
- Must be used with:
  - Height-Adjustable Peninsula – Bevel Post Leg (BH\_RP or BH\_TP)

## workwall credenza – mid – 21" h basics (continued)

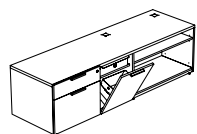


Recycling/Waste Bins (R)

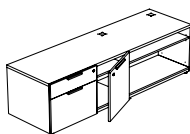


Storage (S)

### Workwall Credenza with Open and Combo – Fixed Worksurface – Mid 21" h (BSMCFW)

- Widths: 66" to 84" (6" increments)
- Fixed Worksurface Depth: 30" to 54" (6" increments)
- Worksurface Positions:
  - Left (L)
  - Right (R) (Shown)
- Door Configurations:
  - Recycling/Waste Bins (R)
  - Storage (S)
- Features full-extension drawers capable of accommodating both letter- and legal-size paper
- Must be used with:
  - Fixed Run-Off – Bevel Base (BM\_R)
  - Fixed Extended Tapered Peninsula – Bevel Post Leg (BM\_EP)

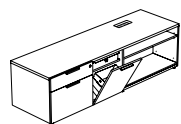


Recycling/Waste Bins (R)

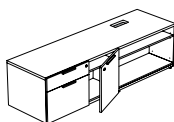


Storage (S)

### Workwall Credenza with Open and Combo – Height-Adjustable Run-Off – Mid – 21" h (BSMCHR)

- Widths: 66" to 84" (6" increments)
- Height-Adjustable Worksurface Depths: 23", 29" or 35"
- Worksurface Positions:
  - Left (L)
  - Right (R) (Shown)
- Door Configurations:
  - Recycling/Waste Bins (R)
  - Storage (S)
- Features full-extension drawers capable of accommodating both letter- and legal-size paper
- Must be used with:
  - Full-Modesty Height-Adjustable Desk for U-Shape Workstation – Offset Bases (BF\_U)
  - Height-Adjustable Run-Off – Bevel Base (BH\_RB)
  - Height-Adjustable Run-Off with Glass Top – Bevel Base (BHGRB)
  - Height-Adjustable Desk for U-Shape Workstation – Bevel Bases
  - Mid-Height (BH\_UBK)

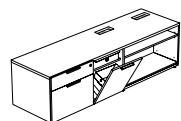

Recycling/Waste Bins (R)

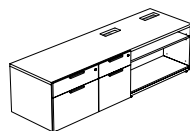


Storage (S)

### Workwall Credenza with Open and Combo – Height-Adjustable Peninsula – Mid – 21" h (BSMHCP)

- Widths: 66" to 84" (6" increments)
- Height-Adjustable Worksurface Depth: 35", 46" or 52"
- Worksurface Positions:
  - Left (L)
  - Right (R) (Shown)
- Door Configurations:
  - Recycling/Waste Bins (R)
  - Storage (S)
- Features full-extension drawers capable of accommodating both letter- and legal-size paper
- Must be used with:
  - Height-Adjustable Peninsula – Bevel Post Leg (BH\_RP, BH\_TP or BH\_PE)

48" to 84" w

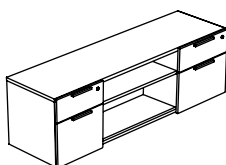


### Workwall Credenza for Media with Open and Drawers – Mid – 21" h (BSMDOD)

- Cannot support one end of a semi-supported worksurface
- Widths: 42" to 84" (6" increments)
- Features full-extension drawers capable of accommodating both letter- and legal-size paper

# workwall credenzas – height-adjustable cantilever run-off – mid – 21" h basics

These Workwall Credenzas can be used with a Height-Adjustable Cantilever Run-Off.


- ❗ • Expansion Casegoods Workwall Credenzas are only compatible with Height-Adjustable Cantilever Run-Offs (BH\_CR and BH\_CP)
- Must be installed against a building wall
- Wall anchoring is recommended for optimal stiffness but is **not** mandatory
- **Do not** require attachment to another Freestanding or Workwall Storage unit. However, when connected together, they ensure a perfect installation
- Includes a front removable panel for electrical and cable access
- Back is partially open to provide wall access (electricity management)
- A Seat Pad/Cushion can be installed on these credenza

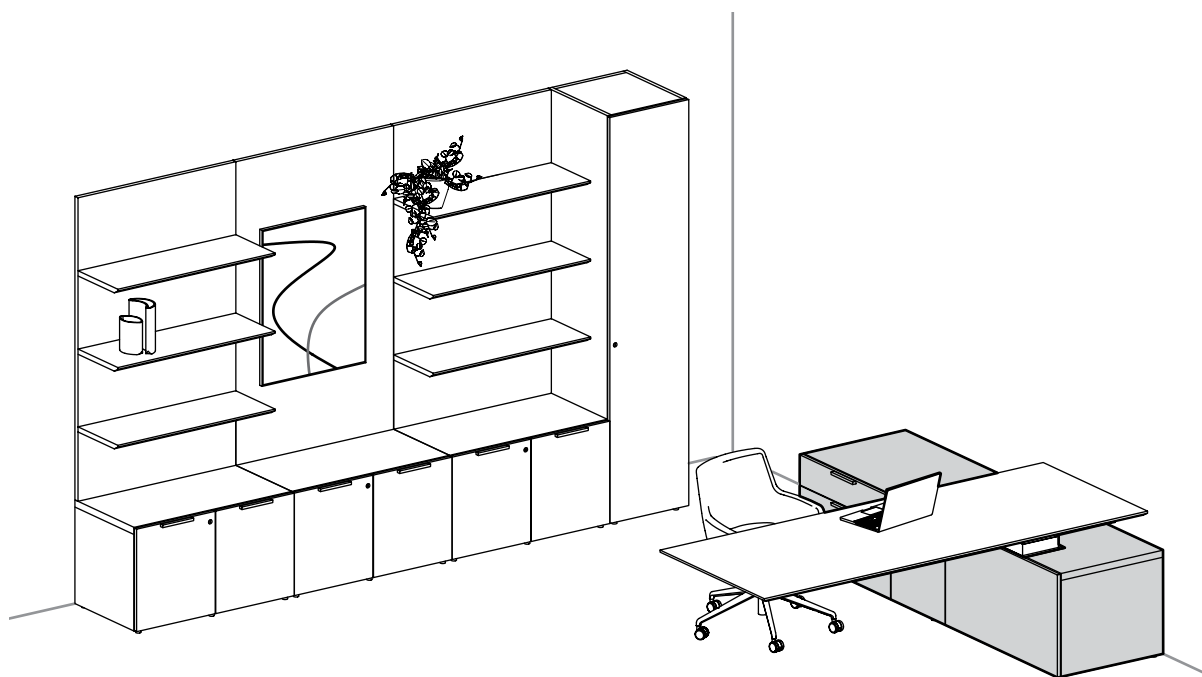

Workwall Credenza with Drawers and Cabinet – Height-Adjustable Run-Off – Mid – 21" h (BSMHLC) (Shown)


## workwall credenzas – height-adjustable cantilever run-off – mid – 21" h basics (continued)

- Provides storage against the wall and support for one end Fixed or Height-Adjustable Cantilever Run-Off
- A Wall Panel is **not** mandatory for mounting fixed or Height Adjustable Worksurface
- Can support Wall Panels (B\_WCC, B\_WCO, B\_WAA, B\_WOO, B\_WMD, B\_WMO or B\_WMM)
- Include levelers with an adjustment range of 1"
- Features full-extension drawers capable of accommodating both letter- and legal-size paper

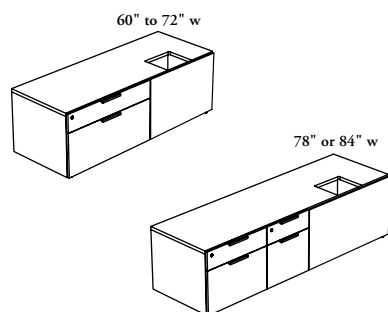


### Workwall Credenza with Drawers – Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMCHC)

- Depth: 24"
- Widths: 60" to 84" (6" increments)
- Height: 21"
- Height-Adjustable Worksurface Depths: 28" and 34"

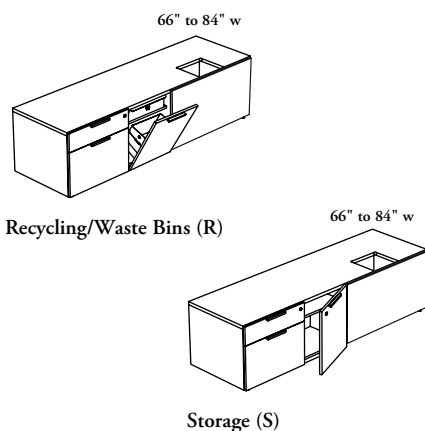

### Workwall Credenza with Drawers and Cabinet – Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMHLC)

- Depth: 24"
- Widths: 66" to 84" (6" increments)
- Height: 21"
- Height-Adjustable Worksurface Depths: 28" and 34"
- Worksurface Positions:
  - Left (L)
  - Right (R) (Shown)
- Door Configurations:
  - Recycling/Waste Bins (R)
  - Storage (S)

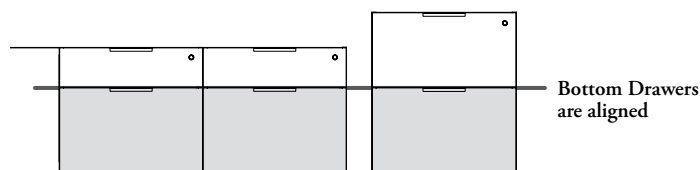

- The bottom drawer of the Storage aligns with the bottom drawers of all filing storage in the Freestanding Storage section, except for the metal one when they are placed side-by-side

# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths


The following illustrates Expansion Casegoods mid-height Workwall Credenzas drawer and open sections nominal widths.

## workwall credenza with cabinet & drawers – mid – 21" h (BSMCD)

Only Drawers on Left (L) is shown


- Comes with one Box & File Drawers Section
- Includes one Recycling/Waste Bins Section

36" Width

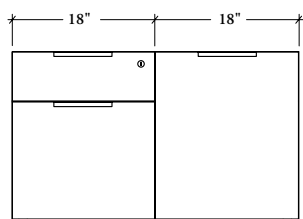


Recycling/Waste Bins Section


42" Width

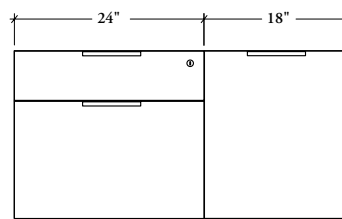


48" Width

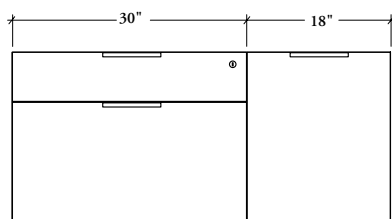

54" Width

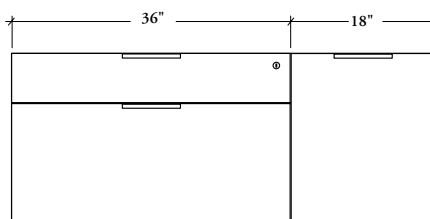


60" Width

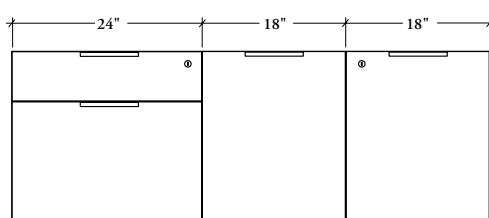

Recycling/Waste Bins Section


Storage Section

66" Width

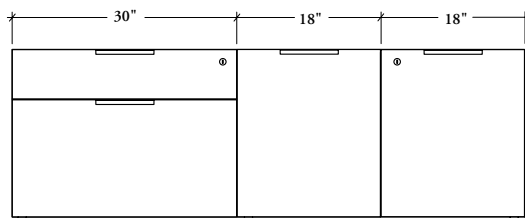

- Comes one Box & File Drawers Section
- Includes one Recycling/Waste Bins and one Storage Sections

72" Width







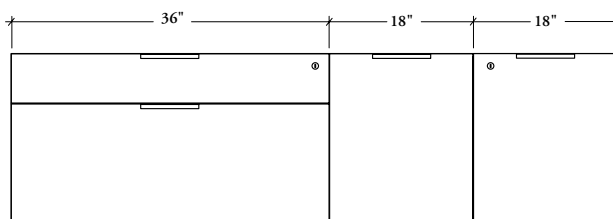


# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)


workwall credenza with open & drawers – mid – 21" h (BSMOD)

Only Drawers on Left (L) is shown

- Comes with one Box & File Drawers Section
- Includes one Open Section

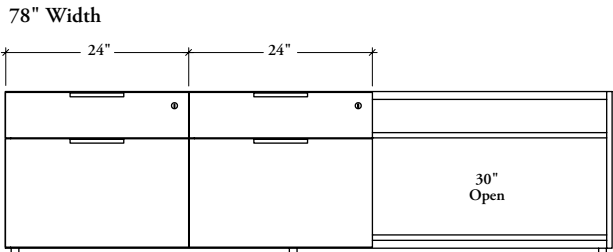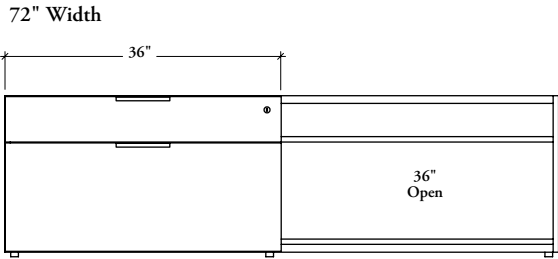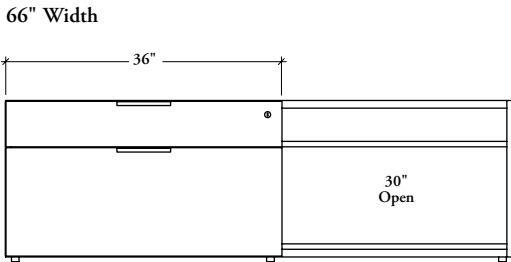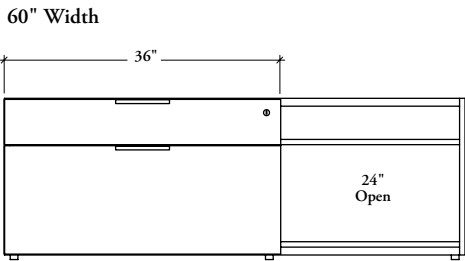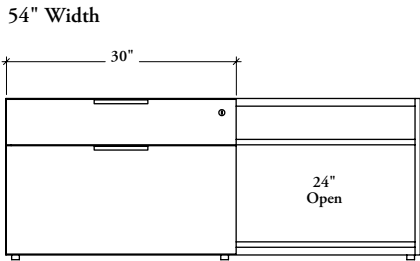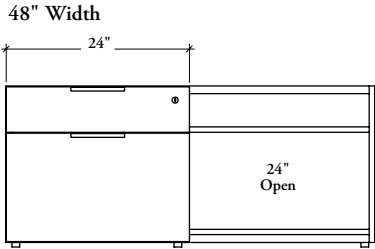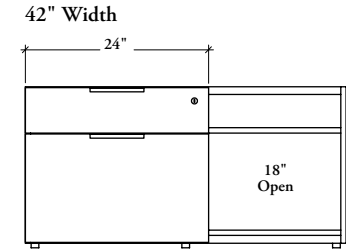

- Comes two Box & File Drawers Section
- Includes one Open Section

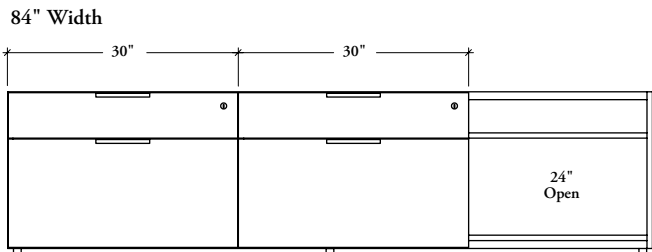




# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza with open & drawers – height-adjustable run-off – mid – 21" h (BSMHRLR)

Only Drawers on Left (L) is shown


for 23" deep Height-Adjustable Desk  
for U-Shape or Full-Modesty Height-  
Adjustable Desk for U-Shape

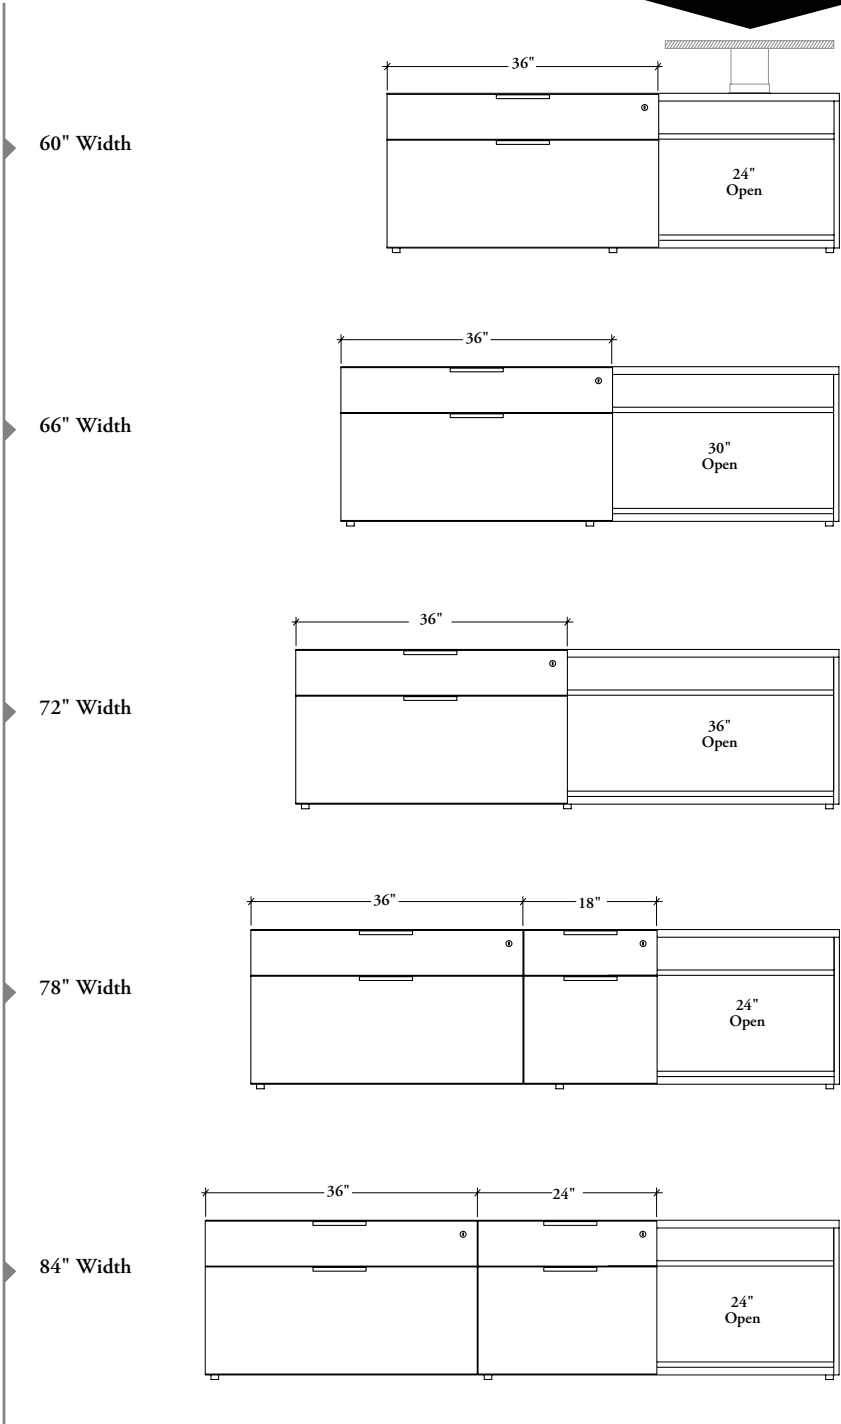

workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza with open & combo – height-adjustable run-off – mid – 21" h (BSMCHR)

Only Drawers on Left (L) is shown

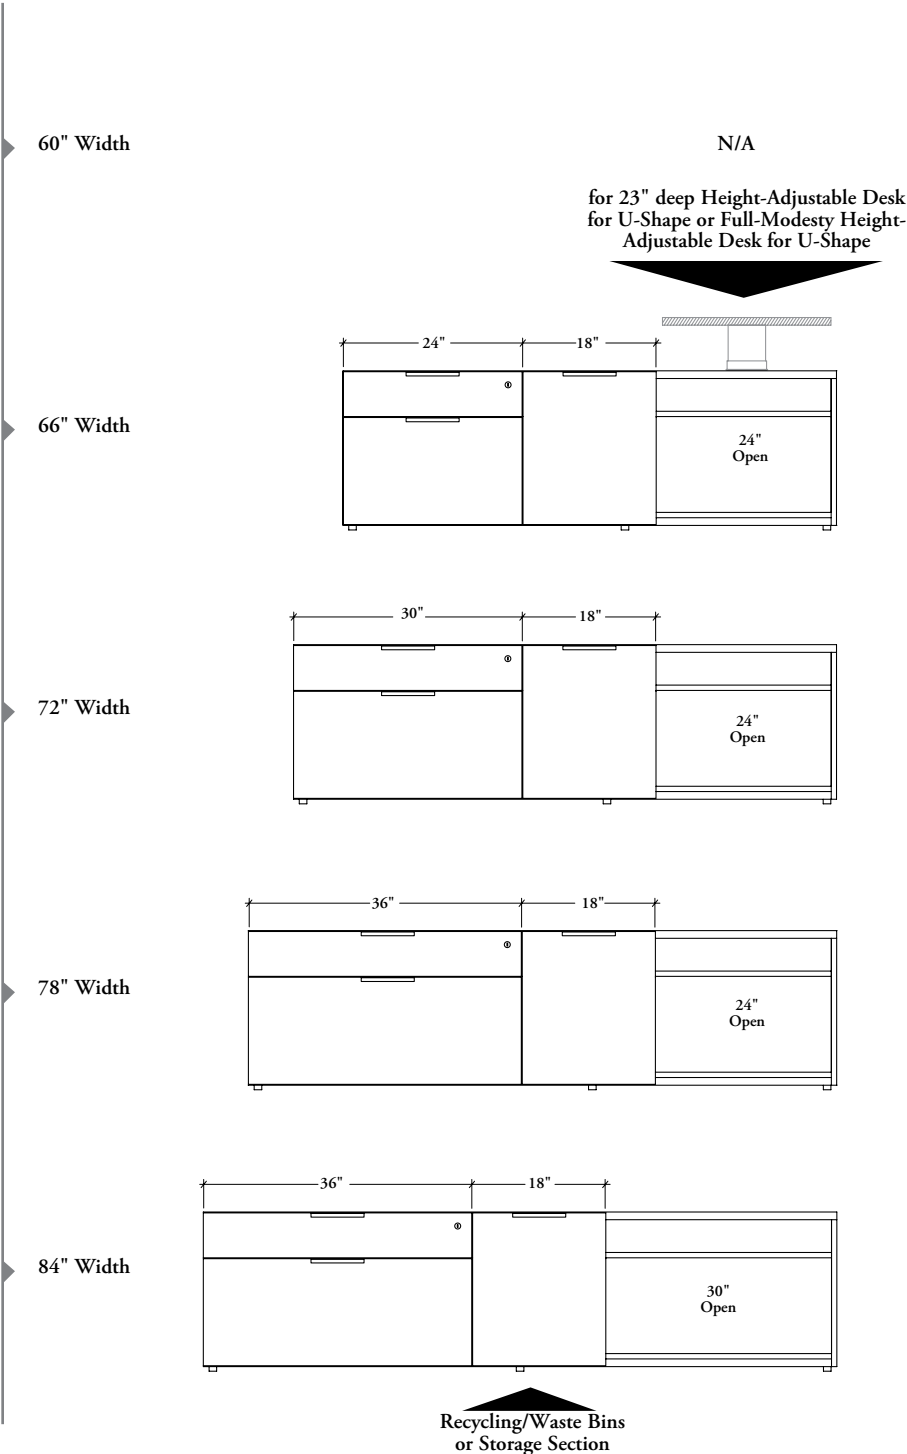


# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza with open & drawers – fixed worksurface – mid – 21" h (BSMWL),  
workwall credenza with open & drawers – height-adjustable run-off – mid – 21" h (BSMHLR) (shown)  
or workwall credenza with drawers – height-adjustable cantilever run-off – mid – 21" h (BSMCHC)

Only Drawers on Left (L) is shown

for 30" deep Fixed Run-Off or  
for 29" deep Height-Adjustable Run-Off, Height-  
Adjustable Desk for U-Shape or Full-Modesty  
Height-Adjustable Desk for U-Shape  
OR  
for 28" deep Height-Adjustable Cantilever Run-Off

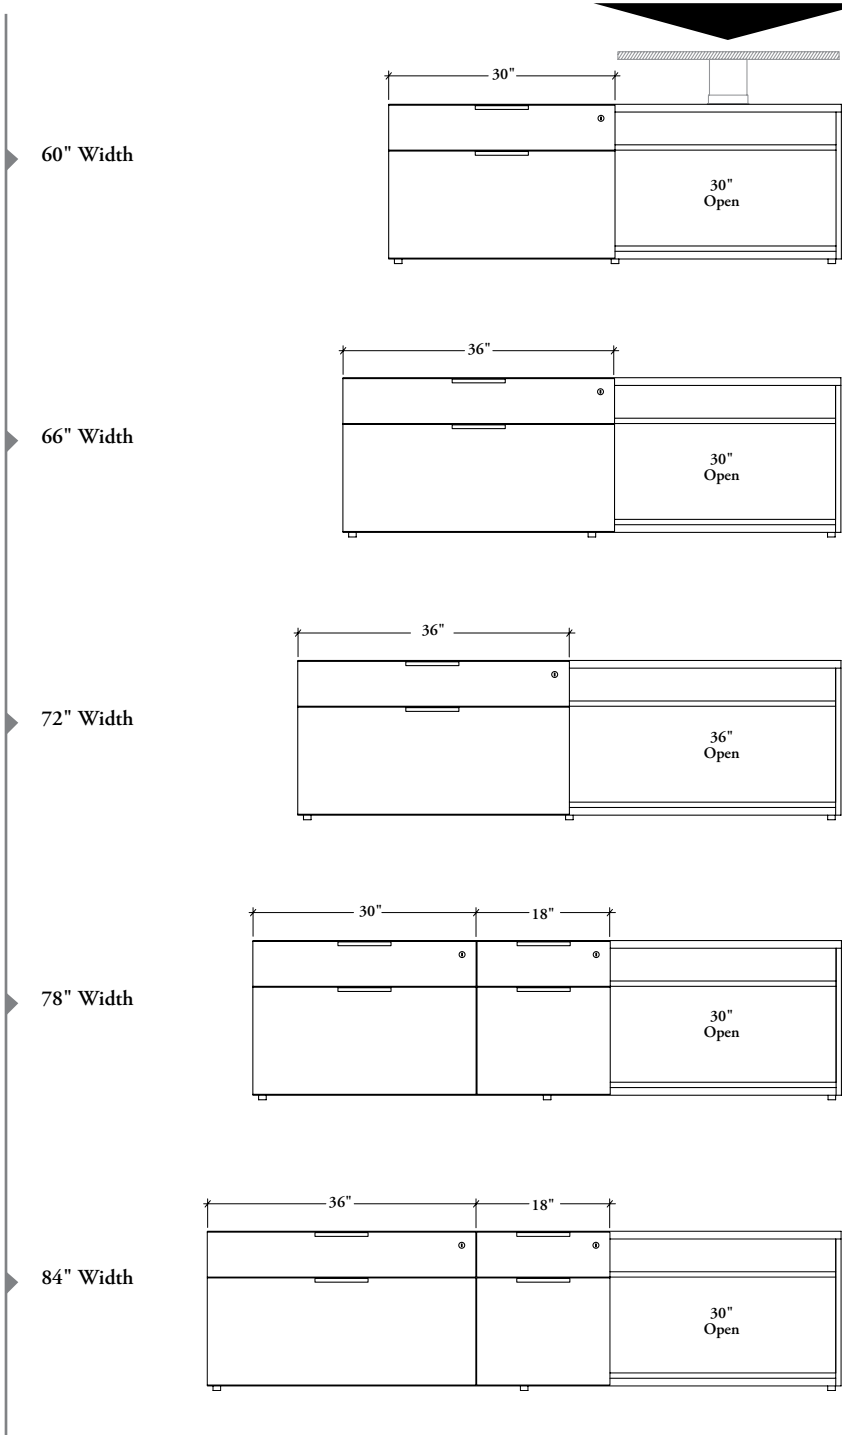


# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza with open & drawers – fixed worksurface mid – 21" h (BSMWL),  
workwall credenza with open & drawers – height-adjustable run-off – mid – 21" h (BSMHLR) (shown),  
workwall credenza with open & drawers – height-adjustable peninsula – mid – 21" h (BSMHDP) or  
workwall credenza with drawers – height-adjustable cantilever run-off – mid – 21" h (BSMCHC)

Only Drawers on Left (L) is showned


for 36" deep Fixed Run-Off or  
for 35" deep Height-Adjustable Run-Off or Height-Adjustable Rect.  
or Tap. Peninsulas  
OR  
for 34" deep Height-Adjustable Cantilever Run-Off

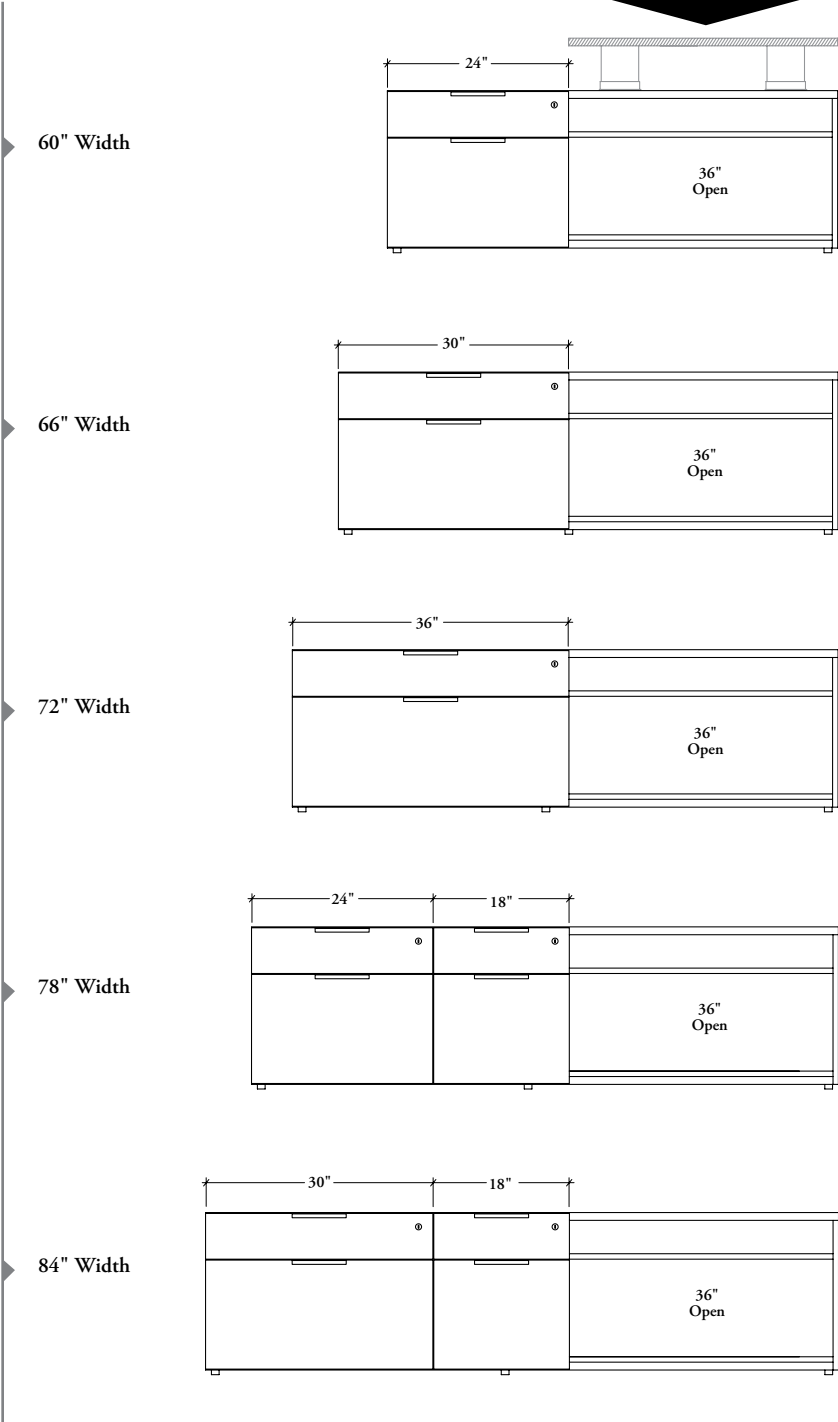

# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza with open & combo – fixed-worksurface – mid – 21" h (BSMCFW),  
 workwall credenza with open & combo – height-adjustable run-off – mid – 21" h (BSMCHR) (shown),  
 workwall credenza with drawers and cabinet – height-adjustable cantilever run-off – mid – 21" h (BSMHLC)


Only Drawers on Left (L) is shown

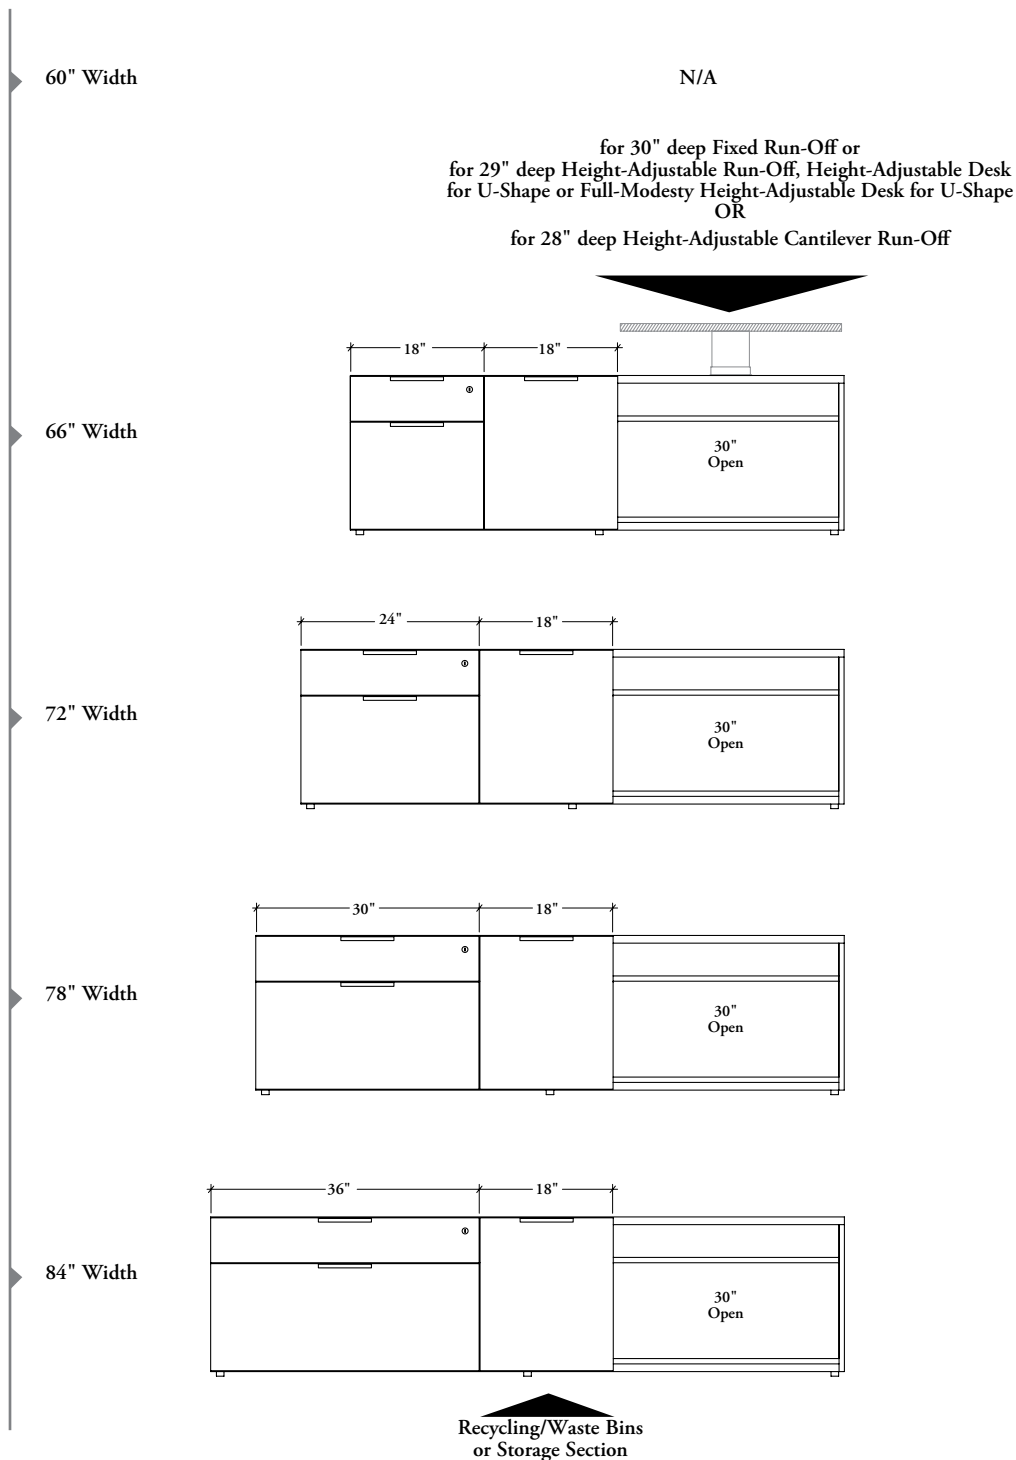

# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza with open & combo – fixed-worksurface – mid – 21" h (BSMCFW),  
workwall credenza with open & combo – height-adjustable run-off – mid – 21" h (BSMCHR) (shown),  
workwall credenza with open & combo – height-adjustable peninsula – mid – 21" h (BSMHCP) or  
workwall credenza with drawers and cabinet – height-adjustable cantilever run-off – mid – 21" h (BSMHLC)


Only Drawers on Left (L) is showned

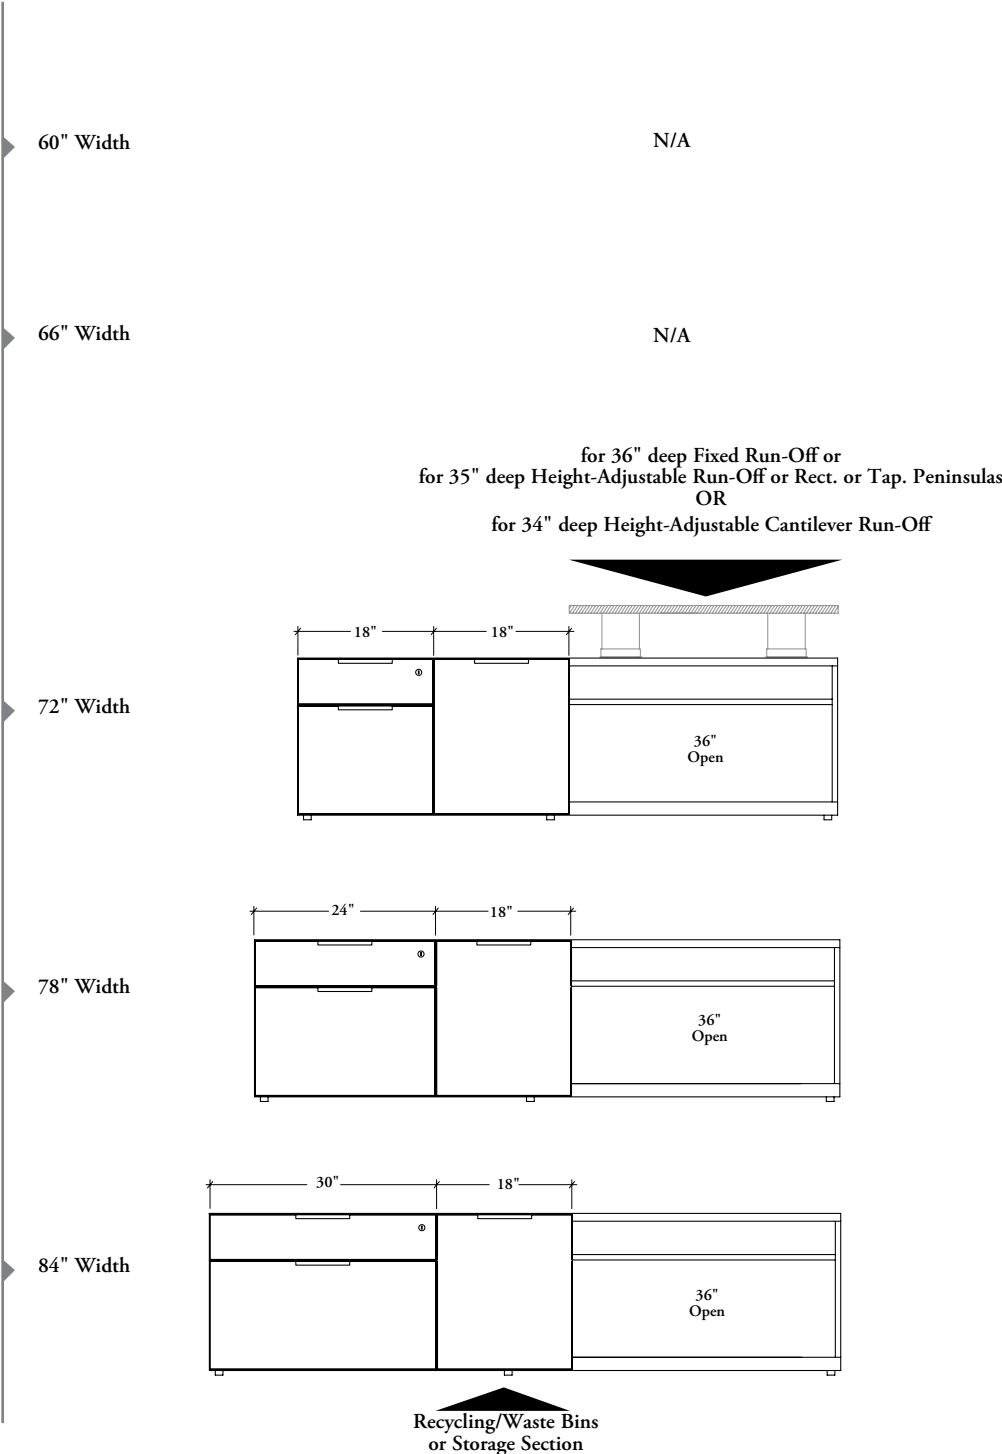

# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza with open & combo – fixed-worksurface – mid – 21" h (BSMCFW) or  
workwall credenza with open & combo – height-adjustable peninsula – mid – 21" h (BSMHCP)


Only Drawers on Left (L) is shown

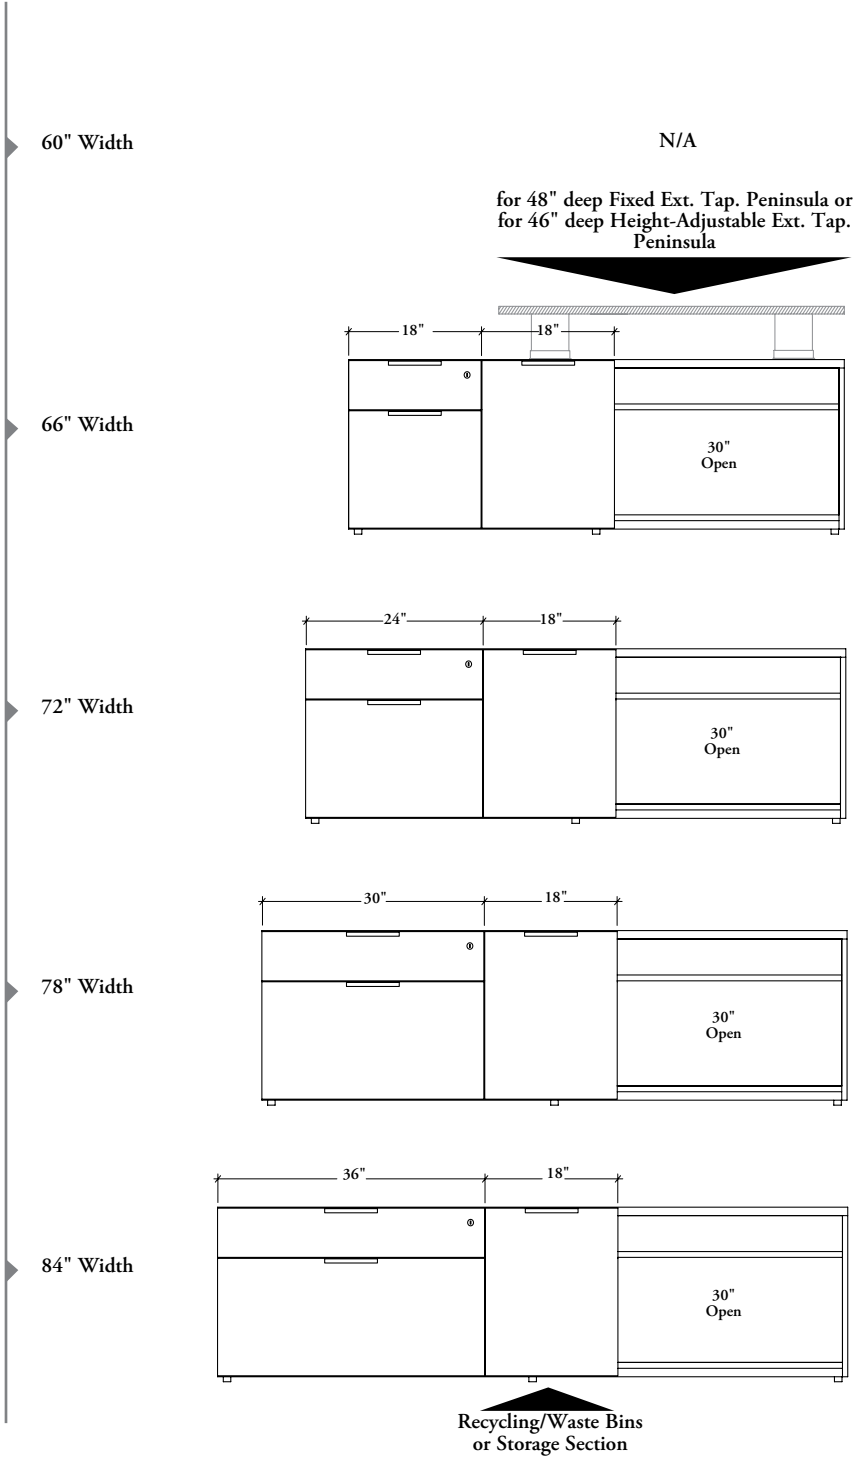

# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza with open & combo – fixed-worksurface – mid – 21" h (BSMCFW) or  
workwall credenza with open & combo – height-adjustable peninsula – mid – 21" h (BSMHCP)

Only Drawers on Left (L) is showned

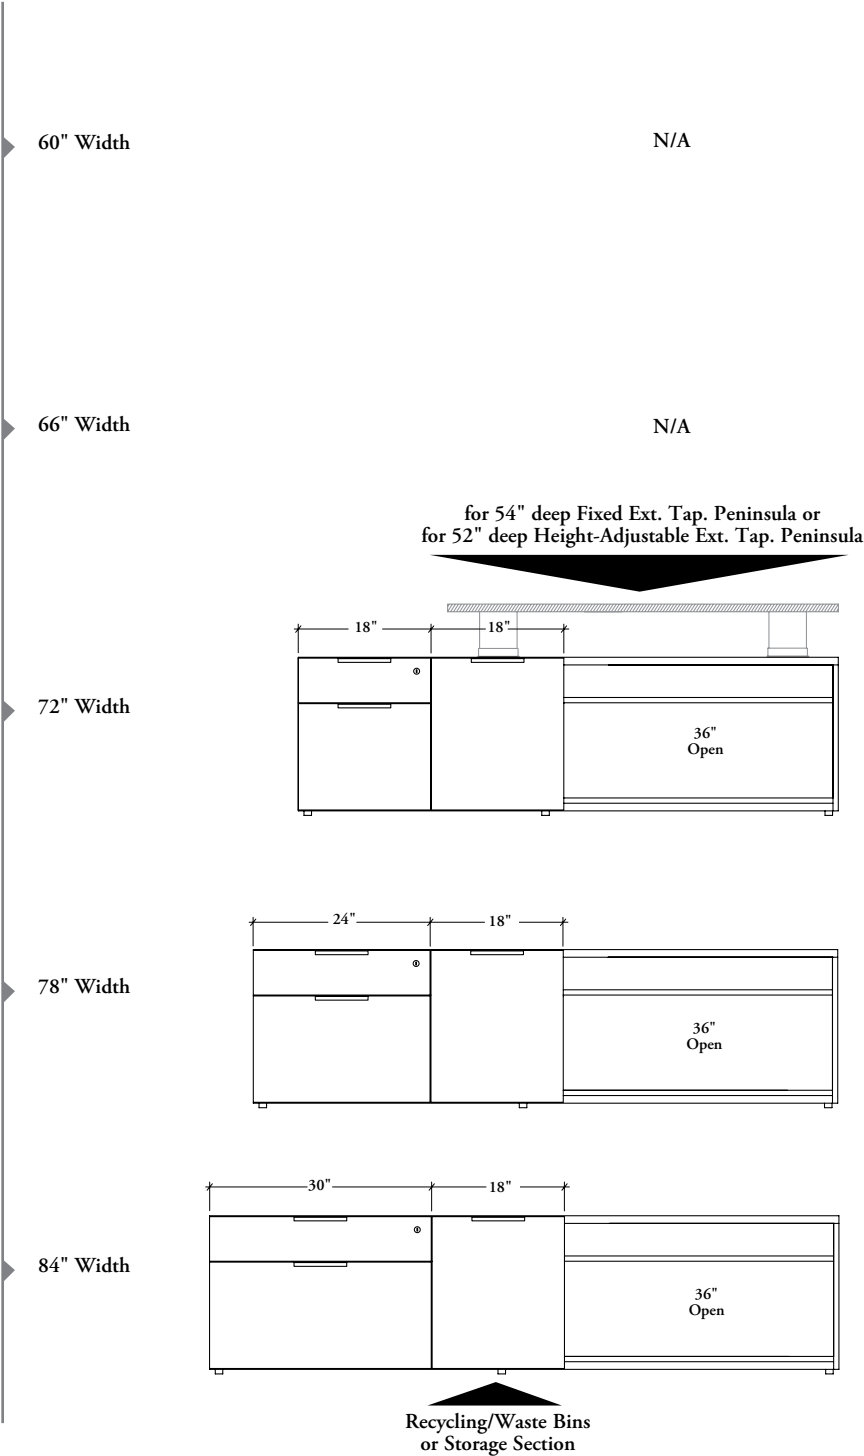





# workwall credenzas for fixed or height-adjustable worksurfaces – drawer widths (continued)

workwall credenza for media with open & drawers – mid – 21" h (BSMDOD)


48" Width

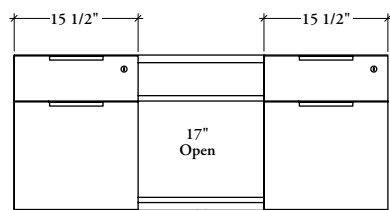


54" Width

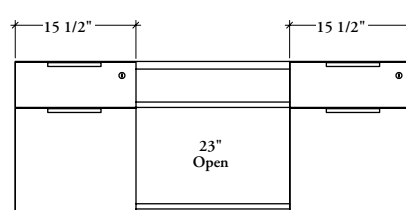


60" Width

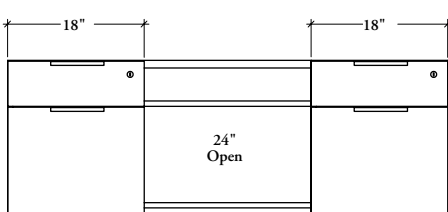


66" Width

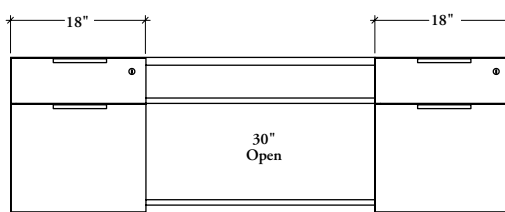


72" Width

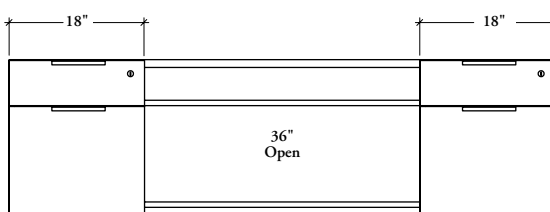

78" Width

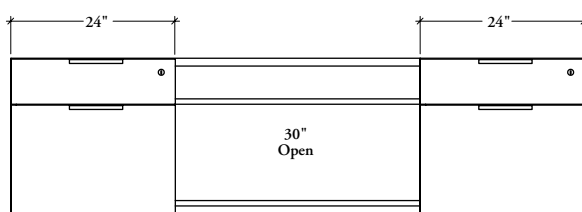

84" Width

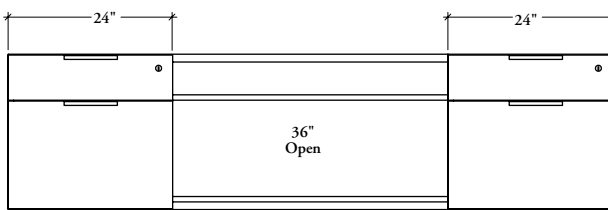


- Comes with one Box & File Drawers on both ends
- Includes one Open Central Section

# interior clearance – workwall credenza – mid –21" h


The following outline the interior clearance available for all mid-height Workwall Bookcases.

## interior height clearance

- The open section features holes at 1 1/4" intervals on the interior walls, allowing for convenient adjustment of shelf height
- The following height dimension listed below are available for all mid-height Workwall Credenzas and Mid-Height Credenza (BSMFL) of the Freestanding Storage & Accessories section


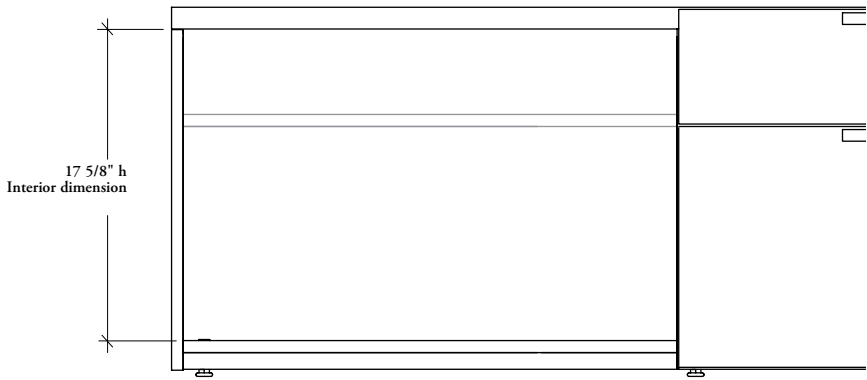


## interior depth clearance (20" deep shown)

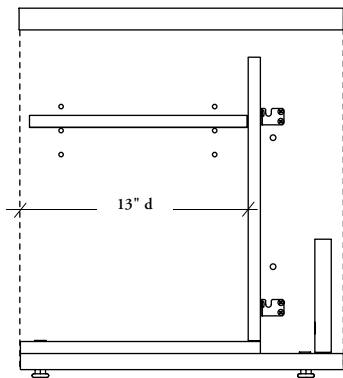

## drawer depths

All mid-height Workwall Credenzas with drawers feature 12" deep Box Drawer and 15" deep File Drawer. Only exceptions are 48" or 54" wide Workwall Credenza for Media with Open and Drawers – Mid – 21" h (BSMDOD) which feature 15" deep Box Drawer

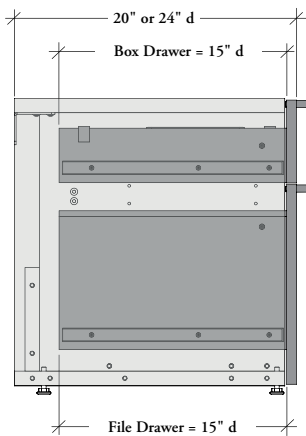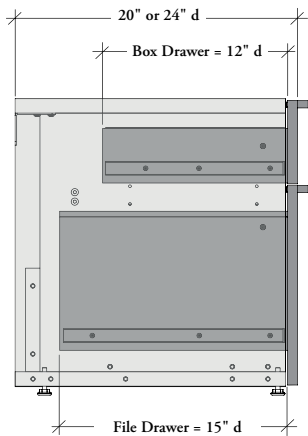




# filing drawer capacities – workwall credenzas – mid – 21" h for fixed or height-adjustable worksurfaces

Lateral file drawer mid-height Workwall Credenzas capacities are shown below.

❗ The dimensions listed below are inside drawer



\* The Letter or A4 paper size is allowed but require optional Hanging File Bar (RSLB)

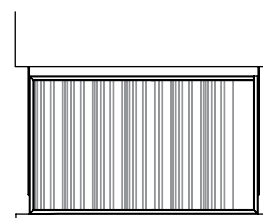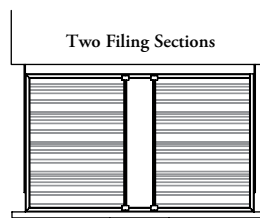
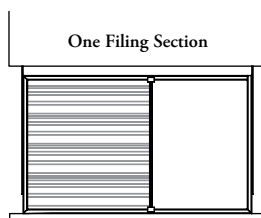


Front-to-Back

Front-to-Back


Side-to-Side

15 1/2" wide drawer

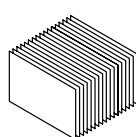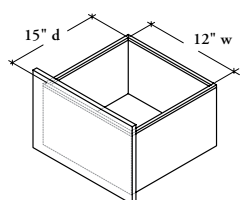

**Paper Sizes Allowed:**



- Letter
- A4

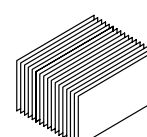

**Paper Size Allowed:**


- Legal

18" wide drawer

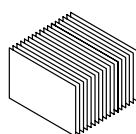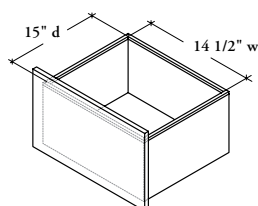

**Paper Sizes Allowed:**



- Letter
- A4

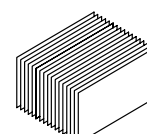

**Paper Size Allowed:**


- Legal

24" wide drawer

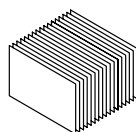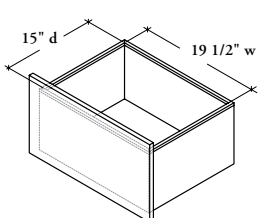

**Paper Sizes Allowed:**



- Letter
- A4
- Legal

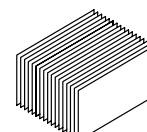

**Paper Sizes Allowed:**


- Letter\*
- A4\*
- Legal

30" wide drawer

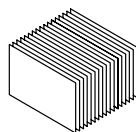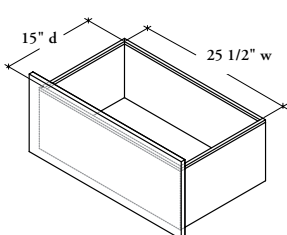


**Paper Sizes Allowed:**

- A4
- Legal

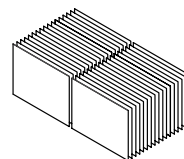

**Paper Size Allowed:**



- Letter

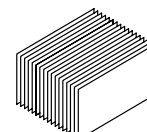

**Paper Sizes Allowed:**


- Letter\*
- A4\*
- Legal

36" wide drawer

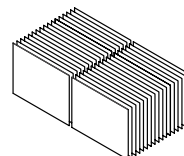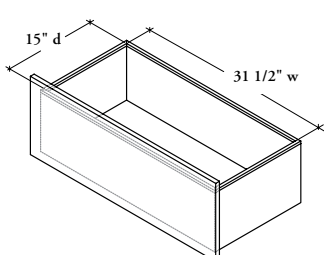

**Paper Sizes Allowed:**

- Letter
- A4
- Legal


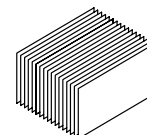


**Paper Sizes Allowed:**



- Letter\*
- A4\*
- Legal

## planning with workwall credenzas – mid – 21" h for fixed or height-adjustable worksurfaces

- ❗ Credenzas are configured based on worksurface style and dimension to ensure that drawers are **not** located underneath worksurface. For some configurations, the door of mid-height Workwall Credenza with Open and Combo – Fixed Worksurface (BSMCFW) or mid-height Workwall Credenza with Open and Combo – Height-Adjustability (BSMCHR (Shown) or BSMHCP) may be located underneath the worksurface
- For planning with a Workwall Credenza – Height-Adjustable Cantiliver Run-Off, refer to page 395

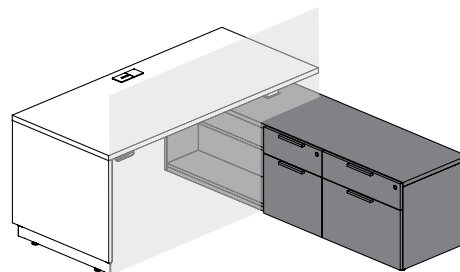
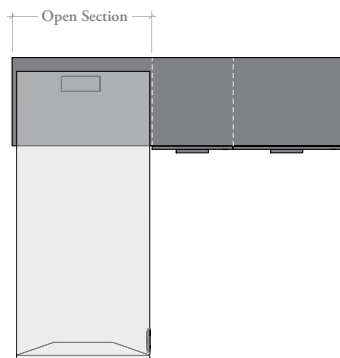


Fixed Extended Tapered Peninsula with Workwall Credenza with Open and Combo – Fixed Worksurface (BSMCFW) or Height-Adjustable Extended Tapered Peninsula with Workwall Credenza with Open and Combo – Height-Adjustability (BSMCHR or BSMHCP)

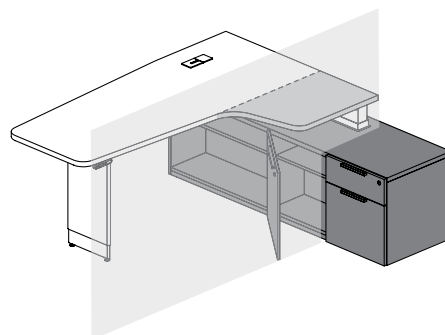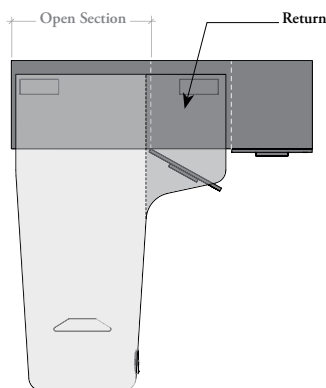

Recycling/Waste Bins or Storage section is located underneath worksurface

Height-Adjustable Peninsula with mid-height Workwall Credenza with Open and Combo – Height-Adjustable Peninsula (BSMHCP)

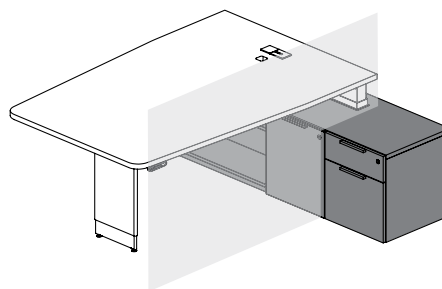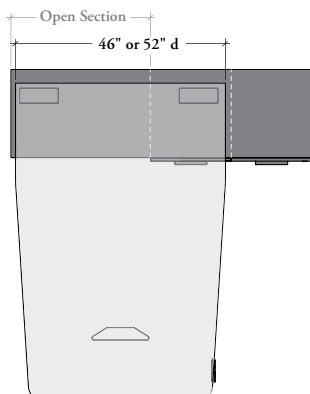


When a 46" or 52" deep Height-Adjustable Peninsula is specified above a mid-height Workwall Credenza with Open and Combo – Height-Adjustable Peninsula, the recycling/waste bins or storage section is **more difficult to access**, because the surface covered completely the storage access

# product offering – workwall storage


! All dimensions on this page are actual

## Workwall Module – Height-Adjustable Cantilever Run-Off (BHKHC)

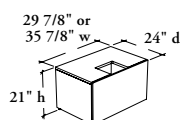


1 access panel

## Workwall Module – Fixed-Height Cantilever Run-Off (BHKFC)

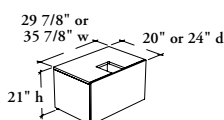


1 access panel

## Workwall Kneespace Module – Height-Adjustability (BHKHW)

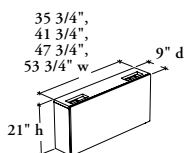


1 access panel

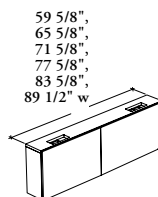


2 access panels

## Workwall Kneespace Module – Full-Modesty Height-Adjustable Run-Off (BHKHM)

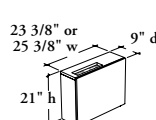


1 access panel, no extension panel




1 access panel, 1 extension panel

## Workwall Kneespace Module – Full-Modesty Height-Adjustable Extended or "L" Run-Off (BHKHL)

For 29" depth A




1 access panel, no extension panel

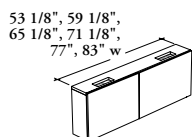


2 access panels, no extension panel

For 35" depth A




1 access panel, no extension panel

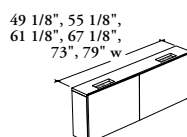


2 access panels, no extension panel

For 29" or 35" depth A




1 access panel, 1 extension panel

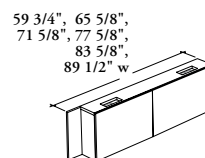


2 access panels, 1 extension panel

## Workwall Kneespace Module – Height-Adjustability and Fixed Worksurface (BHKHF)

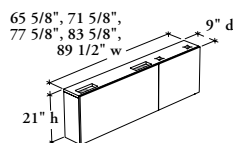


2 access panels

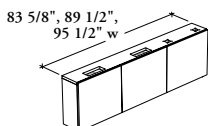


3 access panels

## Workwall Kneespace Module – Fixed Worksurface (BHKFW)

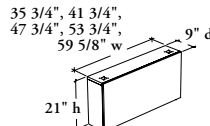

1 access panel

## Workwall Kneespace Module – Full-Modesty Fixed Run-Off (BHKFR)

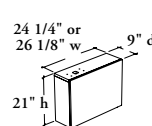


1 access panel, no extension panel




1 access panel, 1 extension panel

## Workwall Bookcase – Mid – 21" h (BSMO)

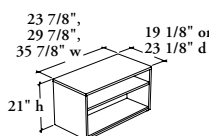


1 adjustable shelf

41 3/4", 47 3/4", 53 3/4", 59 5/8", 65 5/8", 71 5/8" w

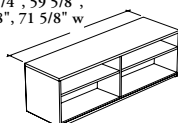


2 adjustable shelves

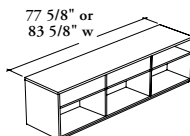


3 adjustable shelves

## Workwall Bookcase – Fixed Worksurface – Mid – 21" h (BSMOBW)



1 adjustable shelf

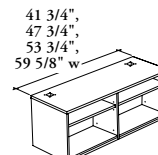


2 adjustable shelves


## product offering – workwall storage (continued)

! All dimensions on this page are actual


**Workwall Bookcase – Height-Adjustable Worksurface – Mid – 21" h (BSMOBH)**

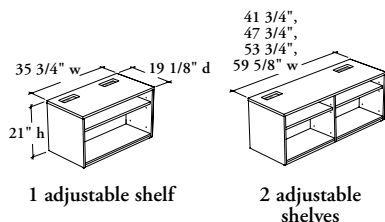


**Workwall Bookcase – Integral Top – 29" h (BSOBT)**

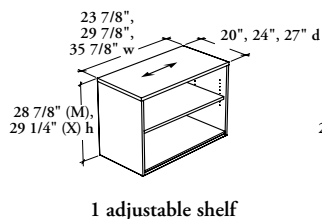


**Workwall Bookcase – Integral Top – 29" h – Cross Grain (BSOBC)**

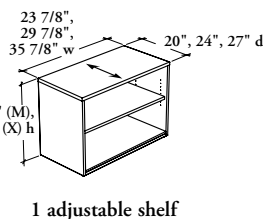


**Workwall Cabinet – Mid – 21" h – (BSMD)**

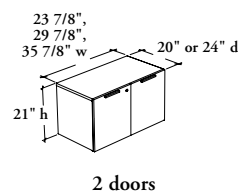


**Workwall Cabinet – Integral Top – 29" h (BSCT)**

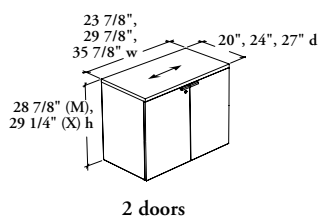


**Workwall Cabinet – Integral Top – 29" h – Cross Grain (BSDC)**

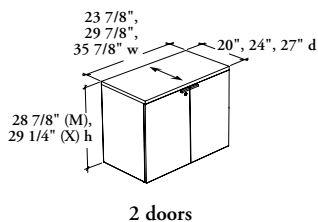



**Workwall Lateral Files – Integral Top – 29" h (BSLFT)**

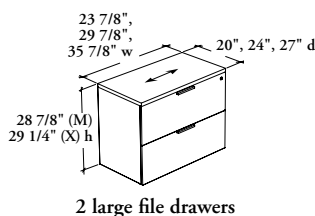


**Workwall Lateral Files – Integral Top – 29" h – Cross Grain (BSLFC)**

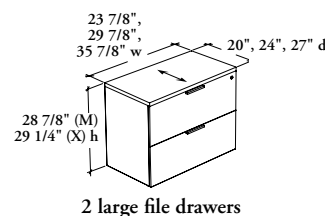


**Workwall Stretch Pedestal – Mid – 21" h (BSMSSP)**

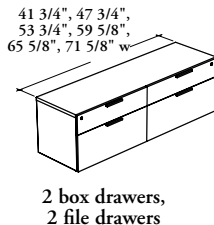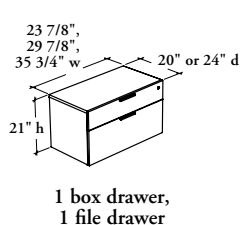



**Workwall Stretch Pedestal – Integral Top – 29" h (BSPT)**

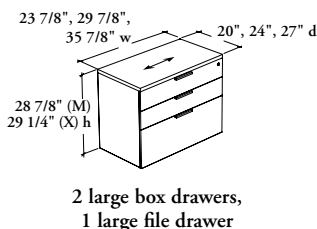



**Workwall Stretch Pedestal – Integral Top – 29" h – Cross Grain (BSPC)**

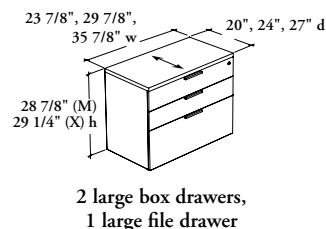

**Workwall Credenza with Cabinet and Drawers – Mid – 21" h (BSMCD)**

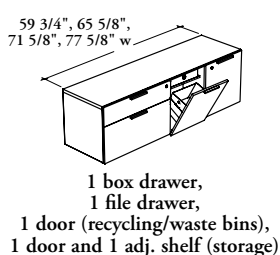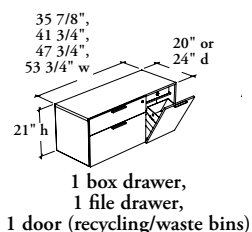


**Workwall Credenza with Open and Drawers – Mid – 21" h (BSMOD)**

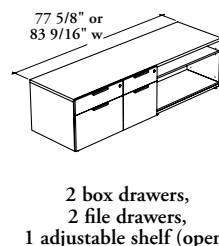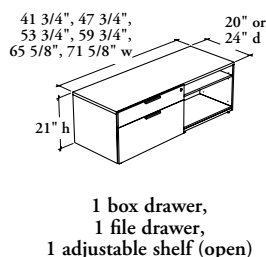


# product offering – workwall storage (continued)

❗ All dimensions on this page are actual

## Workwall Credenza with Open and Drawers – Fixed Worksurface – Mid – 21" h (BSMWL)

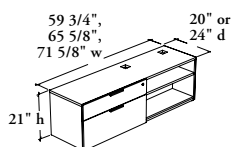


1 box drawer,  
1 file drawer,  
1 adjustable shelf (open)

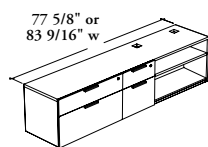


2 box drawers,  
2 file drawers,  
1 adjustable shelf (open)

## Workwall Credenza with Open and Drawers – Height-Adjustable Run-Off – Mid – 21" h (BSMHLR)

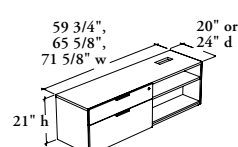


1 box drawer,  
1 file drawer,  
1 adjustable shelf (open)

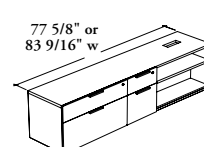


2 box drawers,  
2 file drawers,  
1 adjustable shelf (open)

## Workwall Credenza with Open and Drawers – Height-Adjustable Peninsula – Mid – 21" h (BSMHDP)

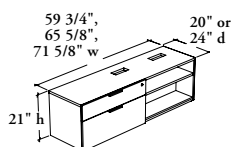


1 box drawer,  
1 file drawer,  
1 adjustable shelf (open)

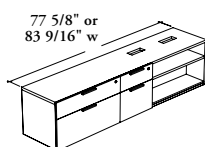


2 box drawers,  
2 file drawers,  
1 adjustable shelf (open)

## Workwall Credenza with Open and Combo – Fixed Worksurface – Mid – 21" h (BSMCFW)

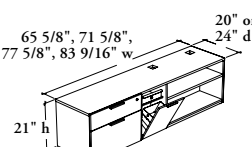


1 box drawer,  
1 file drawer,  
1 door (recycling/waste bins),  
1 adjustable shelf (open)

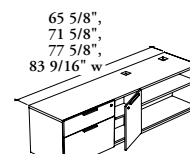


1 box drawer,  
1 file drawer,  
1 door and 1 adj. shelf (storage),  
1 adjustable shelf (open)

## Workwall Credenza with Open and Combo – Height-Adjustable Run-Off – Mid – 21" h (BSMCHR)

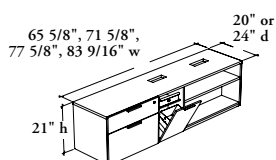


1 box drawer,  
1 file drawer,  
1 door (recycling/waste bins),  
1 adjustable shelf (open)

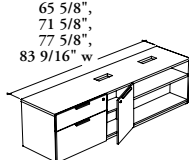


1 box drawer,  
1 file drawer,  
1 door and 1 adj. shelf (storage),  
1 adjustable shelf (open)

## Workwall Credenza with Open and Combo – Height-Adjustable Peninsula – Mid – 21" h (BSMHCP)

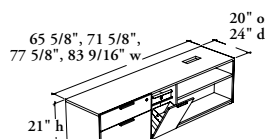


1 box drawer,  
1 file drawer,  
1 door (recycling/waste bins),  
1 adjustable shelf (open)

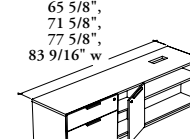


1 box drawer,  
1 file drawer,  
1 door and 1 adj. shelf (storage),  
1 adjustable shelf (open)

## Workwall Credenza with Drawers – Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMCHC)

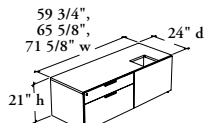


1 box drawer,  
1 file drawer,  
1 access panel

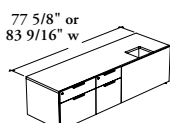


2 box drawers,  
2 file drawers,  
1 access panel

## Workwall Credenza with Drawers and Cabinet – Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMHLC)

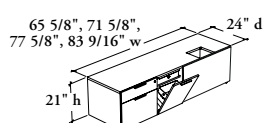


1 box drawer,  
1 file drawer,  
1 door (recycling/waste bins),  
1 access panel

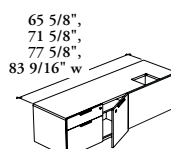

1 box drawer,  
1 file drawer,  
1 door and 1 adj. shelf (storage),  
1 access panel

## Workwall Credenza for Media with Open and Drawers – Mid – 21" h (BSMDOD)

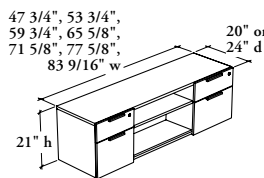


2 box drawers,  
2 file drawers,  
1 adjustable shelf (open)

## lock chart – workwall storage

❗ If specified, all closed storage products come with a lock and key set and can be keyed alike or randomly. A Key Chart must accompany every order, otherwise orders will be shipped keyed randomly


Workwall Cabinet – Mid – 21" h (BSMD)



number of  
locks


1 x

Workwall Cabinet – Integral Top – 29" h (BSCT)  
or Workwall Cabinet – Integral Top – 29" h – Cross  
Grain (BSDC)

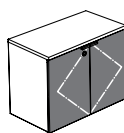


1 x

Workwall Lateral Files – Integral Top – 29" h  
(BSLFT) or Workwall Lateral Files – Integral  
Top – 29" h – Cross Grain (BSLFC)

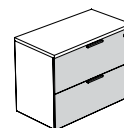


1 x

Workwall Stretch Pedestal – Mid – 21" h (BSMSSP)



OR

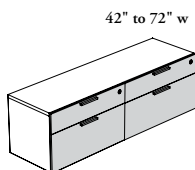


number of  
locks

1 x


2 x

Workwall Stretch Pedestal – Integral Top – 29" h (BSPT) or  
Workwall Stretch Pedestal – Integral Top – 29" h –  
Cross Grain (BSPC)

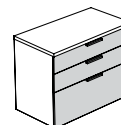


1 x

Workwall Credenza with Cabinet and Drawers – Mid – 21" h (BSMCD)

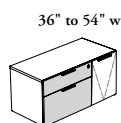


Drawers on Left

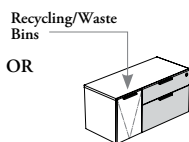


Drawers on Right

number of  
locks

1 x

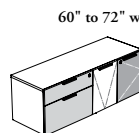


Drawers on Left

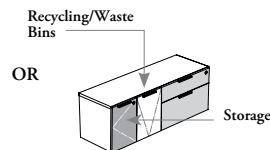

Drawers on Right


2 x

Workwall Credenza with Open and Drawers – Mid – 21" h (BSMOD)

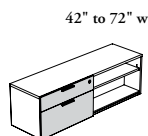

Drawers on Left


OR



Drawers on Right


number of  
locks

1 x

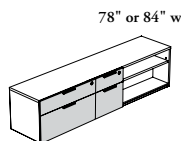


Drawers on Left

OR



Drawers on Right

2 x



Lockable Single Door



Lockable Drawers



Not Lockable




## lock chart – workwall storage (continued)


### Workwall Credenza with Open and Drawers – Fixed Worksurface – Mid – 21" h (BSMWL)

Available for 60", 66" or 72" widths

Available for 78" or 84" widths




OR




Work. on Left

Work. on Right



OR



Work. on Left


Work. on Right

number of locks	1 x	2 x
-----------------	-----	-----


### Workwall Credenza with Open and Drawers – Height-Adjustable Run-Off – Mid – 21" h (BSMHLR) or Workwall Credenza with Open and Drawers – Height-Adjustable Peninsula – Mid – 21" h (BSMHDP)

Available for 60", 66" or 72" widths

Available for 78" or 84" widths




OR




Work. on Left

Work. on Right



OR



Work. on Left



Work. on Right

number of locks	1 x	2 x
-----------------	-----	-----

### Workwall Credenza with Open and Combo – Fixed Worksurface – Mid – 21" h (BSMCFW)

Available for 66", 72", 78" or 84" widths

Recycling/Waste Bins

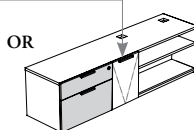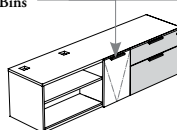



OR

Work. on Left

Work. on Right

Available for 66", 72", 78" or 84" widths

Storage

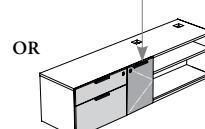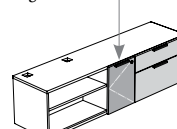

OR

Work. on Left


Work. on Right

number of locks	1 x	2 x
-----------------	-----	-----


### Workwall Credenza with Open Combo – Height-Adjustable Run-Off – Mid – 21" h (BSMCHR) or Workwall Credenza with Open Combo – Height-Adjustable Peninsula – Mid – 21" h (BSMHCP)

Available for 66", 72", 78" or 84" widths

Recycling/Waste Bins



OR




Work. on Left


Work. on Right

Available for 66", 72", 78" or 84" widths

Storage

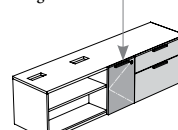

OR

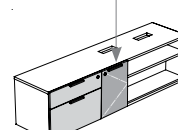

Work. on Left

Work. on Right

number of locks	1 x	2 x
-----------------	-----	-----



Lockable Single Door



Lockable Drawers



Not Lockable


application guide

lock chart – workwall storage (continued)

Workwall Credenza with Drawers – Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMCHC)

Available for 60", 66" or 72" widths


Available for 78" or 84" widths

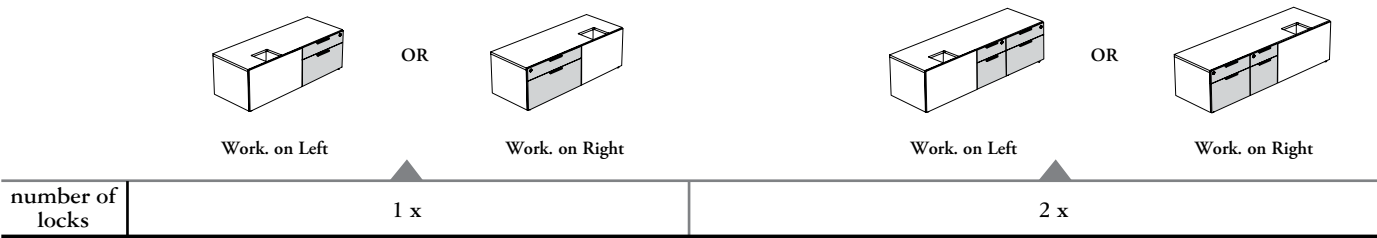


Workwall Credenza with Drawers and Cabinet – Height-Adjustable Cantilever Run-Off – Mid – 21" h (BSMHLC)

Available for 66", 72", 78" or 84" widths

Available for 66", 72", 78" or 84" widths

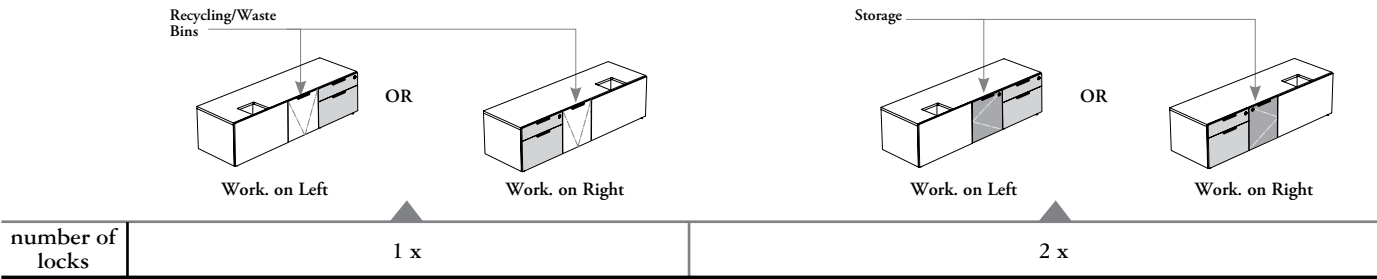

Workwall Credenza for Media with Open and Drawers – Mid – 21" h (BSMDOD)



number of locks	2 x
-----------------	-----

Lockable Single Door



Lockable Drawers

Not Lockable

## connecting devices – workwall storage


The following outline the connecting devices available for all mid-height Workwall Storage.

- All Workwall Storage can be connected **together** and with Freestanding Towers or Stretch Pedestal of the Freestanding Storage & Accessories section
- This supplied hardware ensures a perfect installation
- Can only be connected with following Freestanding Storage:

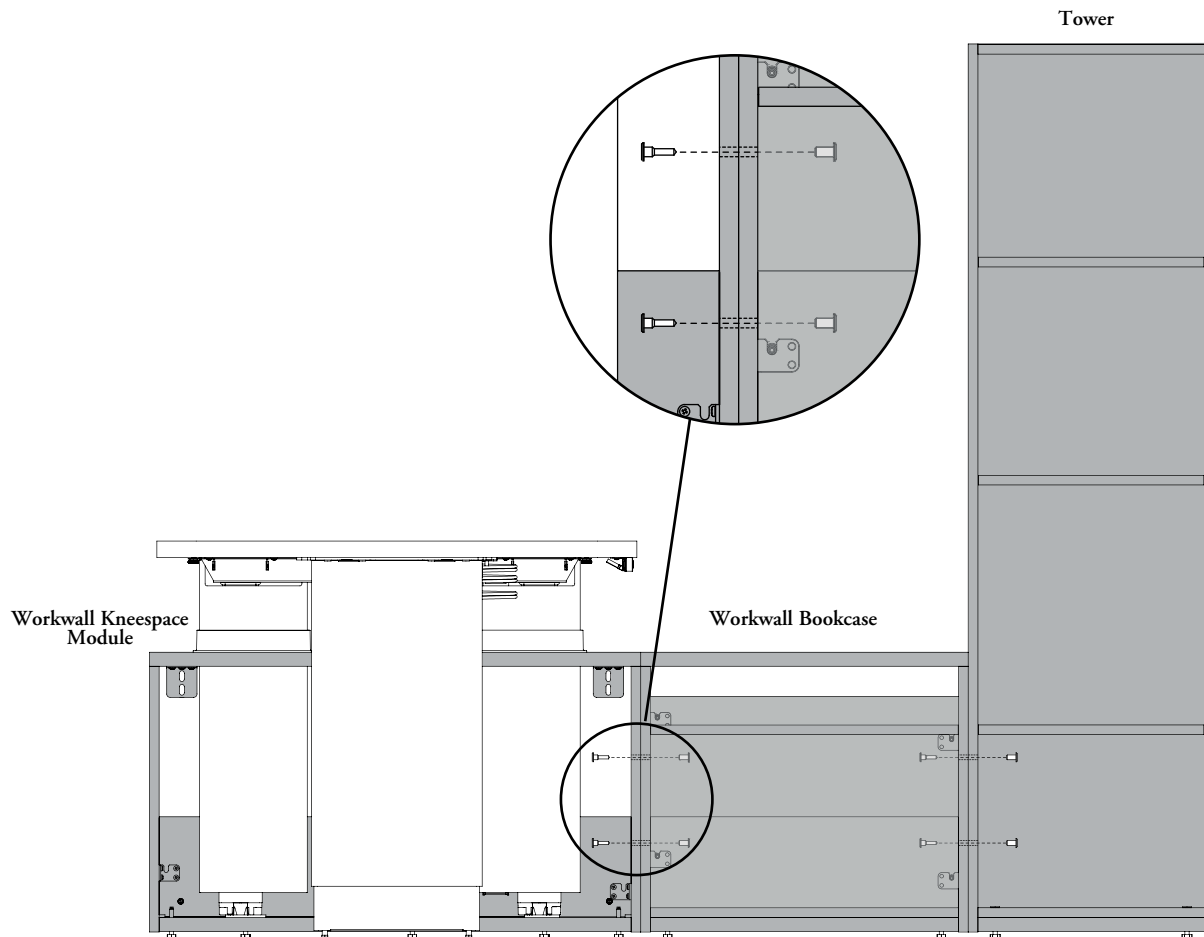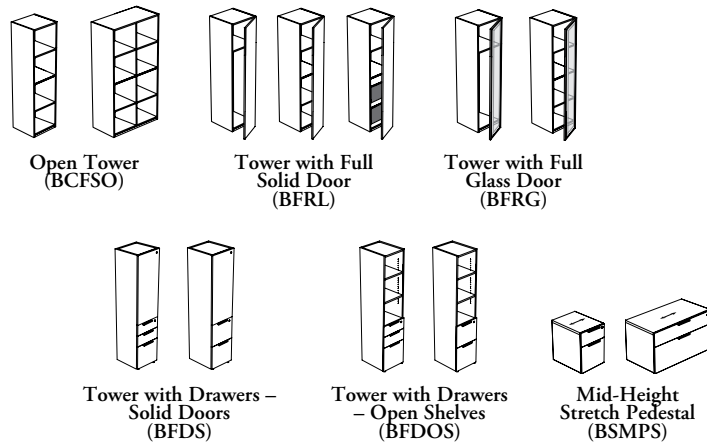

## workwall storage finishes


❗ For an overview of which products are offered in Flintwood finishes, refer to the Expansion Casegoods product map on Teknion's website

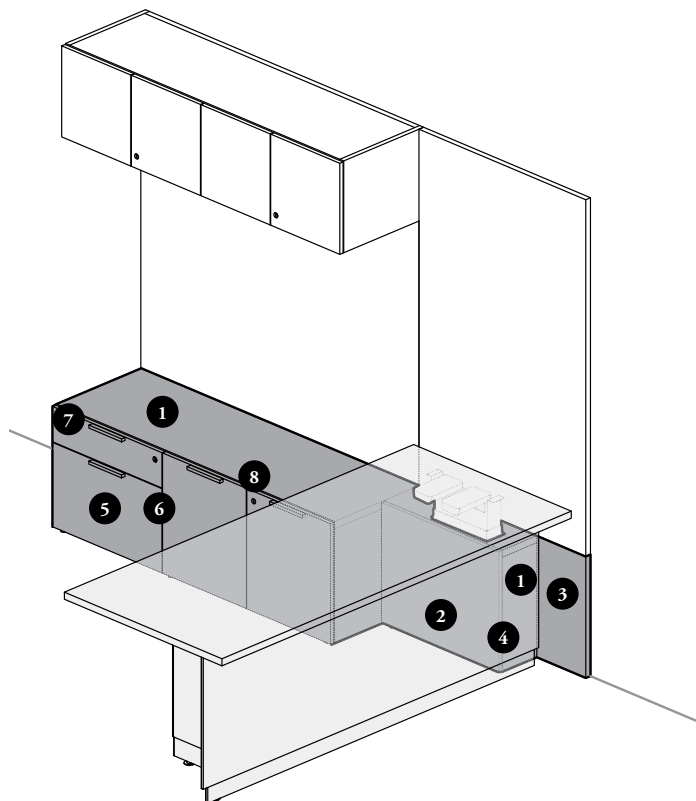

### workwall credenzas, kneespace modules & cantilever modules finishes

- |   |   |
|---|---|
| <p><b>1 Case</b><br/>Finishes:</p> <ul style="list-style-type: none"> <li>– Source Laminate</li> <li>– Flintwood (No Cathedral)</li> </ul>  | <p><b>5 Drawer and Door Fronts</b><br/>Finishes:</p> <ul style="list-style-type: none"> <li>– Source Laminate</li> <li>– Grade 2 Laminate (No Accents)</li> <li>– Flintwood (No Cathedral)</li> </ul> |
| <p><b>2 Panel and/or 3 Extension Panel Front</b><br/>Finishes:</p> <ul style="list-style-type: none"> <li>– Source Laminate</li> <li>– Grade 2 Laminate (No Accents)</li> <li>– Flintwood (No Cathedral)</li> </ul> | <p><b>6 Edge Trim Drawer and Door Fronts</b><br/>Finish:</p> <ul style="list-style-type: none"> <li>– Edge trim finish on door and drawer front always match door and drawer front finish</li> </ul>  |
| <p><b>4 Edge Trim Front</b><br/>Finishes:</p> <ul style="list-style-type: none"> <li>– Edge Trim Colors (Laminate Front only)</li> </ul>  | <p><b>7 Pull</b><br/>Finish:</p> <ul style="list-style-type: none"> <li>– Foundation</li> <li>– Mica</li> <li>• Hardware will match Pull finish if visible</li> </ul>                                 |
|   | <p><b>8 Lock &amp; Key</b><br/>Finish:</p> <ul style="list-style-type: none"> <li>– Brushed Chrome</li> </ul>   |

# workwall storage finishes (continued)

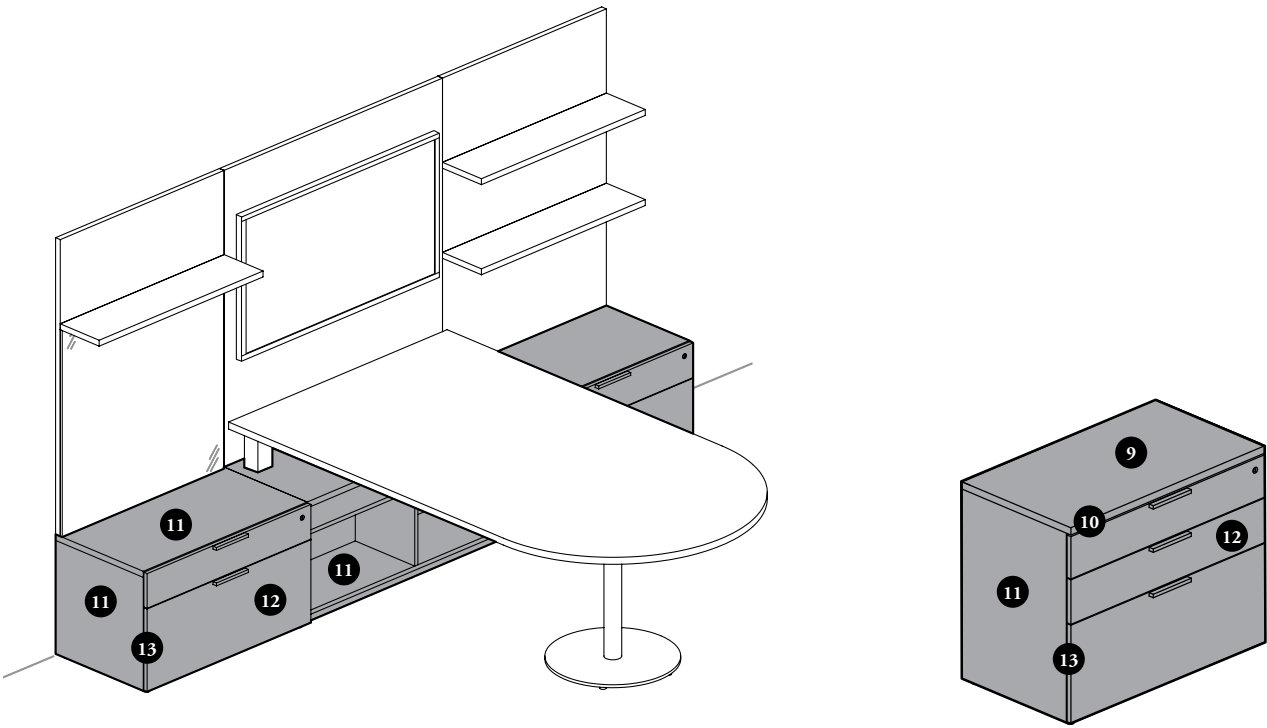

## all other workwall storage finishes (Workwall Bookcases, Cabinets, Lateral Files & Stretch Pedestals)

Other finish restrictions apply when a Finish Configuration (L, T, U, V or W) is specified. Refer to the individual product pages for more details

**9 Integral Top (If Applicable)**

**Finishes:**

- Foundation Laminate
- Grade 2 Laminate (No Accents)
- Flintwood (No Cathedral)

**10 Integral Top Edge Trim (If Applicable)**

**Edge Trim Styles:**

- Straight Trim (3mm) (6)
- Flat Trim (1.5mm) (8)
- Flintwood Flat Trim (9)

**Integral Top finish restrictions:**

Worksurface Thickness	Top Finish	Edge Trim Style	Edge Trim Finish
M 1 3/16"	Foundation Laminate	6 or 8	Edge Trim Colors*
	Gr. 2 Lam. (No Accents)	8	Edge Trim Colors
	Flintwood (No Cathedral)	9	Match the surface color
X 1 9/16"	Foundation Laminate**	6	Edge Trim Colors**
	Flintwood (No Cathedral)	9	Match the surface color

\* Except Black Matte, Baltic Ply, Clay Matte and Fossil Matte for Edge Trim Style (6) only

\*\* Storm White, Very White, Crisp Grey, Soft Gris or Wood Prints only

**11 Case**

**Finishes:**

- Source Laminate
- Flintwood (No Cathedral)

**12 Drawer and Door Fronts**

**Finishes:**

- Source Laminate
- Grade 2 Laminate (No Accents)
- Flintwood (No Cathedral)

**13 Drawer and/or Door Edge Trim**



**Finishes:**

- Edge Trim finish on drawer and/or door front always match drawer and/or door front finish

## grain direction – workwall storage

### workwall storage

Door and drawer fronts grain direction will always be vertical


Laminate =  = Grain Direction = 

#### Cathedral Grain Pattern:

Source Laminate

- 3A – 3B – 3C – 3D – 3E – 3L – 3M – 3X – 8E – 8R – 8S – XQ – XR – 86 – 87 – 88

For colors listed above, the Cathedral Grain Pattern for door and drawer fronts will be book-matched

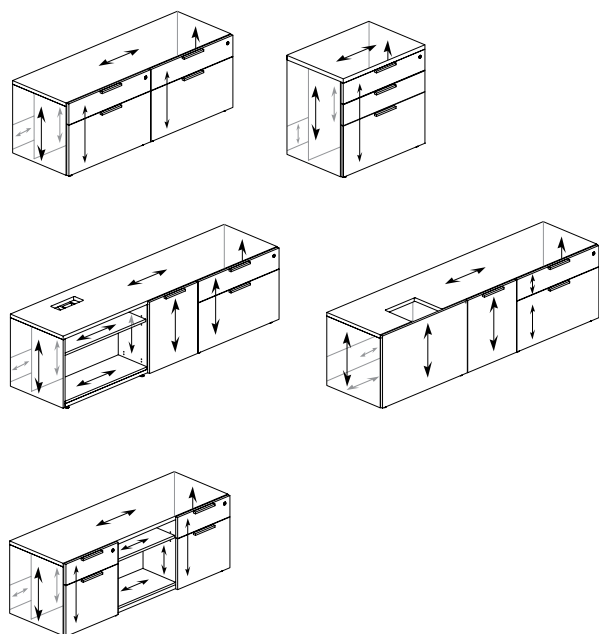

#### Straight Grain Pattern:


Source Laminate

- 3F – 3K – XJ


Flintwood

- FC – FD – FM – FN – FX – NR – NT – VA – VB – VZ – 5N – 5P – 5Q – 5R – 5S – 5T – 5V – 5W – 5Z

For colors listed above, the Straight Grain Pattern for door and drawer fronts will be vertical

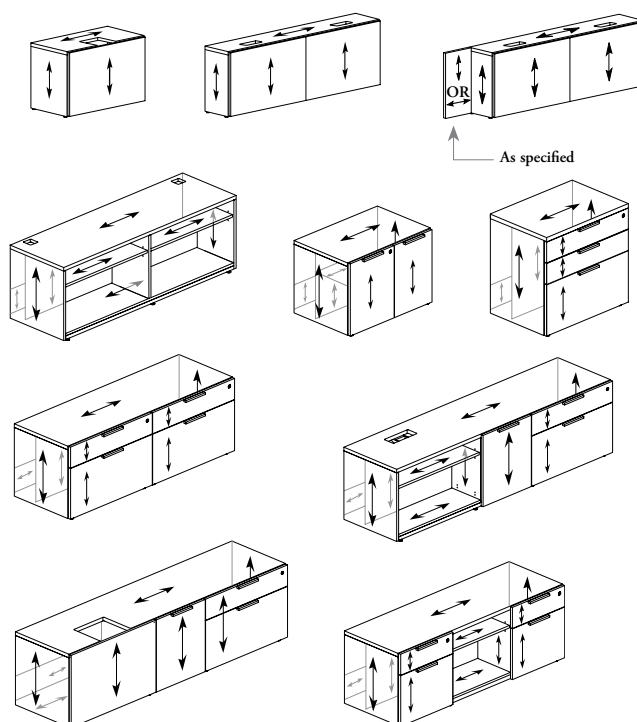

### flintwood surface grain/pattern direction

Flintwood =  = Grain Direction = 